

# User Manual

24HFL3014  
32HFL3014  
43HFL3014  
50HFL3014

**PHILIPS**

---

# Contents

<b>1 TV Tour</b>	<b>3</b>
1.1 Professional Mode	3
<b>2 Setting Up</b>	<b>4</b>
2.1 Read Safety	4
2.2 TV Stand and Wall Mounting	4
<b>3 Remote Control</b>	<b>6</b>
3.1 Key overview	6
3.2 IR Sensor	6
3.3 Batteries	7
3.4 Cleaning	7
<b>4 Switching On and Off</b>	<b>8</b>
4.1 On or Standby	8
4.2 Keys on TV	8
<b>5 Specifications</b>	<b>9</b>
5.1 Environmental	9
5.2 Power	9
5.3 Reception	9
5.4 Display Type	10
5.5 Display Input Resolution	10
5.6 Connectivity	10
5.7 Dimensions and Weights	10
5.8 Sound	10
<b>6 Connect Devices</b>	<b>12</b>
6.1 Connect Devices	12
6.2 CAM with Smart Card - CI+	13
6.3 Receiver - Set-Top Box	14
6.4 Home Theatre System - HTS	14
6.5 Blu-ray Disc Player	14
6.6 Headphones	15
6.7 USB Flash Drive	15
6.8 Computer	15
<b>7 Videos, Photos and Music</b>	<b>17</b>
7.1 From a USB Connection	17
7.2 Play your Videos	17
7.3 View your Photos	17
7.4 Play your Music	18
<b>8 TV Guide</b>	<b>20</b>
8.1 Using the TV Guide	20
<b>9 Home Screen</b>	<b>21</b>
9.1 About the Home screen	21
9.2 Open the Home screen	21
9.3 Channels	21
9.4 Sources	21
9.5 Features	22
9.6 Settings	22
<b>10 Consumer TV Home Screen</b>	<b>23</b>
10.1 About the consumer TV Home Screen	23
10.2 Open the consumer TV Home Screen	23
10.3 Language	23
10.4 Channels	23
10.5 Sources	25
10.6 Utilities	25
10.7 Quick Settings and All Settings	26
10.8 All Settings	26
<b>11 Open Source</b>	<b>33</b>
11.1 Open Source Software	33
11.2 Open Source License	33
<b>12 Help and Support</b>	<b>36</b>
12.1 On-line Help	36
12.2 Support and Repair	36
<b>13 Safety and Care</b>	<b>37</b>
13.1 Safety	37
13.2 Screen Care	38
<b>14 Terms of Use</b>	<b>39</b>
<b>15 Health Care Facility Apparatus</b>	<b>40</b>
<b>16 Copyrights</b>	<b>41</b>
16.1 HDMI	41
16.2 Dolby Audio	41
16.3 DTS 2.0 + Digital Out™	41
16.4 Other Trademarks	41
<b>Index</b>	<b>42</b>

# TV Tour

---

## Professional Mode

---

### What you can do

In Professional Mode ON, you can have access to a large number of expert settings that enable advanced control of the TV's state or to add additional functions.

This mode is intended for installations of TV's in places such as hotels, cruise ships, stadia or any other business area where such control is required.

If you use the TV at home, it is recommended to use it in Professional Mode OFF.

Please consult the Professional installation manual for further details.

---

## Enter or Enable Hotel TV Home Menu

### Enable Hotel TV Mode

The Hotel TV Mode will be already set to On for Hotel guests.

To change the setting:

- 1 - In the professional mode menu, select **Professional Settings menu** and press **OK**.
- 2 - Select **Professional settings > Professional mode > On**, and press **OK**:
  - **On**: Switch on professional mode. Hospitality features are enabled.
  - **Off**: Switch off professional mode. The TV operates as a normal consumer TV.

(For professional mode information, please refer to Installation manual.)

# Setting Up

## 2.1

### Read Safety

Read the safety instructions first before you use the TV.

## 2.2

### TV Stand and Wall Mounting

#### TV Stand

 
You can find the instructions for mounting the TV stand in the Quick Start Guide that came with the TV. In case you lost this guide, you can download it from [www.philips.com](http://www.philips.com).

Use the product type number of the TV to look for the Quick Start Guide to download.

#### Wall Mounting

Your TV is also prepared for a VESA-compliant wall mount bracket (sold separately).

Use the following VESA code when purchasing the wall mount . . .

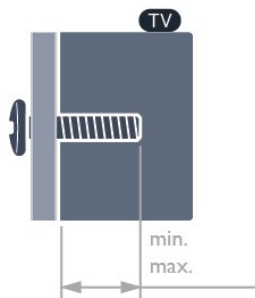

- 24HFL3014  
VESA MIS-F 75x75, M4 (min.: 8mm, max.: 10mm)
- 32HFL3014  
VESA MIS-F 100, M6 (min.: 10mm, max.: 14mm)
- 43HFL3014  
VESA MIS-F 200x200, M6 (min.: 12mm, max.: 16mm)
- 50HFL3014  
VESA MIS-F 200x200, M6 (min.: 10mm, max.: 14mm)

#### Caution

 
Wall mounting the TV requires special skills and should only be performed by qualified personnel. The TV wall mounting should meet safety standards according to the TV's weight. Also read the safety

precautions before positioning the TV.

TP Vision Europe B.V. bears no responsibility for improper mounting or any mounting that results in accident or injury.

#### Tips on Placement

- Position the TV where light does not shine directly on the screen.
- The ideal distance to watch TV is 3 times its diagonal screen size. When seated, your eyes should be level with the centre of the screen.
- When wall mounted, position the TV up to 15 cm away from the wall.

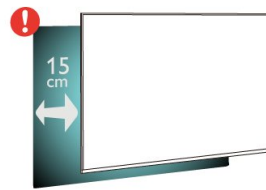


#### Note:

Please keep the TV away from dust-producing sources such as stoves. It is suggested to clean the dust regularly to avoid getting dust into the TV.

#### Power Cable

 - Insert the power cable into the **POWER** connector on the back of the TV.
- Make sure the power cable is securely inserted in the connector.
- Make sure that the power plug, in the wall socket, is accessible at all times.
- When you unplug the power cable, always pull the plug, never pull the cable.

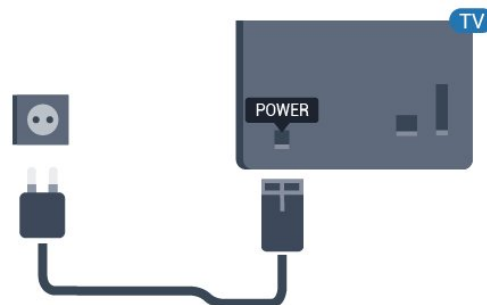


---

## Antenna Cable

 Insert the antenna plug firmly into the **Antenna** socket at the back of the TV.

You can connect your own antenna or an antenna signal from an antenna distribution system. Use an IEC Coax 75 Ohm RF antenna connector.


Use this antenna connection for DVB-T and DVB-C input signals.

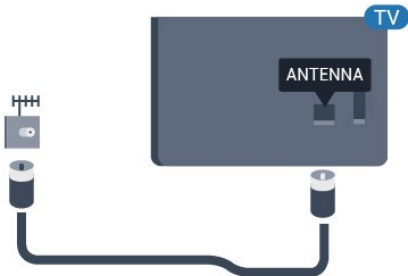

# Remote Control

## Key overview
 
### Top

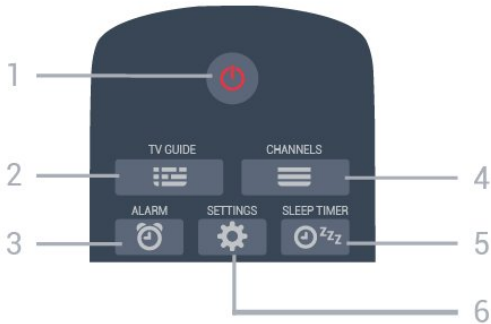

1 - Standby / On

To switch the TV on or back to Standby.

2 - TV GUIDE

To open or close the TV Guide.

3 - Alarm (Only in Professional Mode ON)

To set the alarm.

4 - Channel

To switch to the next or previous channel in the channel list.


5 - Sleep Timer

To set a sleep timer.

6 - SETTINGS (Only in Professional Mode ON)

To open the Quick settings menu.

### Middle

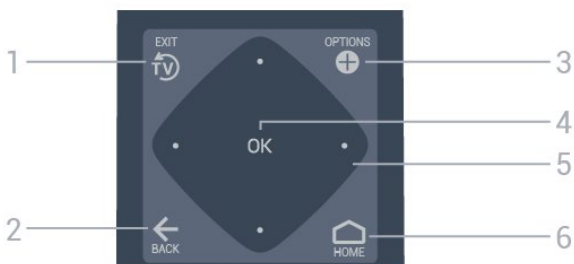 

1 - EXIT

To switch back to watching TV.

2 - BACK

• To switch back to the previous channel you selected.

• To return to previous menu.

3 - OPTIONS

To open or close the options menu.

4 - OK key

To confirm a selection or setting.


5 - navigation keys

To navigate up , down , left or right .

6 - Home

To open the Home menu.

### Bottom

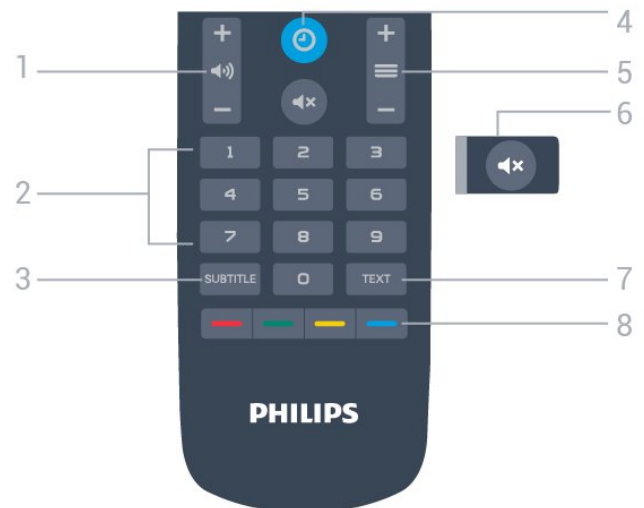 

1 - Volume

To adjust the volume level.

2 - Number keys

To select a channel directly.

3 - SUBTITLE

To switch Subtitles on, off or on during mute.

4 - CLOCK

To display the clock.

5 - Channel

To switch to the next or previous channel in the channel list.

6 - Mute

To mute the sound or to restore it.

7 - TEXT

To open or close Text/Teletext.

8 - Colour keys

Direct selection of options.

## IR Sensor

The TV can receive commands from a remote control that uses IR (infrared) to send commands. If you use such a remote control, always make sure you point the remote control at the infrared sensor on the front of the TV.

### **▲ Warning**

Do not put any objects in front of IR sensor of the TV, it may block the IR signal.

## Batteries

If the TV does not react on a key press on the remote control, the batteries might be empty.

To replace the batteries, open the battery compartment on the bottom side of the remote control.

1 - Slide the battery door in the direction shown by the arrow.

2 - Replace the old batteries with 2 type **AAA-R03-1.5V** batteries. Make sure the + and the - ends of the batteries line up correctly.

3 - Reposition the battery door and slide it back until it clicks.

- Remove the batteries if you are not using the remote control for a long time.
- Safely dispose of your old batteries according to the end of use directions.

## Cleaning

Your remote control is treated with a scratch-resistant coating.

To clean the remote control, use a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the remote control.



# Switching On and Off

## 4.1


### On or Standby

Make sure the TV is connected to the mains AC power. Connect the supplied power cord to the AC in connector at the back of the TV. The indicator light at the bottom of the TV lights up.

 
#### Switch on

Press  on the remote control to switch the TV on. Alternatively, press  Home. You can also press the small joystick key on the back of the TV (only available for 32" 43" 50") to switch the TV on in case you can't find the remote control or its batteries are empty.

#### Switch to standby

To switch the TV to standby, press  on the remote control. You can also press the small joystick key (only available for 32" 43" 50") or power button (24") on the back of the TV.

24" :

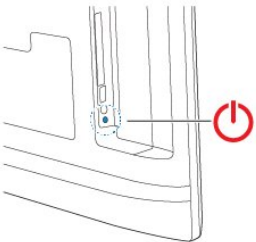

32" 43" 50" :



In standby mode, the TV is still connected to the mains power but consumes very little energy.

To switch off the TV completely, disconnect the power plug.

When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.



## 4.2

### Keys on TV

If you lost the remote control or its batteries are empty, you can still do some basic TV operations.

To open the basic menu...

1 - With the TV switched on, press the joystick key on the back of the TV (only available for 32" 43" 50") to bring up the basic menu.

2 - Press left or right to select  Volume,  Channel or  Sources.

3 - Press up or down to adjust the volume or tune to the next or previous channel. Press up or down to go through the list of sources, including the tuner selection. Press the joystick key to start the demo movie (only available for 32" 43" 50" while Professional mode is turned off).

4 - The menu will disappear automatically (only available for 32" 43" 50" while Professional mode is turned off).

To switch the TV on standby, select  and press the joystick key (only available for 32" 43" 50").





# Specifications

## 5.1

### Environmental

#### European Energy Label

##### Product Fiche

##### 24HFL3014

- Energy Efficiency Class : A+
- Visible Screen Size : 60 cm / 24 inch
- On Mode Power Consumption (W) : 18 W
- Annual Energy Consumption (kWh) \* : 27 kWh
- Standby Power Consumption (W) \*\* : 0.3 W
- Display Resolution (Pixels) : 1366 x 768

##### 32HFL3014

- Energy Efficiency Class : A+
- Visible Screen Size : 80 cm / 32 inch
- On Mode Power Consumption (W) : 28 W
- Annual Energy Consumption (kWh) \* : 41 kWh
- Standby Power Consumption (W) \*\* : 0.3 W
- Display Resolution (Pixels) : 1366 x 768

##### 43HFL3014

- Energy Efficiency Class : A++
- Visible Screen Size : 108 cm / 43 inch
- On Mode Power Consumption (W) : 34 W
- Annual Energy Consumption (kWh) \* : 50 kWh
- Standby Power Consumption (W) \*\* : 0.3 W
- Display Resolution (Pixels) : 1920 x 1080

##### 50HFL3014

- Energy Efficiency Class : A++
- Visible Screen Size : 126 cm / 50 inch
- On Mode Power Consumption (W) : 47 W
- Annual Energy Consumption (kWh) \* : 69 kWh
- Standby Power Consumption (W) \*\* : 0.3 W
- Display Resolution (Pixels) : 1920 x 1080

\* Energy consumption kWh per year, based on the power consumption of the television operating 4 hours per day for 365 days. The actual energy consumption depends on how the television is used.

\*\* When the TV is turned off with the remote control and no function is active.

## End of Use

### Disposal of your old product and batteries

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2012/19/EU.



Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.



Please find out for yourself about the local rules on separate collection of batteries because correct disposal will help to prevent negative consequences for the environment and human health.

## 5.2

### Power

Product specifications are subject to change without notice. For more specification details of this product, see [www.philips.com/support](http://www.philips.com/support)

#### Power

- Mains power : AC 220–240V +/-10%
- Ambient temperature : 5°C to 35°C
- Power saving features : Eco mode, Picture mute (for radio), Auto switch-off timer, Eco settings menu.

For power consumption information, see chapter **Product Fiche**.

## Reception

- Aerial input : 75 ohm coaxial (IEC75)
- Tuner bands : UHF, VHF
- DVB : DVB-T2, DVB-C (cable) QAM, DVB-T
- Analogue video playback : SECAM, PAL, NTSC
- Digital video playback : MPEG2 SD/HD (ISO/IEC 13818-2), MPEG4 SD/HD (ISO/IEC 14496-10), HEVC\*
- Digital audio playback (ISO/IEC 13818-3)
- Input frequency range : 45 to 866 MHz
- Input level range : 60 to 72 dBu

## Display Type

### Diagonal screen size

- 60 cm / 24 inch
- 80 cm / 32 inch
- 108 cm / 43 inch
- 126 cm / 50 inch

## Display Input Resolution

### Video formats

#### Resolution — Refresh rate

- 480i – 60 Hz
- 480p – 60 Hz
- 576i – 50 Hz
- 576p – 50 Hz
- 720p – 50 Hz, 60 Hz
- 1080i – 50 Hz, 60 Hz
- 1080p – 24 Hz, 25 Hz, 30 Hz, 50 Hz, 60 Hz

### Computer formats

#### Resolutions (amongst others)

- 640 x 480 – 60 Hz
- 800 x 600 – 60 Hz
- 1024 x 768 – 60 Hz
- 1280 x 800 – 60 Hz
- 1280 x 960 – 60 Hz
- 1360 x 768 – 60 Hz
- 1280 x 1024 – 60 Hz
- 1440 x 900 – 60 Hz
- 1920 x 1080 – 60 Hz

## Connectivity

### TV Side

- Common Interface slot: CI+/CAM
- USB – USB 2.0
- Headphones – Stereo mini-jack 3.5mm

### TV Back

- HDMI 1 in – ARC – FHD
- HDMI 2 in – FHD
- VGA
- Antenna (75 ohm)
- SCART (RGB/CVBS)
- Audio in DVI/VGA
- Audio out – Optical Toslink

## Dimensions and Weights

### 24HFL3014

- without TV stand:  
Width 559.65 mm – Height 335.78 mm – Depth 54.1 mm – Weight ± 3.15 kg
- with TV stand:  
Width 559.65 mm – Height 335.78 mm – Depth 124.1 mm – Weight ± 3.2 kg

### 32HFL3014

- without TV stand:  
Width 731.8 mm – Height 435.31 mm – Depth 77.3 mm – Weight ± 4.62 kg
- with TV stand:  
Width 731.8 mm – Height 455.52 mm – Depth 166.23 mm – Weight ± 4.68 kg

### 43HFL3014

- without TV stand:  
Width 969.64 mm – Height 565.58 mm – Depth 80.5 mm – Weight ± 7.2 kg
- with TV stand:  
Width 969.65 mm – Height 581.16 mm – Depth 218.06 mm – Weight ± 7.3 kg

### 50HFL3014

- without TV stand:  
Width 1127.63 mm – Height 655.3 mm – Depth 85.9 mm – Weight ± 11.15 kg
- with TV stand:  
Width 1127.63 mm – Height 676.3 mm – Depth 241.3 mm – Weight ± 11.4 kg

## Sound

- Output power (RMS) : 2x3W (24"), 2x8W (32"/43"/50")
- Dolby Audio
- Digital 2.0+Digital Out

# Connect Devices

## 6.1

### Connect Devices

#### Connectivity Guide

Always connect a device to the TV with the highest quality connection available. Also, use good quality cables to ensure a good transfer of picture and sound.

When you connect a device, the TV recognizes its type and gives each device a correct type name. You can change the type name if you wish. If a correct type name for a device is set, the TV automatically switches to the ideal TV settings when you switch to this device in the Sources menu.

#### Antenna port

If you have a Set-top box (a digital receiver) or Recorder, connect the antenna cables to run the antenna signal through the Set-top box and/or Recorder first before it enters the TV. In this way, the antenna and the Set-top box can send possible additional channels to the Recorder to record.

#### Operate devices

##### HDMI Quality

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for TV signal.

For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 5 m.



##### Copy protection

HDMI cables support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).

##### HDMI ARC

All of the HDMI connections on the TV have HDMI 1 ARC (Audio Return Channel).

If the device, typically a Home Theatre System (HTS), also has the HDMI ARC connection, connect it to any of the HDMI connections on this TV. With the HDMI ARC connection, you do not need to connect the extra audio cable that sends the sound of the TV picture to the HTS. The HDMI ARC connection combines both signals.

You can use any HDMI connection on this TV to connect the HTS but ARC is only available for 1 device/connection at a time.



##### HDMI CEC - EasyLink

An HDMI connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for High Definition (HD) TV signals. For best signal quality transfer, use a High speed HDMI cable and do not use an HDMI cable longer than 5 m.

Connect HDMI CEC-compatible devices to your TV, you can operate them with the TV remote control.

EasyLink HDMI CEC must be switched on on the TV and the connected device.



## Note:



- EasyLink might not work with devices from other brands.
- The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos Link, Bravia Theatre Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink. Example HDMI CEC branding names are property of their respective owners.

---

### EasyLink On or Off

You can switch EasyLink on or off. The TV comes with the EasyLink settings switched on.

To switch off EasyLink completely...

Professional Mode OFF – Press  Home. Press  (down), select **Settings** and press **OK**.

Select **Sources > EasyLink**, and press **OK**.

Select **EasyLink**, and press **OK**.

Select **Off** and press **OK**.

Press  **BACK**, repeatedly if necessary, to close the menu.


Professional Mode ON – Please refer to the installation manual.

---

### EasyLink Remote Control

If you want devices to communicate but you don't want to operate them with the TV remote control, you can switch off EasyLink Remote Control separately.

To switch EasyLink Remote Control on or off...

Professional Mode OFF – Press  Home. Press  (down), select **Settings** and press **OK**.

Select **Sources > EasyLink**, and press **OK**.

Select **EasyLink Remote Control** and press **OK**.

Select **On** or **Off** and press **OK**.

Press  **BACK**, repeatedly if necessary, to close the menu.

Professional Mode ON – Please refer to the installation manual.

---

## 6.2

# CAM with Smart Card - CI+

---

## CI+

This TV is ready for the CI+ **Conditional Access**.

With CI+ you can watch premium HD programmes, like movies and sports, offered by digital TV operators in your region. These programmes are scrambled by the TV operator and descrambled with a prepaid CI+ module.

Digital TV operators provide a CI+ module (Conditional Access Module - CAM) and an accompanying smart card, when you subscribe to their premium programmes. These programmes have a high level of copy protection.

Contact a digital TV operator for more information on terms & conditions.



---

## Smart Card

Digital TV operators provide a CI+ module (Conditional Access Module - CAM) and an accompanying smart card, when you subscribe to their premium programmes.

Insert the smart card into the CAM module. See the instruction you received from the operator.

To insert the CAM in the TV...

1 - Look on the CAM for the correct method of insertion. Incorrect insertion can damage the CAM and TV.

2 - While looking at the back of the TV, with the front of the CAM facing towards you, gently insert the CAM into the slot **COMMON INTERFACE**.

3 - Push the CAM in as far as it will go. Leave it in the slot permanently.



When you switch on the TV, it may take a few minutes before the CAM is activated. If a CAM is inserted and subscription fees are paid (subscription methods can differ), you can watch the scrambled channels supported by the CAM smart card.

 
The CAM and smart card are exclusively for your TV. If

you remove the CAM, you will no longer be able to watch the scrambled channels supported by the CAM.


6.3

## Receiver - Set-Top Box

Use 2 antenna cables to connect the antenna to the Set-top box (a digital receiver) and the TV.

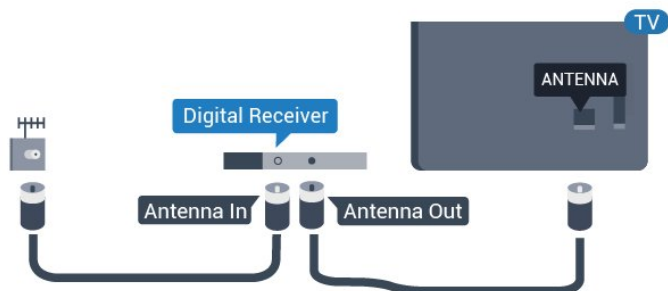

 Next to the antenna connections, add an HDMI cable to connect the Set-top box to the TV.

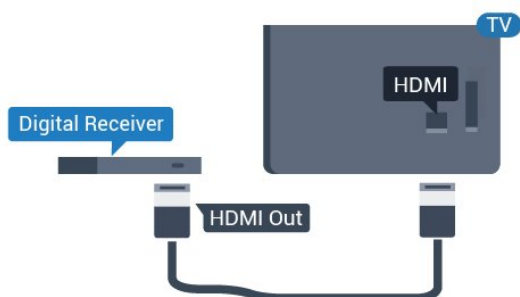

6.4

## Home Theatre System - HTS

 
### Connect with HDMI ARC

Use an HDMI cable to connect a Home Theatre System (HTS) to the TV. You can connect a Philips Soundbar or an HTS with a built-in disc player.

#### HDMI ARC

If your Home Theatre System has an HDMI ARC connection, you can use any HDMI connection on the TV to connect. With HDMI ARC, you do not need to connect the extra audio cable. The HDMI ARC connection combines both signals.

All HDMI connections on the TV can offer the Audio Return Channel (ARC) signal. But once you have connected the Home Theatre System, the TV can only send the ARC signal to this HDMI connection.

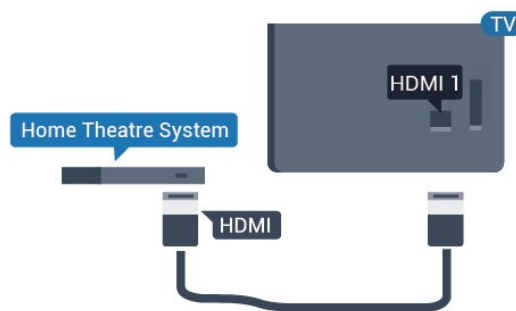


#### Audio to video synchronisation (sync)

If the sound does not match the video on screen, you can set a delay on most Home Theatre Systems with a disc player to match the sound with the video.

### Connect with HDMI

Use an HDMI cable to connect a Home Theatre System (HTS) to the TV. You can connect a Philips Soundbar or an HTS with a built-in disc player.

 If the Home Theatre System has no HDMI ARC connection, add an optical audio cable (Toslink) to send the sound of the TV picture to the Home Theatre System.

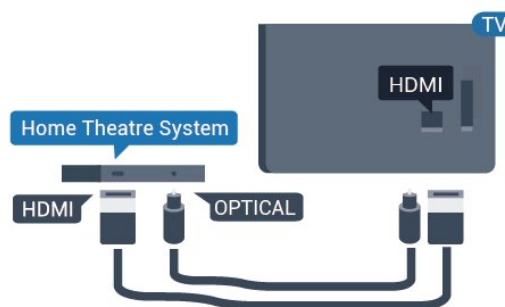


#### Audio to video synchronisation (sync)

If the sound does not match the video on screen, you can set a delay on most Home Theatre Systems with a disc player to match the sound with the video.

6.5


## Blu-ray Disc Player

 
Use a High speed HDMI cable to connect the Blu-ray Disc player to the TV.

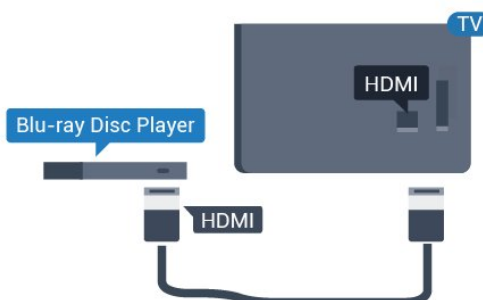

If the Blu-ray Disc player has EasyLink HDMI CEC, you can operate the player with the TV remote control.


## Headphones

 You can connect a set of headphones to the  connection on the back of the TV. The connection is a mini-jack 3.5mm. You can adjust the volume of the headphones separately.

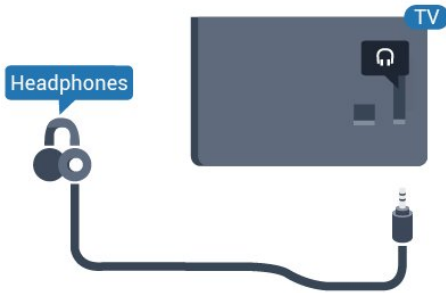

## USB Flash Drive

You can view photos or play your music and videos from a connected USB flash drive.

Insert a USB flash drive in one of the  connections on the TV while the TV is switched on.






The TV detects the flash drive and opens a list showing its content.  
If the contents list does not appear automatically...

Professional Mode

OFF – Press  Home, select  Sources. Choose USB press  OK.

Professional Mode On – Press  Home,

select  Sources . Choose  Media Browser and press  OK.

To stop watching the USB flash drive content, press  or select another activity.

To disconnect the USB flash drive, you can pull out the flash drive anytime.

 
## Computer

### Connect

You can connect your computer to the TV and use the TV as a PC monitor.


#### With HDMI

Use an HDMI cable to connect the computer to the TV.

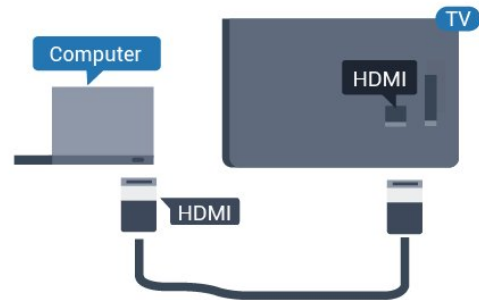

#### With VGA

 Use an VGA cable to connect the computer to the TV, and an audio cable (mini-jack 3.5mm) to AUDIO IN VGA on the back of the TV.

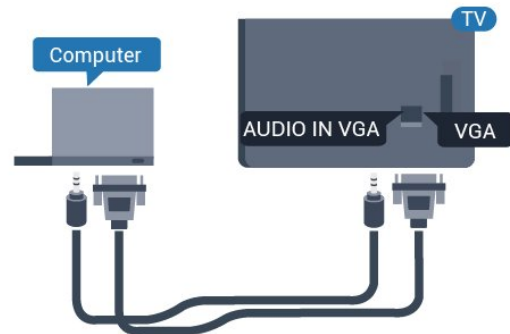




---

## Ideal Setting

If you connect a computer, we advise you to give the connection, on which the computer is connected, the correct device type name in the Source menu. If you switch to **Computer** in the Source menu, the TV is set to the ideal Computer setting automatically.

To set the TV to the ideal setting...

Professional Mode OFF – Press  Home. Press  (down), select **Settings** and press **OK**.

Select **Picture** and press  (right) to enter the menu. Select **Picture Style > Computer** and press **OK**.

Select **On** or **Off**, and press **OK**.

Press  repeatedly if necessary, to close the menu.

Professional Mode ON – Not available in this Mode.

(For Professional Mode information, please refer to installation manual.)



# Videos, Photos and Music

## From a USB Connection

You can view your photos or play your music and videos from a connected USB flash drive or USB Hard Drive.

With the TV switched on, plug in a USB flash drive or a USB Hard Drive to one of the USB connections. The TV detects the device and will list your media files.

If the list of files does not appear automatically...

Professional Mode

OFF – Press Home, select Sources. Choose USB press **OK**.

Professional Mode On – Press Home, select Sources. Choose Media Browser and press **OK**.

You can browse your files in the folder structure you have organised on the drive.

To stop playing videos, photos and music, press .

## Play your Videos

### Play Videos

Open video folder

Professional Mode

OFF – Press Home, select Sources. Choose USB press **OK**.

Professional Mode On – Press Home, select Sources. Choose Media Browser and press **OK**.

To go back to the folder, press .

Play a video

Professional Mode

OFF – Press Home, select Sources. Choose USB press **OK**.

Professional Mode On – Press Home, select Sources. Choose Media Browser and press **OK**.

1 – Select Videos and press **OK**.

 
2 – Select one of video, you can press Play all to play all files in the folder or press Mark as favourite to add the selected video to favourite

menu – Favourites.

To pause the video, press **OK**. Press **OK** again to continue.

Control bar

To show or hide the control bar when a video is playing, press **OK**.

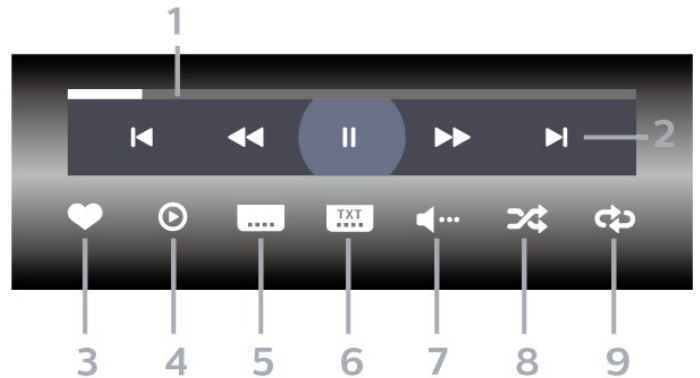

1 – Progress bar

2 – Playback control bar

– : Jump to the previous video in a folder

– : Jump to the next video in a folder

: Rewind

: Fast forward

: Pause the playback

3 – Mark as favourites

4 – Play all videos

5 – Subtitle: switch subtitles On, Off or On During Mute.

6 – Subtitle language: select a Subtitle Language (Not available for Professional Mode ON.)

7 – Audio language: select an audio language

8 – Shuffle: play your files in a random order

9 – Repeat: plays all videos in this folder once or continuously

## Video Options

During the video playback, press OPTIONS, select Info and press **OK** to...

• **Mark as Favourite** – Set the selected video as favourite.

• **Play All** – Play all video files in this folder.

• **Subtitles** – If available, you can switch subtitles **On**, **Off** or **On During Mute**.

• **Audio Language** – If available, select an Audio Language.

• **Shuffle** – Play your files in a random order.




• **Repeat** – Plays all videos in this folder once or continuously.




 
## View your Photos

### View Photos

#### Open photo folder

Professional Mode

OFF – Press , select  Sources. Choose USB press .




 
Professional Mode On – Press , select  Sources. Choose  Media Brower and press .

Select  Photos and press .




#### View a photo

Professional Mode

 
OFF – Press , select  Sources. Choose USB press .

Professional Mode On – Press , select  Sources. Choose  Media Brower and press .


 
 
Select  Photos and press .

Select Photos and select one of photos, you can press  Slide show to play all files in the folder or press  Mark favourite to add the selected photo to favourite menu -  Favourites.

#### Control bar

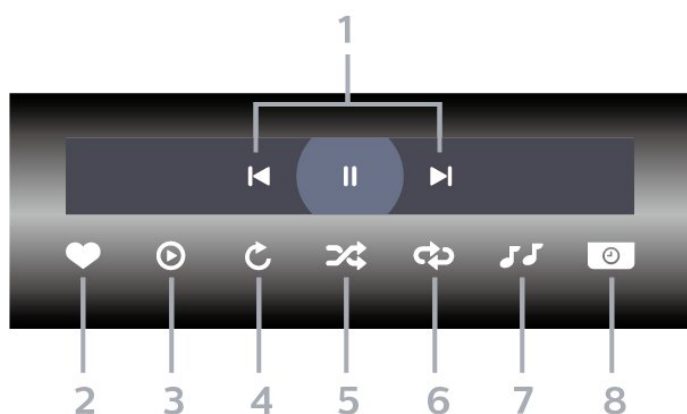




1 - Playback control bar

- : Jump to the previous photo in a folder
- : Jump to the next photo in a folder
- : Pause the slideshow playback

- 2 - Mark as favourites
- 3 - Start a slideshow
- 4 - Rotate the photo

- 5 - Shuffle: play your files in a random order
- 6 - Repeat: plays all photos in this folder once or continuously
- 7 - Stop the music playing in the background (Not available in Professional Mode ON)
- 8 - Set the speed of the slide show

## Photo Options



 
During the video playback, press , select  Info and press  to...





- Mark as favourites
- Start a slideshow
- Rotate the photo
- Shuffle: play your files in a random order
- Repeat: plays all photos in this folder once or continuously
- Stop the music playing in the background (Not available in Professional Mode ON)
- Set the speed of the slide show

## Play your Music

### Play Music

#### Open Music folder

Professional Mode OFF – Press , select  Sources. Choose USB press .




Professional Mode On – Press , select  Sources. Choose  Media Brower and press .

Select  Music and press .

#### Play music

Professional Mode

OFF – Press , select  Sources. Choose USB press .

 
Professional Mode On – Press  Home, select  Sources . Choose  Media Brower and press OK.

Select  Music and press OK.

You can press  Mark favourite to add the music folder to favourite menu -  Favourites.

You can quickly find a music using classification  
- Genres, Artists, Albums, Tracks.

### Control bar

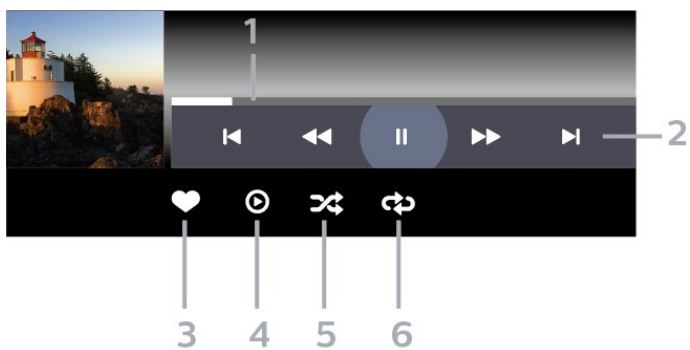

1 - Progress bar

2 - Playback control bar

- : Jump to the previous music in a folder

- : Jump to the next music in a folder

: Rewind

: Fast forward

: Pause the playback

3 - Mark as favourites


4 - Play all music

5 - Shuffle: play your files in a random order

6 - Repeat: plays all music in this folder once or continuously

---

## Music Options

During playing the music, press  OPTIONS, select Info and press OK to...

· Mark as favourites

· Play all music

· Shuffle: play your files in a random order

· Repeat: plays all music in this folder once or continuously

# TV Guide

---

## Using the TV Guide

---

### Open the TV Guide

To open the TV Guide, press  TV GUIDE. The TV Guide shows the channels of the selected tuner.

Press  TV GUIDE again to close.

The first time you open the TV Guide, the TV scans all TV channels for programme information. This may take several minutes. TV Guide data is stored on TV.

# Home Screen

## About the Home screen

From the Home Screen, you can start any activity you can do with the TV.

The Professional Menu is organised in rows...

· Channels 

This row contains all channels.

- Press **OK** to open TV guide.
- Press **▶** (left) to view channels with channel logos, or select **see all** to view all channels.

· Sources 

This row contains available sources in this TV.

· Features 

This row contains TV Features which are available for user.


· Settings 

This row contains settings which are available for user.

## Open the Home screen

Professional Mode OFF - Please refer to Chapter "Consumer TV Home Screen".

Professional Mode ON - To open the Home screen and open an item...

- 1 - Open the Home screen by Pressing Home .
- 2 - Select an activity by using the arrow keys and press **OK** to start the activity.
- 3 - To close the Professional Menu without changing the current activity, press **←**.



# Channels

## Channel Lists

### About Channel Lists

After a channel installation, all channels appear on the channel list. Channels are shown with their name and logo if this information is available.

With a channel list selected, press the arrows **◀** (left) or **▶** (right) to select a channel, then press **OK** to watch the selected channel. You only tune to the channels in that list when using **≡ +** or **≡ -** keys.

### Radio stations

If digital broadcasting is available, digital radio stations are installed during installation. Switch to a radio channel just like you switch to a TV channel.

### Open a Channel List

To open the current channel list...

1. Press **TV**, to switch to TV.
2. Press **≡ CHANNELS** to open the current channel list.
3. Press **≡ CHANNELS** again to close the channel list.

## About Channels and Switch Channels

### To watch TV channels

- Press **TV**. The TV tunes to the TV channel you last watched.
- Press **≡ +** or **≡ -** to switch channels.
- If you know the channel number, type in the number with the number keys. Press **OK** after you entered the number to switch channels.
- To switch back to the previously tuned channel, press **← BACK**.

# Sources

## Switch Source

To view the list of available sources

Select **Home > Sources**, and press **OK**.

- To switch to a connected device, select the device with the arrows **▲** (up) or **▼** (down) and press **OK**.


## Features

### View TV utilities

To view the list of TV utilities



Select  Home >  Features, and press OK.

- TV guide

Select  Home >  Features >  TV guide, and press OK.




With the TV guide you can view a list of the current and scheduled TV programmes of your channels. Not all channels offer TV guide information.

- Channels

Select  Home >  Features >  Channels, and press OK.



 
To open the channels list.

- Media Browser



Select  Home >  Features >  Media Browser, and press OK.

With USB, you can browse your photos, videos and music stored on a connected USB device and play these files on TV.

- Sleep timer


Select  Home >  Features >  Sleep timer, and press OK.

Set the TV to switch to Standby automatically after a preset time.




Press the arrows  (up) or  (down) to adjust the value. The value **0 (Off)** deactivates the automatic switch off.

- Alarm

Select  Home >  Features >  Alarm, and press OK.

An alarm can be set on the TV. The TV can wakeup on a defined alarm time. Alternatively, alarm time can be set by pressing the  button on the remote control.

- Clock



Select  Home >  Features >  Clock, and press OK.

The standard setting for the TV clock is Automatic. The time information comes from the broadcasted UTC - Coordinated Universal Time information.



## Settings

### View settings offered

To view the list of TV settings

 

Select  Home >  Settings, and press OK.

- Picture Style

Select  Home >  Settings > Picture style, and press OK.



Switch between the preset picture styles. There are ideal styles for watching movies or photos, etc.

- Picture Format

Select  Home >  Settings > Picture format, and press OK.

Select a picture format that fits the screen.

- Sound style


Select  Home >  Settings > Sound style, and press OK.

Switch between the preset sound styles. There are ideal styles for watching movies, listening to music or playing a game.

- Menu language

Change the language of the TV menu and messages

- Options

Select  Home >  Settings > Options, and press OK.

Subtitles

Switch subtitles to Subtitle on or Subtitle off .

Status

Select Status to view technical information on the channel.

Clock

Display time on the corner of the TV screen.

# Consumer TV Home Screen

## About the consumer TV Home Screen

From the Consumer Home Screen, you can start any activity you can do with the TV.

The Consumer Home Screen is organised in rows...

• Channels

This row contains all channels.

- Press **OK** to open TV guide.
- Press **▶** (left) to view channels with channel logos, or select **see all** to view all channels.

• Sources

This row contains available sources in this TV.

• Utilities

This row contains TV Utilities which are available for user.

• Settings

This row contains settings which are available for user.

## Open the consumer TV Home Screen

Professional Mode ON - please refer to the installation manual.

Professional Mode OFF - To open the TV Home Screen and open an item...

1 - Press Home .


2 - Select an activity using the arrow keys and press **OK** to start the activity.

3 - To close the Home menu without changing the current activity, press **←**.



## Language

Change the language of the TV menu and messages..

Home  > Settings > Region and language > Languages > Menu language

Select your language by pressing **←** or **▶** and press **OK**.

## Channels

### About Channels and Switch Channels


### Install Channel

Antenna and Cable


Manually Search for Channels and Channel Settings

Search for Channels

Update existing channel list

 (Home) > Settings > Antenna/cable installation > Search for channels > Update channels

Re-install all channels

 (Home) > Settings > Antenna/cable installation > Search for channels > Re-install channels

1. Select the country where you are now and press **OK**.

2. Select **Antenna (DVB-T)** or **Cable (DVB-C)**, and select one item you need to re-install.

3. Select **Digital and analogue channels**, **Only digital channels**, or **Only analogue channels**.

4. Select **Start** and press **OK** to update channels. This can take a few minutes.

---

## Channel Settings

🏠 (Home) > Settings > Antenna/cable installation > Search for channels > Re-install channels

1. Select the country where you are now and press **OK**.
2. Select **Antenna (DVB-T)** or **Cable (DVB-C)**, and select one item you need to re-install.
3. Select **Digital and analogue channels**, **Only digital channels**, or **Only analogue channels**.
4. Select **Settings** and press **OK**.
5. Press **■** (red) to reset, or press **■** (green) when complete the settings.

### Frequency scan

Select the method of searching for channels.

- **Quick**: select the faster method and use the predefined settings used by most cable providers in your country.
- **Full**: If this results in having no channels installed or if some channels are missing, you can select the extended **Full** method. This method will take more time to search for and install channels.
- **Advanced**: If you received a specific network frequency value to search for channels, select **Advanced**.

### Network frequency mode

If you intend to use the fast **Quick** method in **Frequency scan** to search for channels, select **Automatic**. The TV will use 1 of the predefined network frequencies (or HC - homing channel) as used by most cable providers in your country. If you received a specific network frequency value to search for channels, select **Manual**.

### Network frequency

With the **Network frequency mode** set to **Manual**, you can enter the network frequency value received from your cable provider here. To enter the value, use the number keys.

### Symbol rate mode

If your cable provider did not give you a specific **symbol rate** value to install the TV channels, leave the **Symbol rate mode** setting on **Automatic**. If you received a specific symbol rate value, select **Manual**.

### Symbol rate

With the **Symbol rate mode** set to **Manual**, you can enter the symbol rate value by using the number keys.

### Free / Scrambled

If you have a subscription and a CAM - Conditional

Access Module for pay TV services, select **Free + scrambled**. If you did not subscribe to pay TV channels or services, you can select **Free channels only**.

---

## Digital: Reception Test

🏠 (Home) > Settings > Antenna/cable installation > Digital: Reception test

The digital frequency is shown for this channel. If the reception is poor, you can reposition your antenna. To check the signal quality of this frequency again, select **Search** and press **OK**. To enter a specific digital frequency yourself, use the remote control digit keys. Alternatively, select the frequency, position the arrows on a number with **◀** and **▶** and change the number with **▲** and **▼**. To check the frequency, select **Search** and press **OK**.

If you use DVB-C to receive channels, the option **Symbol rate mode** is available. For Symbol rate mode, select **Automatic**, unless your cable provider gave you a specific symbol rate value. To enter the symbol rate value, select **Symbol rate**, and use the number keys or **▲** and **▼**.

---

## Analogue: Manual Installation

🏠 (Home) > Settings > Antenna/cable installation > Analogue: Manual Installation

Analogue TV channels can be manually installed, channel by channel.

### System

To set up the TV system, select **System**. Select your country or the part of the world where you are now and press **OK**.

### Search Channel

To find a channel, select **Search channel** and press **OK**. You can enter a frequency yourself to find a channel or let the TV search for a channel. Press **OK**, select **Search** and press **OK** to search for a channel automatically. The found channel is shown on screen and if the reception is poor, press **Search** again. If you want to store the channel, select **Done** and press **OK**.

### Fine tune

To fine tune a channel, select **Fine tune** and press **OK**. You can fine tune the channel with **▲** or **▼**. If you want to store the channel found, select **Done** and press **OK**.



## Store

You can store the channel on the current channel number or as a new channel number.

Select **Store** and press **OK**. The new channel number is shown briefly.

You can redo these steps until you have found all available analogue TV channels.

---

## Channel Options

### Open Options

While watching a channel, you can set some options.

Depending on the type of channel you are watching (analogue or digital) or depending on the TV settings you made, some options are available.

To open the options menu...

1. While watching a channel, press **+** **OPTIONS**.
2. Press **+** **OPTIONS** again to close.

---

## Subtitles

To switch on Subtitles, press **SUBTITLE**.

You can switch subtitles **Subtitle on** or **Subtitle off**.

### Automatic

If language information is part of the digital broadcast and the broadcasted programme is not in your language (the language set on TV), the TV can show subtitles automatically in one of your preferred subtitle languages. One of these subtitle languages must also be part of the broadcast.

You can select your preferred subtitle languages in **Subtitle language**.

---

## Subtitles Language

If none of the preferred subtitle languages are available, you can select another subtitle language if available. If no subtitle languages are available, you cannot select this option.

---

## Status

Select **Status** to view technical information on the channel.

---

## Clock

Display time on the corner of the TV screen.

---

## Channel List

---

### Channel List Options

#### Open Option Menu

To open the channel list option menu...

1. Press **TV**, to switch to TV.
2. Press **≡ CHANNELS** to open the current channel list.
3. Press **+** **OPTIONS**, and select one of options.
4. Press **≡ CHANNELS** again to close the channel list.

---

## 10.5

## Sources

---

### Source List

- To open the sources menu, press **🏠 (Home)** > **📺 SOURCES**.
- To switch to a connected device, select the device with the arrows **▲ (up)** or **▼ (down)** and press **OK**.

---

### Rename Device

- Only HDMI, VGA (if available), SCART (if available) sources can be renamed or replace device icon

1. Press press **🏠 (Home)** > **📺 SOURCES**. Select HDMI or VGA (if available).
2. Press **— Edit** and press **OK**.
3. Select one of the device icons and press **OK**, the preset name appears in the typing field.
4. Select **Rename**, then enter new name using on-screen keyboard.
  - Press **— (red)** key to enter with lower-case
  - Press **— (green)** key to enter with upper-case
  - Press **— (yellow)** key to enter number and symbol
  - Press **— (blue)** key to delete a character
5. Select **Done** when complete the editing.

## Utilities

### TV guide

The TV Guide shows the channels of the selected tuner.

### Channels


View channel list.

### Update software

For more information, in [User manual](#), see chapter [Software](#).

## Quick Settings and All Settings

### Quick settings menu:

Press  **SETTINGS** key on the remote control to find frequently used settings in Quick settings menu.

- **Picture style:** Select one of preset picture styles for ideal picture viewing.
- **Picture format:** Select one of preset picture format which fits the screen.
- **Sound style:** Select one of preset sound styles for ideal sound settings.
- **Headphone volume:** Adjust the volume of a connected headphone.
- **Audio out:** Set the TV to play the sound on TV or on the connected audio system.
- **Clock:** Display clock on the right-top corner TV screen.
- **Sleep timer:** Set the TV to switch to standby automatically after a preset time.
- **All settings:** View all settings menu.
- **Help:** Easily get software updated, reset TV to default settings, and read user manual.

### All settings menu:

Press  (home) key on the remote control, select **Settings**, and press **OK**.


## All Settings

### Picture Settings

#### Picture Style

##### Select a style

For easy picture adjustment, you can select a preset picture style.

 (Home) > **Settings** > **Picture** > **Picture style**



The available Picture styles are ...

- **Personal** - The picture preferences you set during the first start up
- **Vivid** - Ideal for daylight viewing
- **Natural** - Natural picture settings
- **Standard** - Most energy conscious setting
- **Movie** - Ideal for watching movies
- **Game** - Ideal for gaming


#### Colour, Contrast, Sharpness, Brightness



##### Adjust the picture colour

 (Home) > **Settings** > **Picture** > **Colour**

Press the arrows  (up) or  (down) to adjust the colour saturation value of the picture.


##### Adjust the picture contrast



 (Home) > **Settings** > **Picture** > **Contrast**

Press the arrows  (up) or  (down) to adjust the contrast value of the picture.

You can decrease contrast value to reduce power consumption.

##### Adjust the picture sharpness

 (Home) > **Settings** > **Picture** > **Sharpness**

Press the arrows  (up) or  (down) to adjust the sharpness value of the picture.

#### Advanced Picture Settings

##### Colour Settings

 (Home) > **Settings** > **Picture** > **Advanced** > **Colour**

##### Adjust the colour enhancement

🏠 (Home) > Settings > Picture > Advanced > Colour > Colour enhancement

Select **Maximum**, **Medium**, or **Minimum** to set the level of the colour intensity and the details in bright colours.

Select the preset colour temperature

🏠 (Home) > Settings > Picture > Advanced > Colour > Colour temperature

Select **Normal**, **Warm**, or **Cool** to set the colour temperature for your preference.

Customise colour temperature

🏠 (Home) > Settings > Picture > Advanced > Colour > Custom colour temperature

Select **Custom** in Colour temperature menu to customise a colour temperature yourself. Press the arrows **▲** (up) or **▼** (down) to adjust the value.

---

## Contrast Settings

Contrast Modes

🏠 (Home) > Settings > Picture > Advanced > Contrast > Contrast mode

Select **Normal**, **Optimized for picture**, **Optimized for energy saving** to set the TV automatically reduces the contrast, for best power consumption or for best picture experience, or select **Off** to switch off the adjustment.

---

Dynamic Contrast

🏠 (Home) > Settings > Picture > Advanced > Contrast > Dynamic contrast

Select **Maximum**, **Medium**, or **Minimum** to set the level at which the TV automatically enhances the details in the dark, middle and light areas of the picture.

---

Video Contrast, Gamma

Video contrast

🏠 (Home) > Settings > Picture > Advanced > Contrast > Video contrast

Press the arrows **▲** (up) or **▼** (down) to adjust the video contrast level.

Gamma

🏠 (Home) > Settings > Picture > Advanced > Contrast > Gamma

Press the arrows **▲** (up) or **▼** (down) to set a non-linear setting for picture luminance and contrast.

---

Super Resolution

🏠 (Home) > Settings > Picture > Advanced > Sharpness > Super Resolution

Select **On** to have a superior sharpness in line edges and details.

---

Picture Clean

🏠 (Home) > Settings > Picture > Advanced > Picture clean

Noise reduction

🏠 (Home) > Settings > Picture > Advanced > Picture clean > Noise reduction

Select **Maximum**, **Medium**, **Minimum** to set the level for removing the noise in video content.

Noise is mostly visible as small moving dots in on-screen picture.

MPEG Artefact Reduction

🏠 (Home) > Settings > Picture > Advanced > Picture clean > MPEG artefact reduction

Select **On** to smoothen the digital transitions in the picture.

MPEG artefacts are mostly visible as small blocks or jagged edges in on-screen images.

---

Format and Edges

🏠 (Home) > Settings > Picture > Format and edges

Picture format

🏠 (Home) > Settings > Picture > Format and edges > Picture format

If black bars appear on top and bottom or on both sides of the picture, you can adjust the picture format to a format that fills the screen.

Screen Edges

🏠 (Home) > Settings > Picture > Format and edges > Picture format > Screen edges

With **Screen edges**, you can slightly enlarge the picture to hide distorted edges.

---

## Sound Settings

---

### Sound Style

#### Select a style

For easy sound adjustment, you can select a preset sound style.

🏠 (Home) > Settings > Sound > Sound style

The available sound styles are ...

- **Personal** - The sound preferences you set during the first start up.
- **Original** - Most neutral sound setting
- **Movie** - Ideal for watching movies
- **Music** - Ideal for listening to music
- **Game** - Ideal for gaming
- **News** - Ideal for speech

---

### Bass, Treble

#### Bass

🏠 (Home) > Settings > Sound > Bass

Press the arrows **▲** (up) or **▼** (down) to adjust the level of low tones in the sound.

#### Treble

🏠 (Home) > Settings > Sound > Treble

Press the arrows **▲** (up) or **▼** (down) to adjust the level of high tones in the sound.

---

### Surround Sound

🏠 (Home) > Settings > Sound > Surround mode

Select the surround sound effect for the internal TV speakers.

---

### Headphone Volume

🏠 (Home) > Settings > Sound > Headphone volume

Press the arrows **▲** (up) or **▼** (down) to adjust the volume of a connected headphone separately.

---

### TV Placement

🏠 (Home) > Settings > Sound > TV placement

Select **On a TV stand** or **On the wall** to have best sound reproduction according to the setting.

---

### Advanced Sound Settings

---

#### Volume Control

##### Auto volume levelling

🏠 (Home) > Settings > Sound > Advanced > Auto volume levelling

Select **On** to automatically level out sudden volume differences. Typically when you are switching channels.

##### Delta volume

🏠 (Home) > Settings > Sound > Advanced > Delta volume

Press the arrows **▲** (up) or **▼** (down) to adjust the delta value for TV speaker volume.

---

### Audio Out Settings

🏠 (Home) > Settings > Sound > Advanced > Audio out

Set the TV to play the sound on TV or on the connected audio system.

You can select where you want to hear the TV sound and how you want to control it.

- If you select **TV speakers off**, you permanently switch off the TV speakers.
- If you select **TV speakers**, the TV speakers are always on.

With an audio device connected with HDMI CEC, select **HDMI sound system**. The TV will switch off the TV speakers when the device is playing the sound.

---

### Clear Sound

🏠 (Home) > Settings > Sound > Advanced > Clear sound

Select **On** to improve the sound for speech. Ideal for news programmes.

---

## Digital Output Settings

Digital output settings are available for optical and HDMI ARC sound signals.

### Digital out format

🏠 (Home) > Settings > Sound > Advanced > Digital out format

Set the audio out signal of the TV to fit the sound capabilities of the connected Home Theatre System.

- If you have a Home Theatre System (HTS) with multichannel sound processing capabilities, set **Digital out format** to **Multichannel**. With **Multichannel**, the TV can send the compressed multichannel sound signal from a TV channel or connected player to the Home Theatre System.

- If you have a Home Theatre System without multichannel sound processing, select **Stereo**.

### Digital out levelling

🏠 (Home) > Settings > Sound > Advanced > Digital out levelling

Adjust the loudness level from device which is connected to digital audio output (SPDIF) or HDMI.

- Select **More** to have louder volume.
- Select **Less** to have softer volume.

### Digital out delay

🏠 (Home) > Settings > Sound > Advanced > Digital out delay

For some Home Theatre Systems you might need to adjust the audio sync delay to synchronise the audio to the video. Select **Off** if a sound delay is set on your Home Theatre System.

### Digital out offset (Only available when Digital out delay set to On)

🏠 (Home) > Settings > Sound > Advanced > Digital out offset

If you cannot set a delay on the Home Theatre System, you can set the TV to sync the sound. You can set an offset that compensates for the time necessary for the Home Theatre System to process the sound of the TV picture. You can set the value in steps of 5ms. Maximum setting is 60ms.

---

## Eco Settings

### Set energy saving level

🏠 (Home) > Settings > Eco settings > Energy saving

Select **Minimum**, **Medium**, or **Maximum** to have different degrees for energy saving, or select **Off** to switch off energy saving mode.

### Set screen off to save energy consumption

🏠 (Home) > Settings > Eco settings > Screen off

Select **Screen off**, the TV screen is switched off, to switch the TV screen back on, press any key on the remote control.

### Set TV switch off timer

🏠 (Home) > Settings > Eco settings > Switch off timer.

Press the arrows **▲** (up) or **▼** (down) to adjust the value. The value **0 (Off)** deactivates the automatic switch off.

Select **Switch off timer**, the TV switches off automatically to save energy.

\* TV switches off if receiving a TV signal but you don't press a key on the remote control during a 4 hour period.

\* TV switches off if not receiving a TV signal nor a remote control command for 10 minutes.

\* If you use the TV as a monitor or use a digital receiver to watch TV (a Set-Top Box - STB) and you do not use the remote control of the TV, you should deactivate this automatic switch off, to set the value to **0**.

---

## General Settings

---

### Connection Related Settings

---

#### USB Hard Drive

🏠 (Home) > Settings > General settings > USB Hard Drive

You need to set up and format a USB Hard Drive before you record a channel.

---

#### CAM Operator Profile

🏠 (Home) > Settings > General settings > CAM Operator Profile

To switch on operator profile for CI+/CAM for easy channel installation and updates.

---

## HDMI-CEC Connection - EasyLink

Connect HDMI CEC-compatible devices to your TV, you can operate them with the TV remote control. EasyLink HDMI CEC must be switched on on the TV and the connected device.

### Switch on EasyLink

🏠 (Home) > Settings > General settings > EasyLink > EasyLink > On.

### Operate HDMI CEC-compatible devices with TV remote control

🏠 (Home) > Settings > General settings > EasyLink > EasyLink remote control > On.

### Note:

- EasyLink might not work with devices from other brands.

- The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos Link, Bravia Theatre Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink. Example HDMI CEC branding names are property of their respective owners.

---

## Location - Home or Shop

### Select the location of your TV

🏠 (Home) > Settings > General settings > Location

Select **Shop**, the picture style is switched back to **Vivid**, and can adjust shop settings. Shop mode is for in-store promotion.

---

## Reset TV Settings and Reinstall TV

### Reset all settings value to original TV settings

🏠 (Home) > Settings > General settings > Factory settings

### Redo full TV installation , and set TV status back to the first time you switch on

🏠 (Home) > Settings > General settings > Reinstall TV

Enter PIN code and select **Yes**, the TV will reinstall completely. All settings will be reset and installed channels will be replaced. The installation can take a few minute

---

## Region and Language Settings

### Language

🏠 (Home) > Settings > Region and language > Language

### Change the language of the TV menu and messages

🏠 (Home) > Settings > Region and language > Language > Menu language

### Set audio preference language

🏠 (Home) > Settings > Region and language > Language > Primary audio language, Secondary audio language

Digital TV channels can broadcast audio with several spoken languages for a programme. You can set a preferred primary and secondary audio language. If audio in one of these languages is available, the TV will switch to this audio.

### Set subtitle preference language

🏠 (Home) > Settings > Region and language > Language > Primary subtitle language , Secondary subtitle language

Digital channels can offer several subtitle languages for a programme. You can set a preferred primary and secondary subtitle language. If subtitles in one of these languages are available, the TV will show the subtitles you selected.

### Set teletext preference language

🏠 (Home) > Settings > Region and language > Language > Primary text, Secondary text

Some digital TV broadcasters have several Text languages available.

---

### Clock

🏠 (Home) > Settings > Region and language > Clock

## Correct clock automatically

🏠 (Home) > Settings > Region and language > Clock > Auto clock mode

- The standard setting for the TV clock is **Automatic**. The time information comes from the broadcasted UTC - Coordinated Universal Time information.

- If the clock is not correct, you can set the TV clock to **Country dependent**.

## Correct clock manually

🏠 (Home) > Settings > Region and language > Clock > Auto clock mode > Manual

🏠 (Home) > Settings > Region and language > Clock > Date, Time

Go to previous menu, and select **Date** and **Time** to adjust the value.

### Note:

- If none of the automatic settings display the time correctly, you can set the time manually.

- If you schedule recordings from the TV Guide, we recommend not to change the time and date manually.

## Set time zone or set a time offset for your region

🏠 (Home) > Settings > Region and language > Clock > Time zone

Select one of the time zones.

## Set the TV to switch to Standby automatically after a preset time

🏠 (Home) > Settings > Region and language > Clock > Sleep timer

Set the TV to switch to Standby automatically after a preset time. With the slider bar you can set the time to up to 180 minutes in increments of 5 minutes. If set to 0 minutes, the sleep timer is switched off. You can always switch off your TV earlier or reset the time during the countdown.

---

## Universal Access Settings

🏠 (Home) > Settings > Universal access

With **Universal Access** switched on, the TV is prepared for use for the deaf, hard of hearing, blind or partially sighted people.

### Switch on universal access settings

🏠 (Home) > Settings > Universal access > Universal access > On.

## Universal access for hearing impaired people

🏠 (Home) > Settings > Universal access > Hearing impaired > On

- Some digital TV channels broadcast special audio and subtitles adapted for the hard of hearing or deaf people.

- Switched on, the TV automatically switches to the adapted audio and subtitles, if available.

## Universal access for blind or partially sighted people

🏠 (Home) > Settings > Universal access > Audio description > Audio description > On

Digital TV channels can broadcast special audio commentary describing what is happening on screen.

🏠 (Home) > Settings > Universal access > Audio description > Audio description > Mixed volume, Audio effects, Speech

- Select **Mixed volume**, you can mix the volume of the normal audio with the audio commentary. Press the arrows **▲** (up) or **▼** (down) to adjust the value.

- Set **Audio effect** to **On** for extra audio effects in the commentary audio, like stereo or fading sound.

- Select **Speech** to set speech preference, **Descriptive** or **Subtitles**.

---

## Child lock

### Set Code and Change Code

#### Set new code or reset change code

🏠 (Home) > Settings > Child lock > Set code, Change code

The child lock code is used to lock or unlock channels or programmes.

**Note:** If you forgot your PIN code, you can override the current code use **8888** and enter a new code.

---

### Lock for Programme

🏠 (Home) > Settings > Child lock > Parental rating

Set a minimum age to watch rated programmes.

---

## CAM PIN

🏠 (Home) > Settings > Child lock > CAM PIN

Set CAM PIN for recording.

---

## Antenna/cable installation

### Update existing channel list

🏠 (Home) > Settings > Antenna/cable installation > Search for channels > Update channels

### Re-install all channels

🏠 (Home) > Settings > Antenna/cable installation > Search for channels > Re-install channels

1. Select the country where you are now and press **OK**.
2. Select **Antenna (DVB-T)** or **Cable (DVB-C)**, and select one item you need to re-install.
3. Select **Digital and analogue channels**, **Only digital channels**, or **Only analogue channels**.
4. Select **Start** and press **OK** to update channels. This can take a few minutes.

🏠 (Home) > Settings > Antenna/cable installation > Automatic channel update

If you receive digital channels, you can set the TV to automatically update the list with new channels.

Alternatively, you can start a channel update yourself.

### Automatic channel update

Once a day, at 6 AM, the TV updates the channels and stores new channels. New channels are stored in the All channels list but also in the New channels list. Empty channels are removed.

If new channels are found or if channels are updated or removed, a message is shown at TV start up. The TV must be in standby to automatically update channels.

🏠 (Home) > Settings > Antenna/cable installation > Channel update message

When new channels are found or if channels are updated or removed, a message is shown at TV start up. To avoid this message to appear after every channel update, you can switch it off.

---

## Update Software

---

### Search for Updates

🏠 (Home) > Settings > Update software > Search for updates.

You need a computer and a USB memory device to upload the software on the TV. Use a USB memory device with 256MB free space. Make sure that write protection is switched off.

1. Start the update on TV
  - 🏠 (Home) > Settings > Update software > Search for updates.
2. Identify the TV
  - Insert the USB memory into one of the USB connections of the TV. Select **Start** and press **OK**. An identification file is written on the USB memory device.
3. Download the TV software
  - Insert the USB memory into your computer.
  - On the USB memory device, locate the file **update.htm** and double click it.
  - Click on **Send ID**.
  - Select your region
  - If new software is available, download the .zip file.

After the download, unzip the file and copy the file **autorun.upg** onto the USB memory device.

4. Update the TV software
  - Insert the USB memory into the TV again. The update starts automatically. The TV switches itself off for 10 seconds and then back on again. Please wait.

### Do not . . .

- remove the USB memory device from the TV

If a power cut occurs during the update, never remove the USB memory device from the TV. When the power returns, the update will continue.



---

# Open Source

---

## 11.1

### Open Source Software

This television contains open source software. TP Vision Europe B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licences.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain the source code, please write in English to .

[open.source@tpv-tech.com](mailto:open.source@tpv-tech.com)

---

## 11.2

### Open Source License

#### About Open Source License

README for the source code of the parts of TP Vision Netherlands B.V. TV software that fall under open source licenses.

This is a document describing the distribution of the source code used on the TP Vision Netherlands B.V. TV, which fall either under the GNU General Public License (the GPL), or the GNU Lesser General Public License (the LGPL), or any other open source license. Instructions to obtain copies of this software can be found in the Directions For Use.

TP Vision Netherlands B.V. MAKES NO WARRANTIES WHATSOEVER, EITHER EXPRESS OR IMPLIED, INCLUDING ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, REGARDING THIS SOFTWARE. TP Vision Netherlands B.V. offers no support for this software. The preceding does not affect your warranties and statutory rights regarding any TP Vision Netherlands B.V. product(s) you purchased. It only applies to this source code made available to you.

---

## Open Source

---

### uboot (201106)

U-Boot, a boot loader for Embedded boards based on PowerPC, ARM, MIPS and several other processors, which can be installed in a boot ROM and used to initialize and test the hardware or to download and run application code.

Source: <http://www.denx.de/wiki/U-Boot>

---

### vmlinux (3.1.10)

linux kernel

Source:

<http://git.kernel.org/cgit/linux/kernel/git/stable/linux-stable.git>

---

### busybox (v1.23.2)

BusyBox is a multi-call binary that combines many common Unix utilities into a single executable. Most people will create a link to busybox for each function they wish to use and BusyBox will act like whatever it was invoked as.

Source: <http://www.busybox.net/>

---

### dlmalloc (2.8.4)

A Memory Allocator

Source:

<http://g.oswego.edu/dl/html/malloc.html>  
<ftp://gee.cs.oswego.edu/pub/misc/>

---

### iniparser (3.0)

stand-alone ini parser library in ANSI C

Source: <http://ndevilla.free.fr/iniparser/>

---

### jpeg (6b.)

Libjpeg is a widely used C library for reading and writing JPEG image files.

Source: <http://www.ijg.org>

---

### png (1.2.32)

libpng is the official PNG reference library. It supports almost all PNG features.

Source:

<http://www.libpng.org/pub/png/src/libpng-LICENSE.txt>  
<http://www.libpng.org/pub/png/>

---

### freetype (2.5.3)

FreeType is a freely available software library to render fonts.

Source: <http://www.freetype.org/license.html>

---

### libc (2.16)

The GNU C Library is used as the C library in the GNU systems and most systems with the Linux kernel.

Source: <http://www.gnu.org/software/libc/>

---

### cares (1.7.3)

c-ares is a C library for asynchronous DNS requests (including name resolves).

Source: <https://c-ares.haxx.se/>

---

### curl (7.21.3)

curl is used in command lines or scripts to transfer data. It is also used in cars, television sets, routers, printers, audio equipment, mobile phones, tablets, settop boxes, media players and is the internet transfer backbone for thousands of software applications affecting billions of humans daily.

Source: <https://curl.haxx.se/>

---

### iconv (1.13.1)

Other programs internally store strings in Unicode, to facilitate internal processing, and need to convert between internal string representation (Unicode) and external string representation (a traditional encoding) when they are doing I/O. GNU libiconv is a conversion library for both kinds of applications.

Source: <http://www.gnu.org/software/libiconv/>

---

### Xml2 (2.7.7)

Libxml2 is the XML C parser and toolkit developed for the Gnome project (but usable outside of the Gnome platform), it is free software available under the MIT License.

Source: <http://xmlsoft.org/>

---

### neon (0.30.1)

neon is an HTTP and WebDAV client library, with a C interface.

Source: <http://www.webdav.org/neon/>

---

---

### openssl-0.9.8 (1.0.0)

OpenSSL is a robust, commercial-grade, and full-featured toolkit for the Transport Layer Security (TLS) and Secure Sockets Layer (SSL) protocols.

Source: <http://www.openssl.org/source/license.html>

---

### sqlite (3.7.11)

SQLite is a self-contained, high-reliability, embedded, full-featured, public-domain, SQL database engine.

Source: <https://www.sqlite.org/>

---

### zlib (1.2.8)

interface of the 'zlib' general purpose compression library.

Source: [http://www.zlib.net/zlib\\_license.html](http://www.zlib.net/zlib_license.html)

---

### cairo (1.10.2)

Cairo is a 2D graphics library with support for multiple output devices.

Source: <https://cairographics.org/download/>

---

### libnl (3.2.24)

The libnl suite is a collection of libraries providing APIs to netlink protocol based Linux kernel interfaces.

Source: <https://github.com/tgraf/libnl>

---

### alsa (1.0.23)

The Advanced Linux Sound Architecture (ALSA) provides audio and MIDI functionality to the Linux operating system.

Source: [https://www.alsa-project.org/main/index.php/Main\\_Page](https://www.alsa-project.org/main/index.php/Main_Page)

---

### fontconfig (2.7.1)

Fontconfig is a library for configuring and customizing font access.

Source: <https://www.freedesktop.org/wiki/Software/fontconfig/>

---

---

#### icu (4.2.1)

ICU is a mature, widely used set of C/C++ and Java libraries providing Unicode and Globalization support for software applications.

Source: <http://site.icu-project.org/home>

---

#### pixman (0.19.6)

Pixman is a low-level software library for pixel manipulation, providing features such as image compositing and trapezoid rasterization.

Source: <http://www.pixman.org/>

---

#### pango (1.28.1)

Pango is a library for laying out and rendering of text, with an emphasis on internationalization.

Source: <https://www.pango.org/>

---

#### glib (2.24.2)

GLib provides the core application building blocks for libraries and applications written in C.

Source: <https://directory.fsf.org/wiki/Glib>

---

#### DFB (1.4.2)

DirectFB is a thin library that provides hardware graphics acceleration, input device handling and abstraction, integrated windowing system with support for translucent windows and multiple display layers, not only on top of the Linux Framebuffer Device. It is a complete hardware abstraction layer with software fallbacks for every graphics operation that is not supported by the underlying hardware. DirectFB adds graphical power to embedded systems and sets a new standard for graphics under Linux.

Source: <http://directfb.org/>

# Help and Support

---

## 12.1

### On-line Help

To solve any Philips TV related problem, you can consult our online support. You can select your language and enter your product model number.

Go to [www.philips.com/support](http://www.philips.com/support)

On the support site you can find your country's telephone number to contact us as well as answers to frequently asked questions (FAQs). In some countries, you can chat with one of our collaborators and ask your question directly or send a question by email. You can download new TV software or the manual to read on your computer.

---

## 12.2

### Support and Repair

For support and repair, call the Consumer Care hotline in your country. Our service engineers will take care of a repair, if necessary.

Find the telephone number in the printed documentation that came with the TV.

Or consult our website [www.philips.com/support](http://www.philips.com/support) and select your country if needed.

#### TV model number and serial number

You might be asked to provide the TV product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the TV.

#### **▲ Warning**

Do not attempt to repair the TV yourself. This may cause severe injury, irreparable damage to your TV or void your warranty.

---

# Safety and Care

---

## 13.1

### Safety

---

#### Important

Read and understand all safety instructions before you use the TV. If damage is caused by failure to follow instructions, the warranty does not apply.

---

#### Risk of Electric Shock or Fire

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips TV Consumer Care to have the TV checked before use.
- Never expose the TV, remote control or batteries to excessive heat. Never place them near burning candles, naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the TV.
- Never place heavy objects on the power cord.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Ensure that no strain is exerted on the power cord when you swivel the TV screen.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

---

#### Risk of Injury or Damage to the TV

- Two people are required to lift and carry a TV that weighs more than 25 kg or 55 lbs.
- If you mount the TV on a stand, only use the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the weight of the TV and the stand.
- When wall mounted, ensure that the wall mount can safely bear the weight of the TV set. TP Vision bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Parts of this product are made of glass. Handle with

care to avoid injury or damage.

#### Risk of damage to the TV !

Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

---

#### Risk of Injury to Children

Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the mounting surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Teach children about the dangers of climbing on furniture to reach the TV.

#### Risk of swallowing batteries !

The remote control may contain coin-type batteries which can easily be swallowed by small children. Keep these batteries out of reach of children at all times.

---

#### Risk of Overheating

Never install the TV in a confined space. Always leave a space of at least 10 cm or 4 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

---

#### Lightning Storms

Disconnect the TV from the power outlet and antenna before lightning storms. During lightning storms, never touch any part of the TV, power cord or antenna cable.

---

#### Risk of Hearing Damage

Avoid using earphones or headphones at high volumes or for prolonged periods of time.

---

## Low Temperatures

If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature reaches room temperature before connecting the TV to the power outlet.

---

## Humidity

In rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the TV glass front (on some models). To prevent this, do not expose the TV to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously while the TV is playing for a few hours.

The condensation moisture will not harm the TV or cause malfunction.

---

13.2

## Screen Care

- Never touch, push, rub or strike the screen with any object.

- Unplug the TV before cleaning.

- Clean the TV and frame with a soft damp cloth and wipe gently. Never use substances such as alcohol, chemicals or household cleaners on the TV.

- To avoid deformations and colour fading, wipe off water drops as quickly as possible.

- Avoid stationary images as much as possible.

Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

# Terms of Use

2019 © TP Vision Europe B.V. All rights reserved.

This product was brought to the market by TP Vision Europe B.V. or one of its affiliates, hereinafter referred to as TP Vision, which is the manufacturer of the product. TP Vision is the warrantor in relation to the TV with which this booklet was packaged. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips N.V. or their respective owners. TP Vision reserves the right to change products at any time without being obliged to adjust earlier supplies accordingly.

The written material packaged with the TV and the manual stored in the memory of the TV or downloaded from the Philips website [www.philips.com/TVsupport](http://www.philips.com/TVsupport) are believed to be adequate for the intended use of the system.

The material in this manual is believed adequate for the intended use of the system. If the product, or its individual modules or procedures, are used for purposes other than those specified herein, confirmation of their validity and suitability must be obtained. TP Vision warrants that the material itself does not infringe any United States patents. No further warranty is expressed or implied. TP Vision cannot be held responsible neither for any errors in the content of this document nor for any problems as a result of the content in this document. Errors reported to Philips will be adapted and published on the Philips support website as soon as possible.

Terms of warranty - Risk of injury, damage to TV or void of warranty!

Never attempt to repair the TV yourself. Use the TV and accessories only as intended by the manufacturer. The caution sign printed on the back of the TV indicates risk of electric shock. Never remove the TV cover. Always contact Philips TV Customer Care for service or repairs. Find the telephone number in the printed documentation that came with the TV. Or consult our website [www.philips.com/support](http://www.philips.com/support) and select your country if needed. Any operation expressly prohibited in this manual, or any adjustments and assembly procedures not recommended or authorised in this manual, shall void the warranty.

Pixel characteristics

This LCD/LED product has a high number of colour pixels. Although it has effective pixels of 99.999% or more, black dots or bright points of light (red, green or blue) may appear constantly on the screen. This is a structural property of the display (within common industry standards) and is not a malfunction.

CE compliance

Hereby, TP Vision Europe B.V. declares that this television is in compliance with the essential requirements and other relevant provisions of Directives 2014/53/EU (RED), 2009/125/EC (Eco Design) and 2011/65/EC (RoHS).

Compliance with EMF

TP Vision manufactures and sells many products targeted at consumers which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals. One of TP Vision's leading business principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the Electro Magnetic Field (EMF) standards applicable at the time of producing the products.

TP Vision is committed to developing, producing and marketing products that cause no adverse health effects. TP Vision confirms that, as long as its products are handled properly for their intended use, they are safe to use according to scientific evidence available today. TP Vision plays an active role in the development of international EMF and safety standards, enabling TP Vision to anticipate further developments in standardisation for early integration in its products.

# Health Care Facility Apparatus

If this TV is intended for entertainment purposes for use in a hospital, a nursing home, a medical-care center, or a similar health-care facility in which installation is limited to a nonhazardous area, it must be installed wall-mounted or ceiling mounted. It is not intended for use in a critical-care area in which a patient is treated with an externalized electrical conductor, such as a probe, a catheter, or other electrode, connected to the heart.



---

# Copyrights

---

## HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



## Dolby Audio

Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992-2015 Dolby Laboratories. All rights reserved.



## DTS 2.0 + Digital Out™

If applicable - For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, Digital Surround, and the DTS 2.0+Digital Out logo, are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries.

© DTS, Inc. All Rights Reserved.



## Other Trademarks

All other registered and unregistered trademarks are the property of their respective owners.

---

# Index

## A

Advanced Picture Contrast Settings 27  
Advanced Picture Settings 26  
Audio Description 31  
Audio Effects 31  
Audio Language 30  
Auto Clock Mode 30  
Auto Volume Levelling 28

## B

Bass 28

## C

CAM Operator Profile 29  
CAM PIN 32  
Change PIN Code 31  
Channels 23  
Child Lock 31  
Colour 26  
Colour Enhancement 26  
Colour Settings 26  
Colour Temperature 26  
Consumer Care 36  
Contrast 26

## D

Date 30  
Daylight Saving 30  
Delta Volume 28  
Digital Out Delay 29  
Digital Out Format 29  
Digital Out Levelling 29  
Digital Out Offset 29  
Dynamic Contrast 27

## E

Energy Saving 29

## G

Gamma 27

## H

Headphone Volume 28  
Hearing Impaired 31

## I

Install Channel 23  
Install Channel - Antenna 23  
Install Channel - Cable 23

## L

Language Settings 30

## M

Menu Language 30  
Mixed Volume 31  
MPEG Artefact Reduction 27

## N

Noise Reduction 27

## O

On-line User Manual 36

## P

Philips Support 36  
Picture Clean 27  
Picture Contrast Mode 27  
Picture Format 27  
Picture Style 26  
Picture, Colour 26  
Picture, Contrast 26  
Picture, Sharpness 26

## R

Repair 36  
Reset TV Settings 30

## S

Safety and Care 37  
Set PIN Code 31  
Sharpness 26  
Sleep Timer 30  
Sound Settings 28  
Sound Style 28  
Speakers or Headphones 31  
Subtitle Language 30  
Super Resolution 27  
Surround Sound 28

## T

Text Language 30  
Time 30  
Time Settings 30  
Time Zone 30

## U

Universal Access 31  
USB Hard Drive, Format 29

## V

Video Contrast 27



## Contact information

**Albania/Shqipërisë**  
+355 44806061

**Andorra**  
+34 915 909 335

**Armenia**  
0-800-01-004

**Austria/Österreich**  
0150 2842133

**Belarus/Беларусь**  
8 10 800 2000 00 04

**Belgium/België/Belgique**  
02 7007360

**Bulgaria/България**  
0 0800 1154426  
+359 2 4916273

**Croatia/Hrvatska**  
0800 222 782

**Czech Republic/Česká republika**  
800 142100

**Denmark/Danmark**  
352 587 61

**Estonia/Eesti Vabariik**  
800 0044 307

**Finland/Suomi**  
09 229 019 08

**France**  
01 57324070

**Georgia/ საქართველო**  
800 00 00 80

**Germany**  
0696 640 4383

**Greece/Ελλάδα**  
0 0800 4414 4670

**Greece Cyprus**  
800 92 256

**Hungary/Magyarország**  
068 001 85 44  
(06 1) 700 8151

**Republic of Ireland/Poblacht na hÉireann**  
1 601 1161

**Northern Ireland/Tuaisceart Éireann**  
1 601 1161

**Italy/Italia**  
02 4528 7030

**Kazakhstan/Қазақстан**  
8 10 800 2000 0004

**Kosovo/Kosovës**  
+355 44806061

**Latvia/Latvija**  
800 03 448

**Lithuania/Lietuva**  
880 030 049

**Luxembourg/Luxemburg**  
26 84 3000

**Montenegro**  
+ 382 20 240 644

**Netherlands/Nederlands**  
010 4289533

**Norway/Norge**  
22 70 82 50

**Poland/Polska**  
022 203 0327

**Portugal**  
0800 780 902

**Romania/România**  
03 727 66905  
031 6300042

**Russia/Россия**  
8 (800) 220 0004

**Serbia/Srbija**  
+ 381 11 40 30 100

**Slovakia/Slovensko**  
0800 0045 51

**Slovenia**  
0800 80 255

**Spain/España**  
915 909 335

**Sweden/Sverige**  
08 6320 016

**Switzerland/Schweiz/Suisse**  
223 102 116

**Turkey/Türkiye**  
0 850 222 44 66

**Ukraine/Україна**  
0 800 500 480

**United Kingdom**  
020 7949 0069

This information is correct at the time of print. For updated information, see [www.philips.com/support](http://www.philips.com/support).



Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips N.V. or their respective owners.  
2019 © TP Vision Europe B.V. All rights reserved.  
[www.philips.com](http://www.philips.com)

