


Anson - Executive Bookcase

ANS-MBK




ASSEMBLY INSTRUCTIONS


Anson
Executive Bookcase

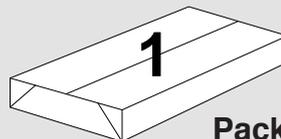

Pack 1:
Top & Base Pack
AN-MBK-TBAS

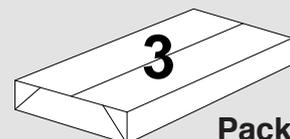


Pack 3:
Side Pack
AN-MBK-SID


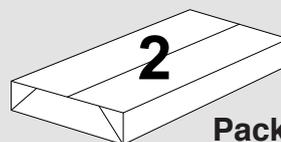


Pack 2:
Back Pack
AN-MBK-BCK


TOOLS REQUIRED
FOR ASSEMBLY

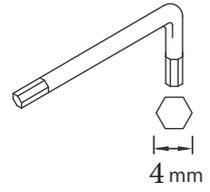


DONT STRUGGLE
2 MAN LIFT

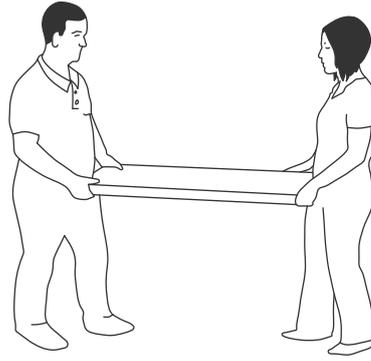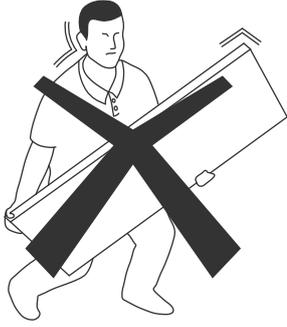


ALWAYS HANDLE
ITEMS WITH CARE

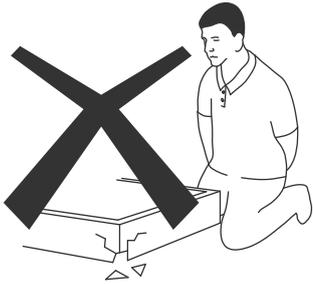

IF UNSURE CALL
FOR ASSISTANCE

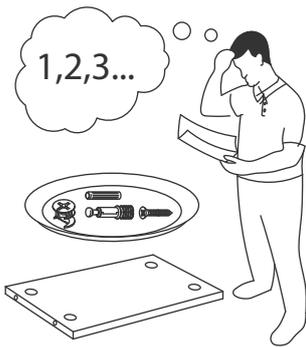


KEEP FITTINGS AWAY
FROM CHILDREN

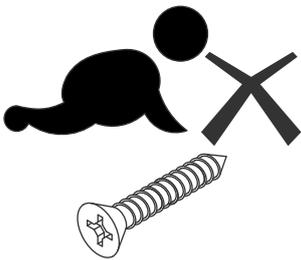



Please check that you have all the panels


AN-MBK-TBAS

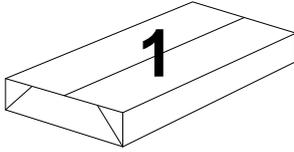

PACK 1:
1 x Top, Base & Shelf Pack




AN-MBK-SID

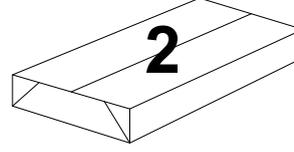

PACK 2:
1 x Side Pack



AN-MBK-BCK

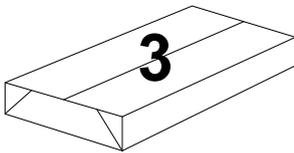

PACK 3:
1 x Back Pack



Please check that you have all the fittings

FITTINGS SUPPLIED



Quick-fit Pin

Size
24mm

**PCS
20**



Quick-fit Cam

Size
15mm dia.

**PCS
20**



Rafix Pin

Size
15mm

**PCS
6**



Rafix Cam

Size
25mm dia.

**PCS
6**



Wooden Dowel

Size
35mm


**PCS
16**

ANSON BOOKCASE ASSEMBLY

1

Step 1


Unpack your Anson bookcase packs and please recycle all packaging.

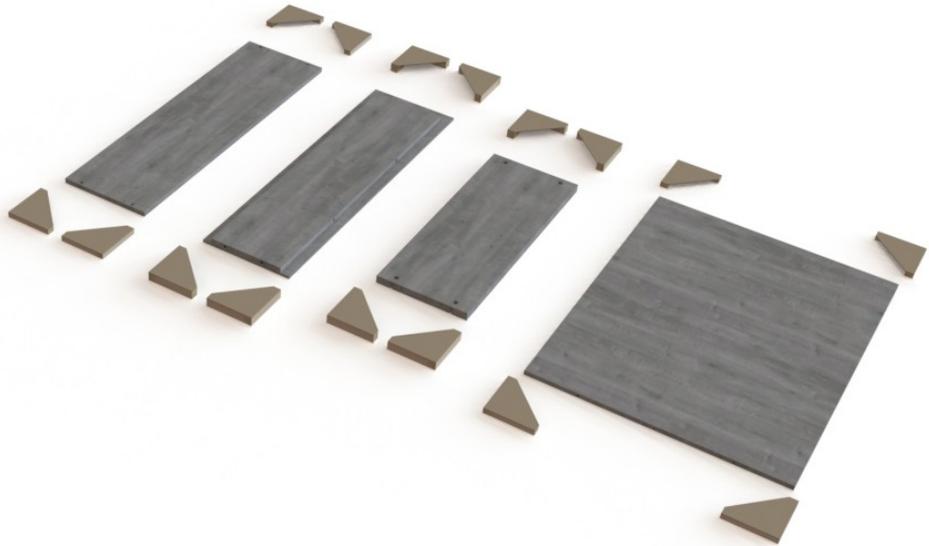

2

Step 2

Pre-assemble the fittings to all the side, back top & base panels as shown.

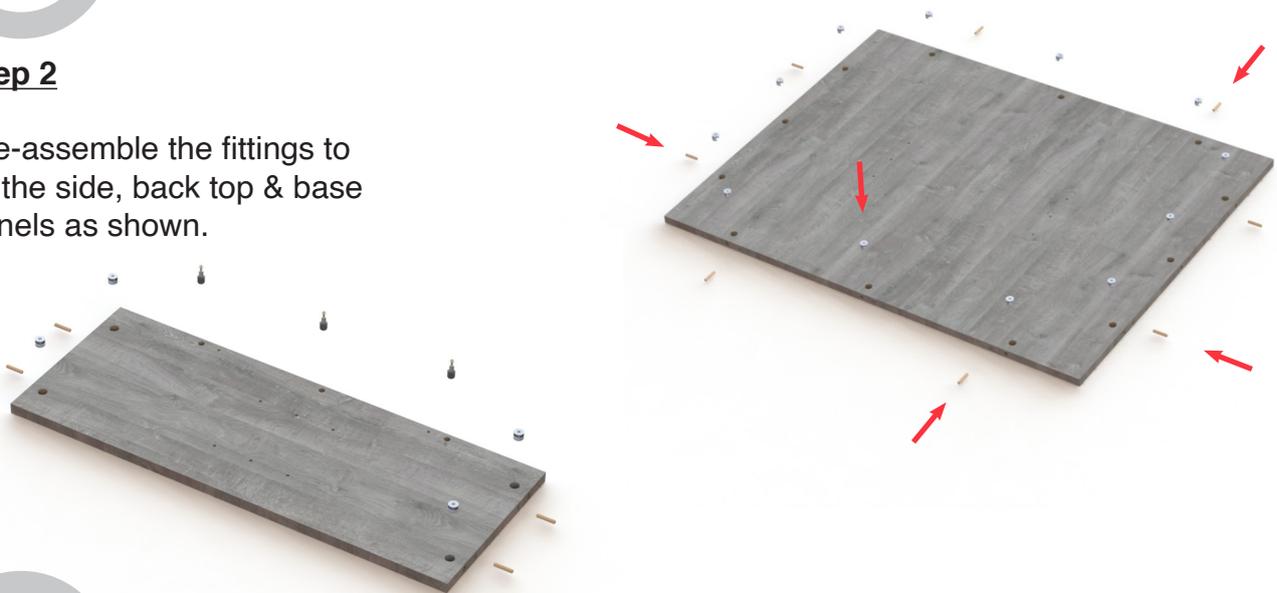


3

Step 3

Assemble the back & sides by aligning the pins in the sides with the cams located in the back panel as shown.

Tighten the cams on the back panel by turning them clockwise.

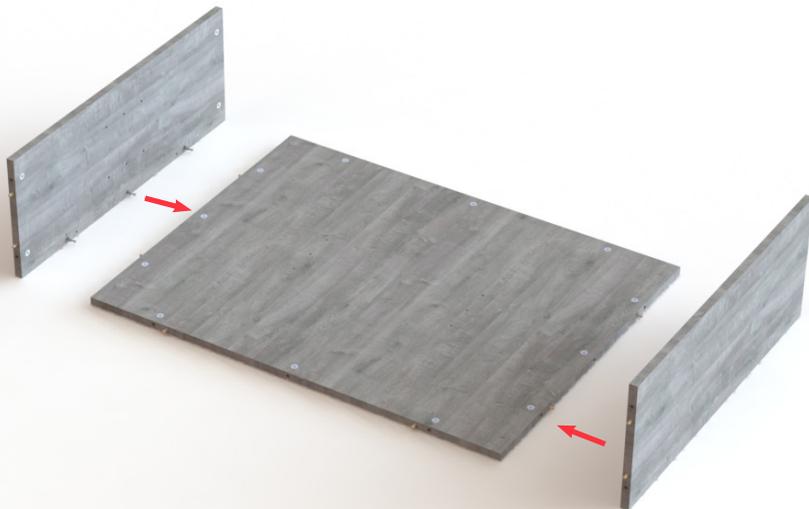


ANSON BOOKCASE ASSEMBLY

4

Step 4

Position the top and base and again aligning the pins in the top and base with the cams located in the back & side panels as shown.

Tighten the cams on the back & side panels by turning them clockwise.

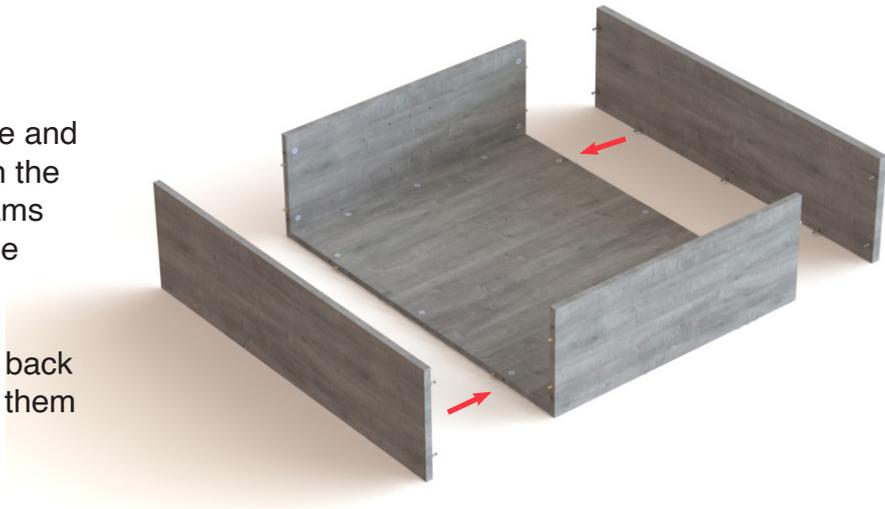


5

Step 5

Attach the rafx cams into the shelf as shown.



Attach the rafx pins into the desired location in the sides as shown, and tighten by turning clockwise.

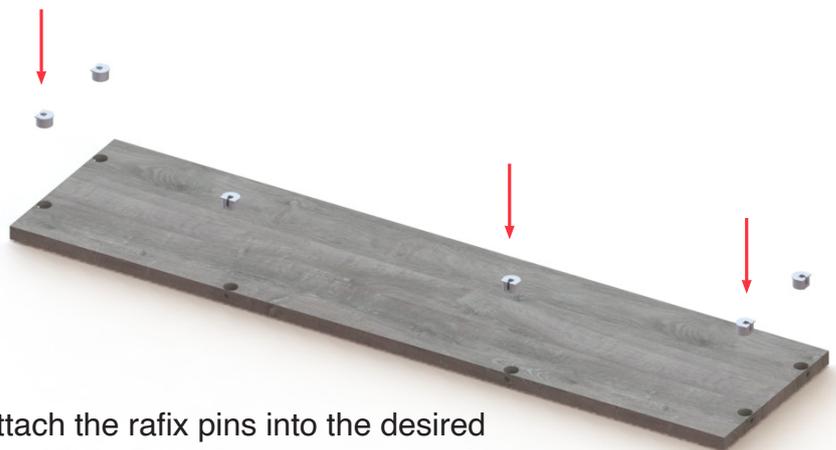

6

Step 6

Attach the shelf by locating the cams to the pins as shown. Once in position tighten from the underside of the shelf turning clockwise.

