


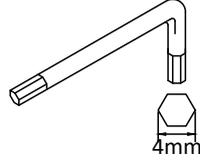
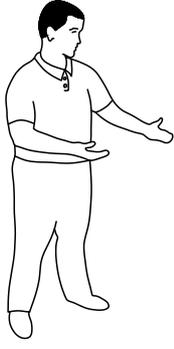



**TOOLS REQUIRED  
FOR ASSEMBLY**

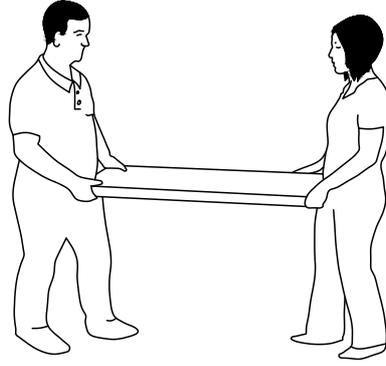


**DONT STRUGGLE  
2 MAN LIFT**

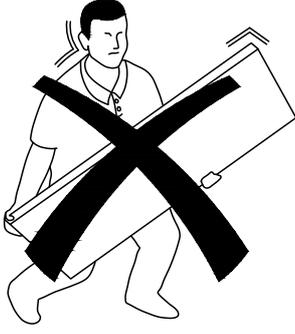

**ALWAYS HANDLE  
ITEMS WITH CARE**

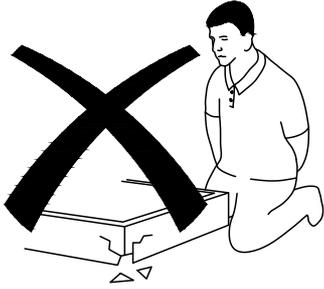

**IF UNSURE CALL  
FOR ASSISTANCE**

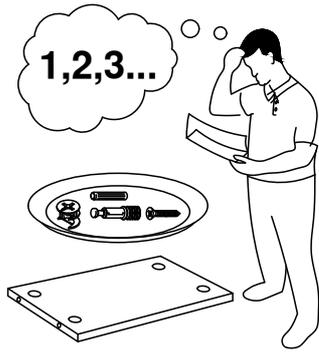

**KEEP FITTINGS AWAY  
FROM CHILDREN**








# Please check that you have all the panels!




SINGLE TOP AND BASE

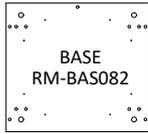

LOW SIDES AND SHELF

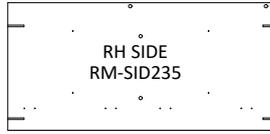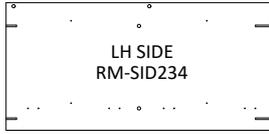


SINGLE LOW BACK

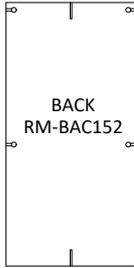

# Please check that you have all the hardware!

QUANTITY - 8




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 8




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 5

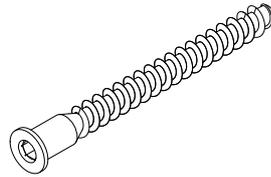


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 5

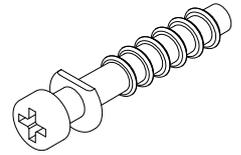


CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

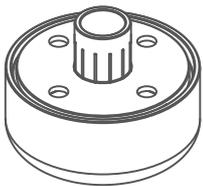


50mm ADJUSTABLE FOOT

QUANTITY - 8



3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1


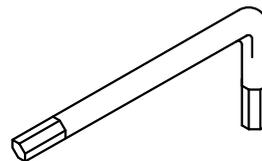


ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.



1

**Step 1**  
Insert pins into the pre drilled holes on the LH side panel.

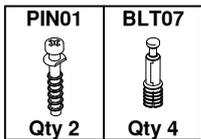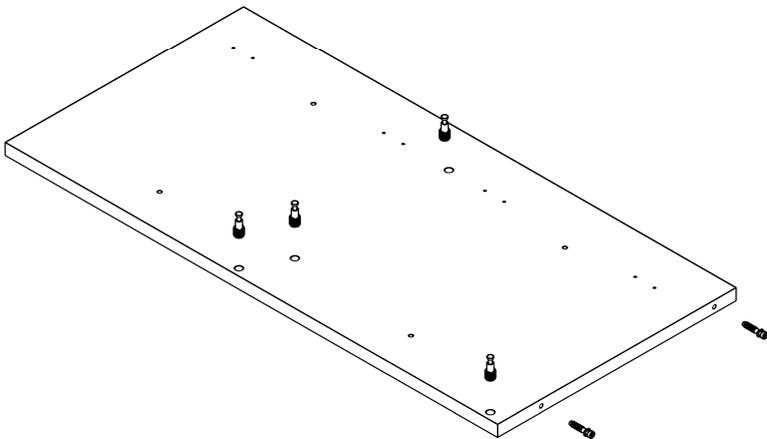


2

**Step 2**  
Insert pins into the pre drilled holes on the RH side panel.

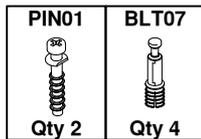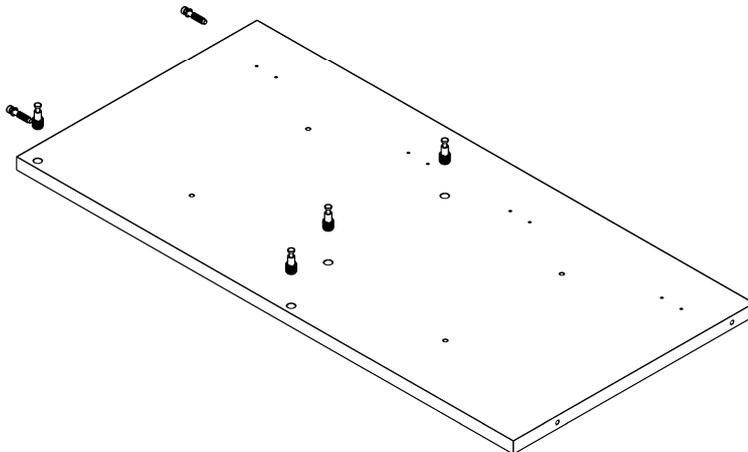



3

**Step 3**  
Insert cams into the pre drilled holes on the shelf panel.

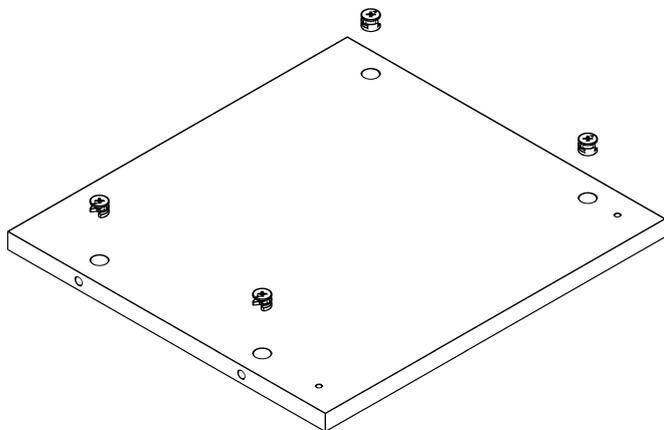

4


**Step 4**  
Insert cams & pins into the pre drilled holes on the back panel.

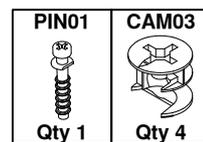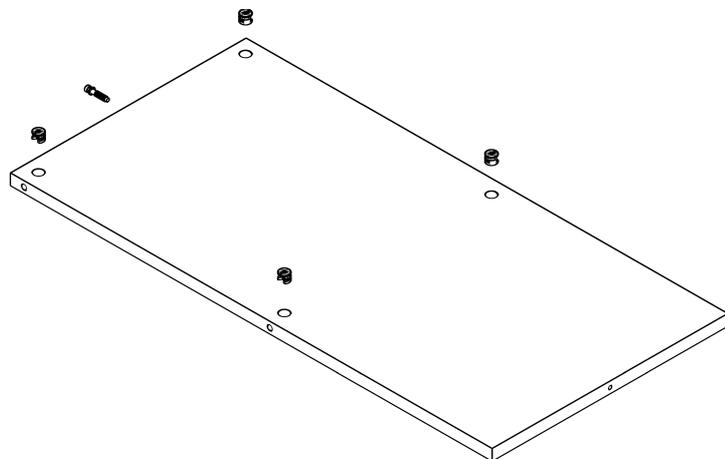

5

**Step 5**  
**Attach shelf to the LH side panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

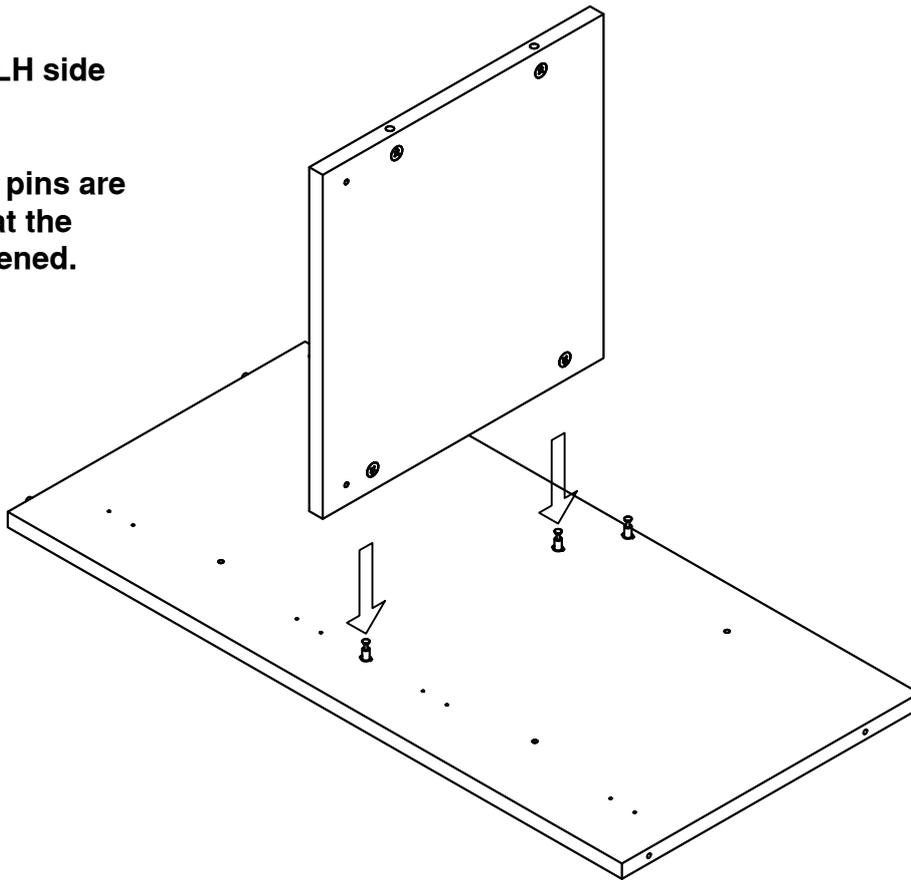

6

**Step 6**  
**Attach back panel to the LH side panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

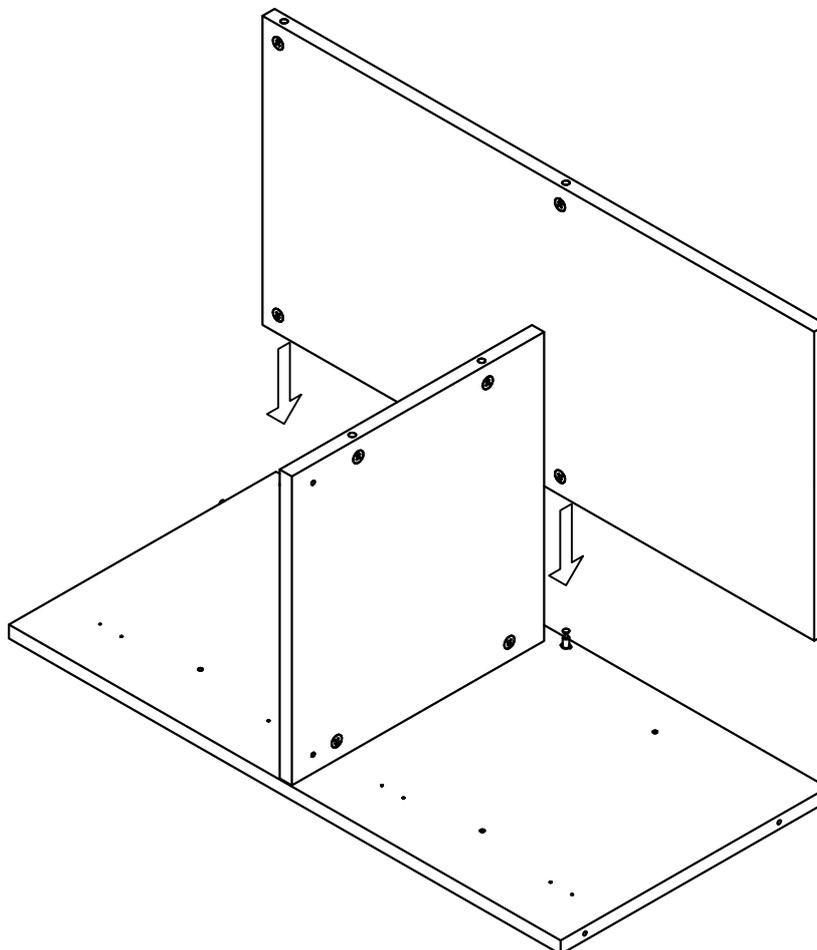

7

**Step 7**  
**Attach the RH side panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

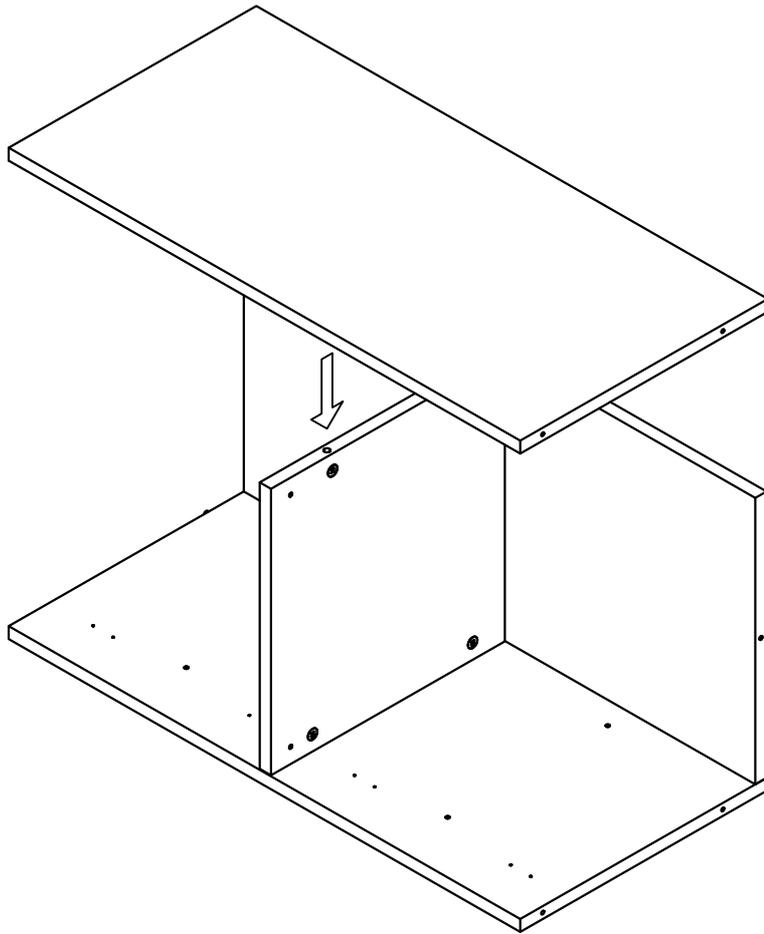

8

**Step 8**  
**Attach the top panel.**

Once the cams and pins are engaged ensure that the cams are fully tightened.

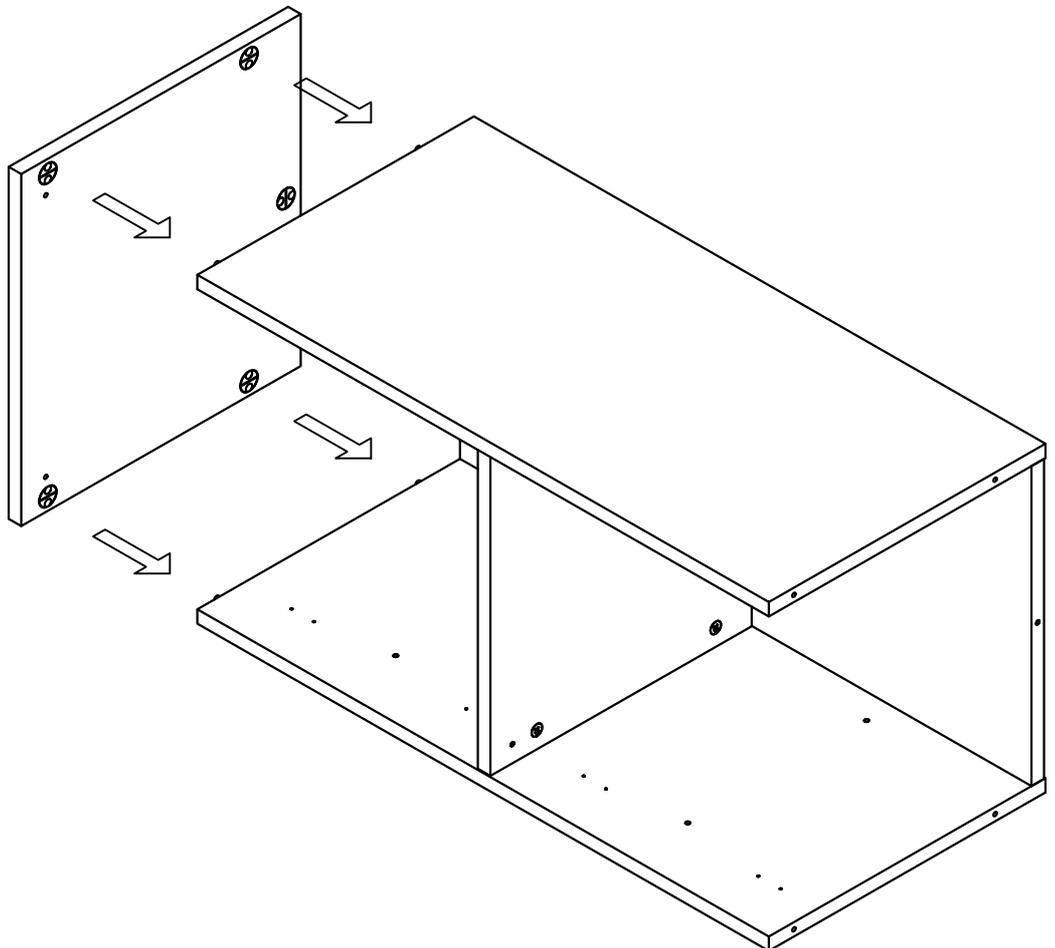


9


**Step 9**  
Attach the base to the unit using the confirmat screws provided.

A 4mm Allen key is required to insert the screws.

Ensure they are fully screwed in before attempting to attach the adjustable feet.

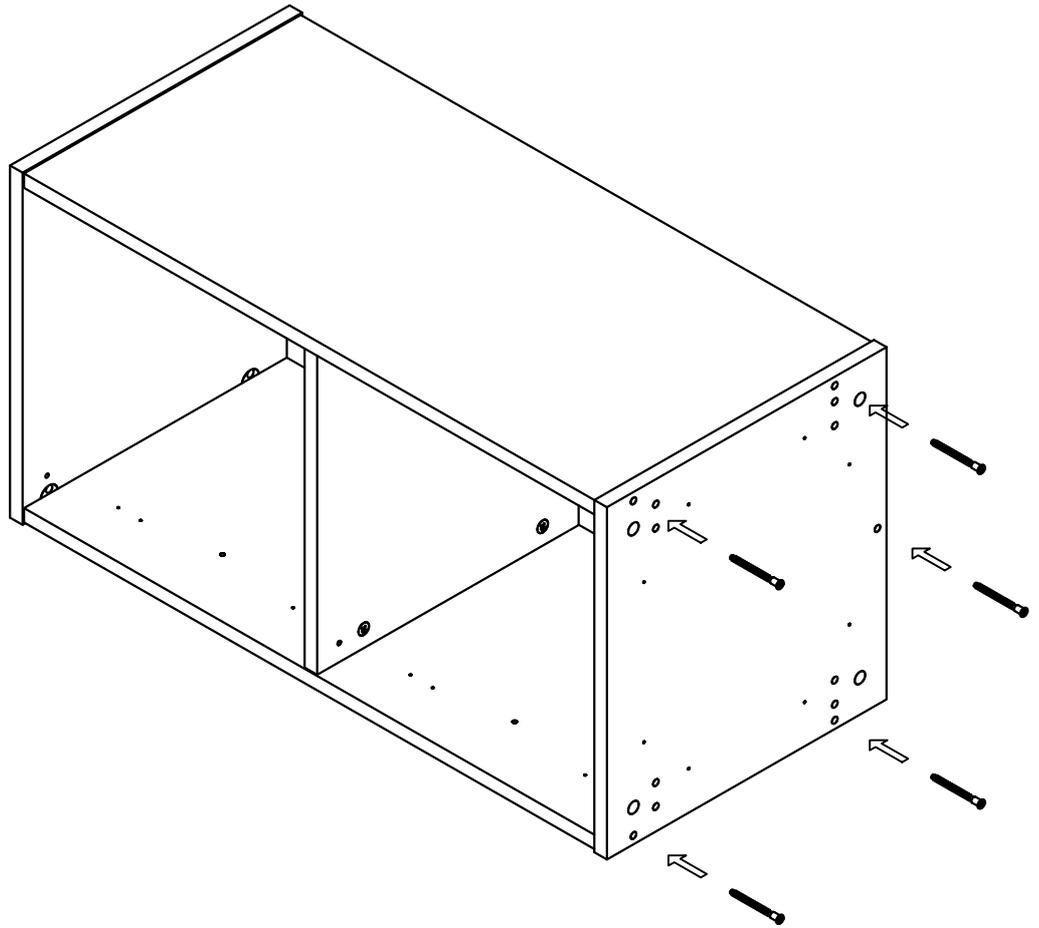

QUANTITY - 5

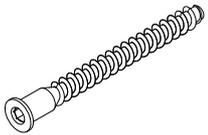


70mm CONFIRMAT SCREW  
RM-CFM02

10

**Step 10**  
Attach the 4 adjustable feet inner housings to the base of the unit.

Each foot should be attached using 2 of the 3.5 x 15mm wood screws provided.

Once attached screw on the adjustable foot outer housing.

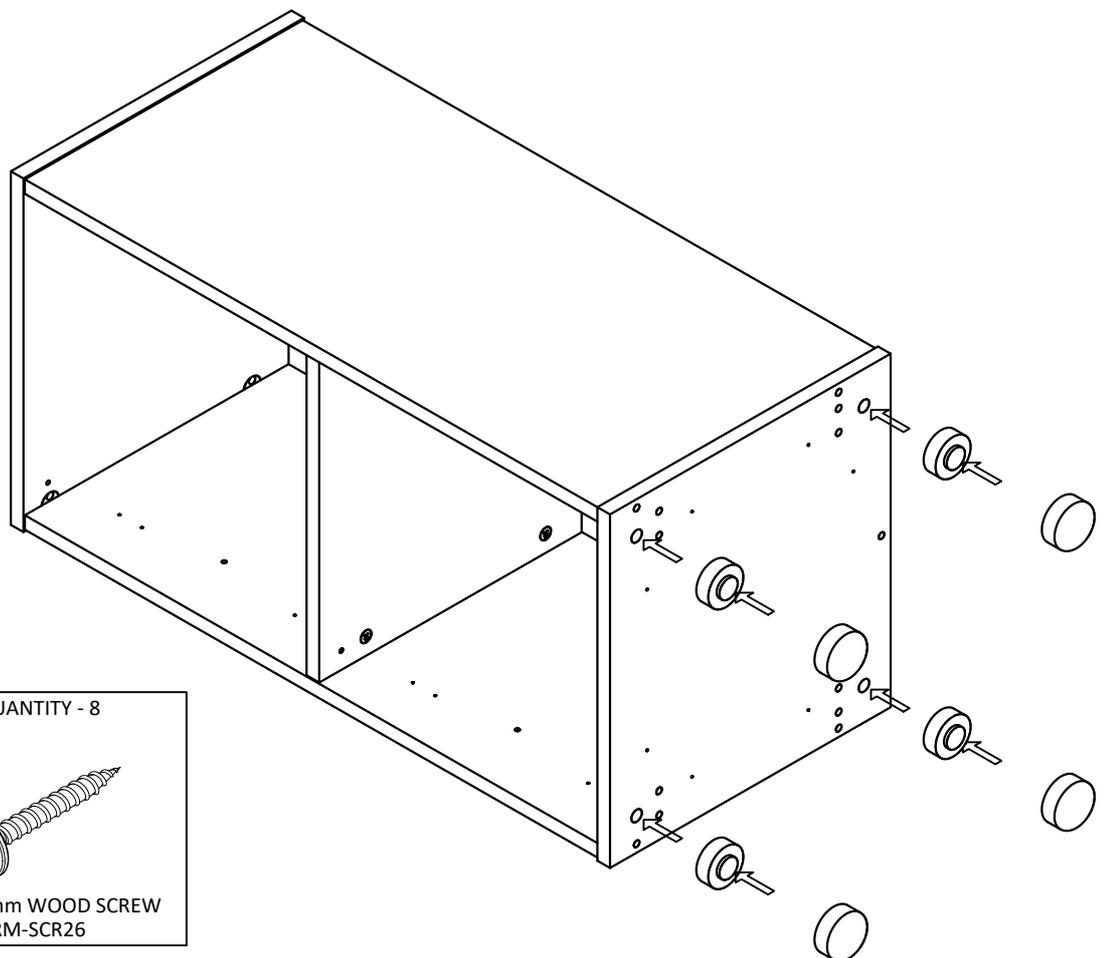

QUANTITY - 4





50mm ADJUSTABLE FOOT

QUANTITY - 8





3.5 x 15mm WOOD SCREW  
RM-SCR26

**Step 11**  
**Stand the unit upright &**  
**position in desired location.**




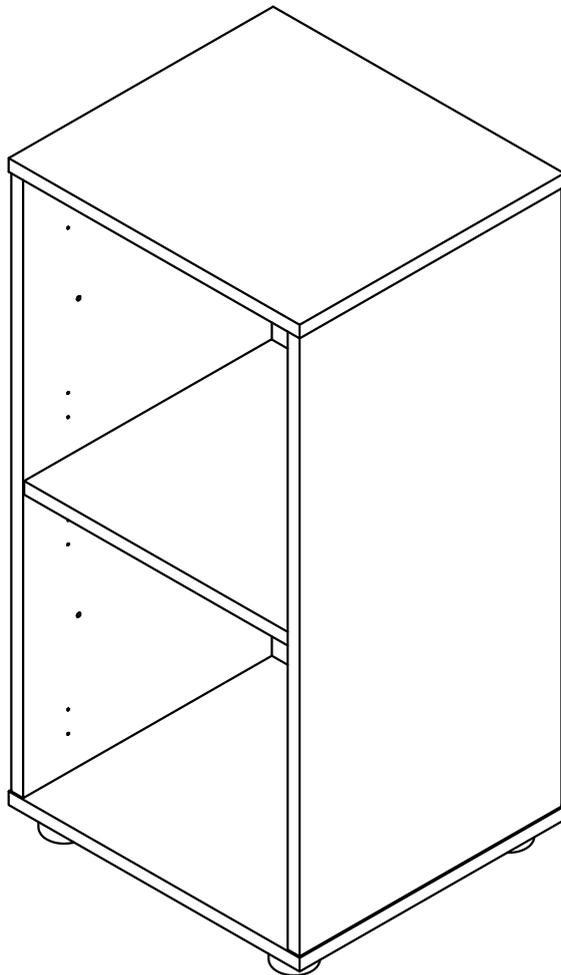
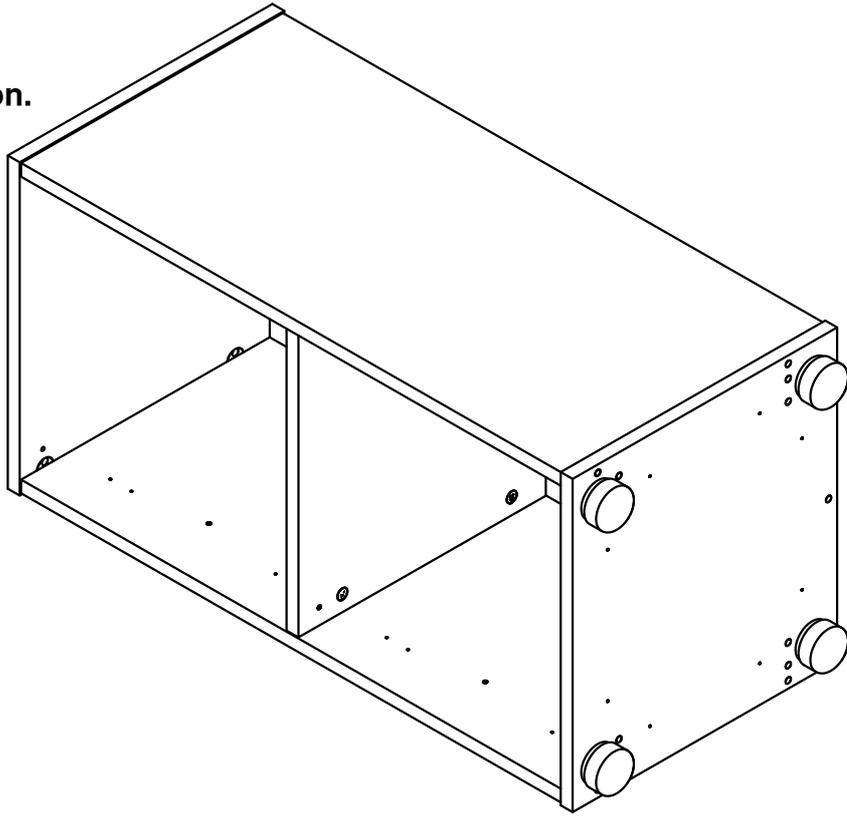


# UCS2-2

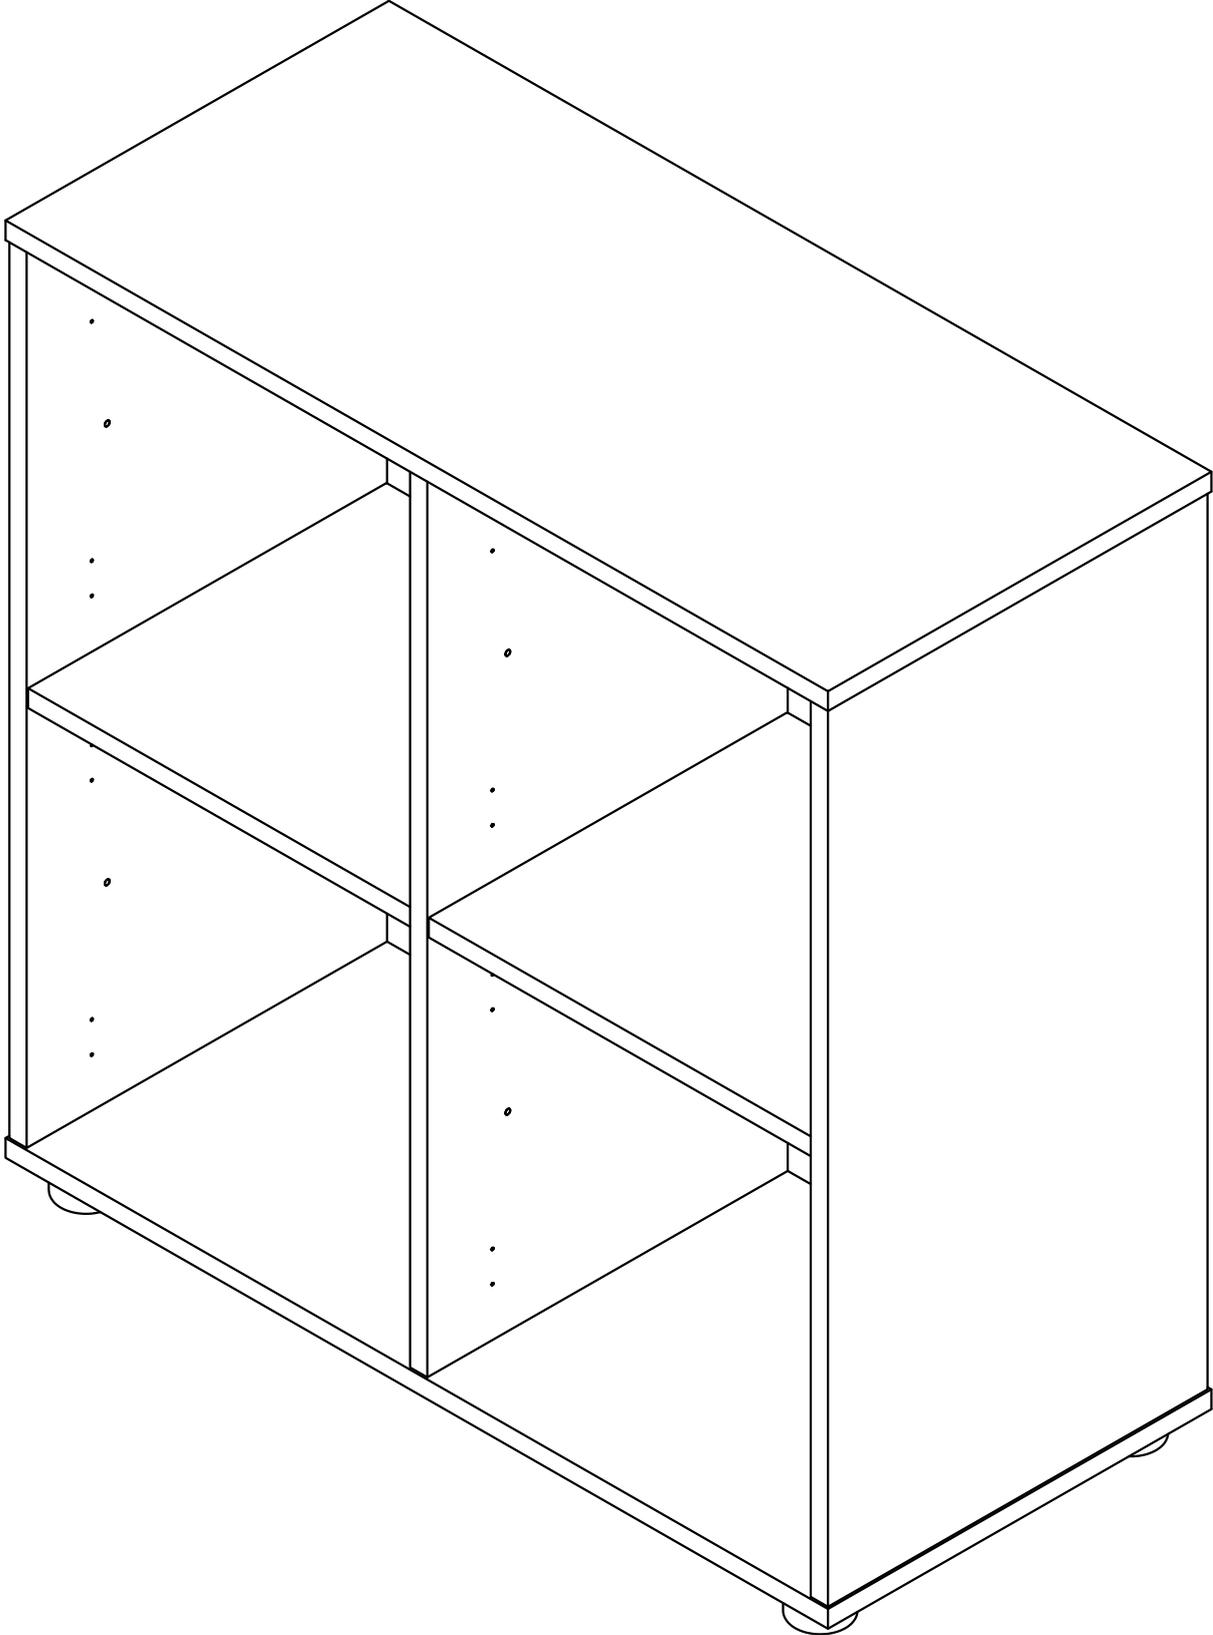




# Please check that you have all the panels!

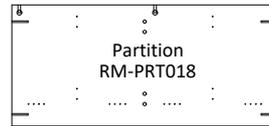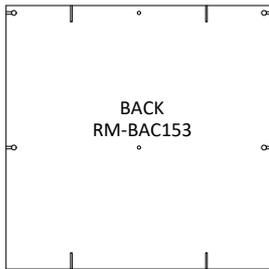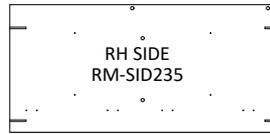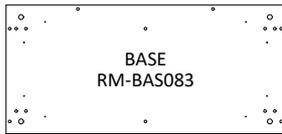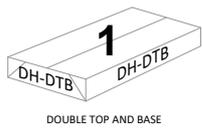

# Please check that you have all the hardware!

QUANTITY - 14




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 14




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 6

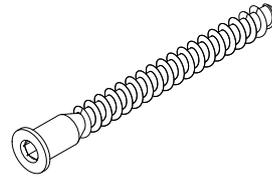


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 6

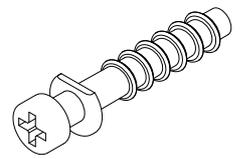


CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

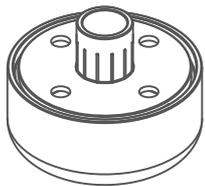


50mm ADJUSTABLE FOOT

QUANTITY - 8



3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1


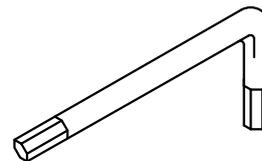


ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.



1

**Step 1**  
Insert pins into the pre drilled holes on the LH side panel.

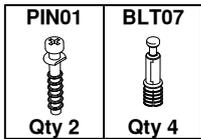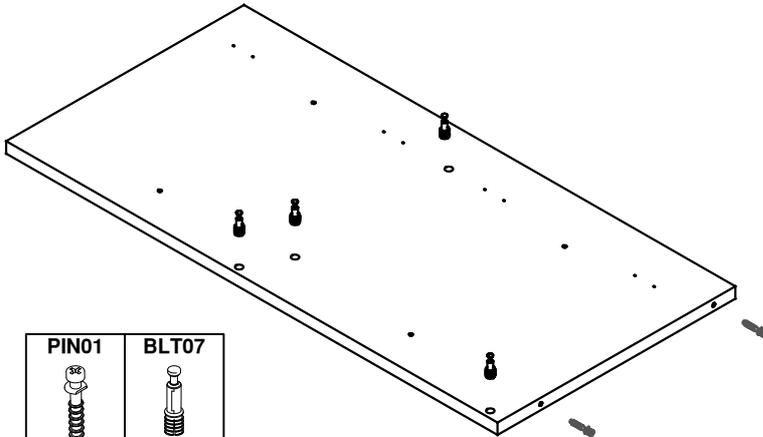


2

**Step 2**  
Insert pins into the pre drilled holes on the RH side panel.

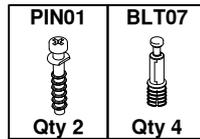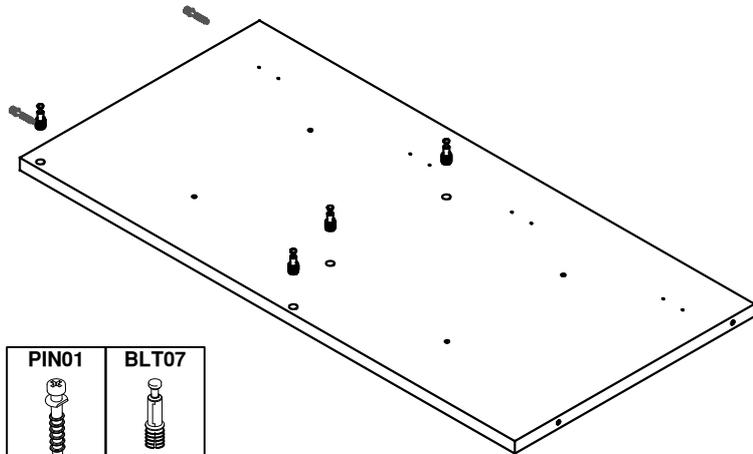



3

**Step 3**  
Insert cams into the pre drilled holes on the shelf panels. Repeat for both shelves.

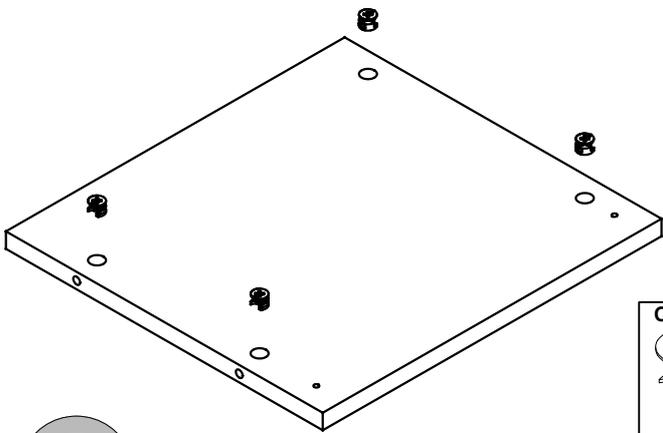



4

**Step 4**  
Insert cams & pins into the pre drilled holes on the back panel.

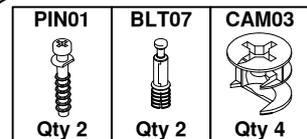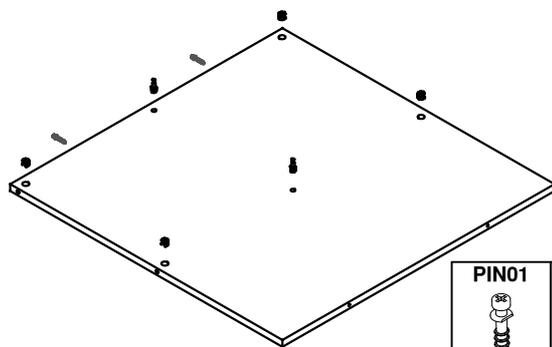

5


**Step 5**  
Insert the cam and pin fittings first before turning the partition panel over to insert the remaining pins.

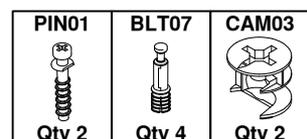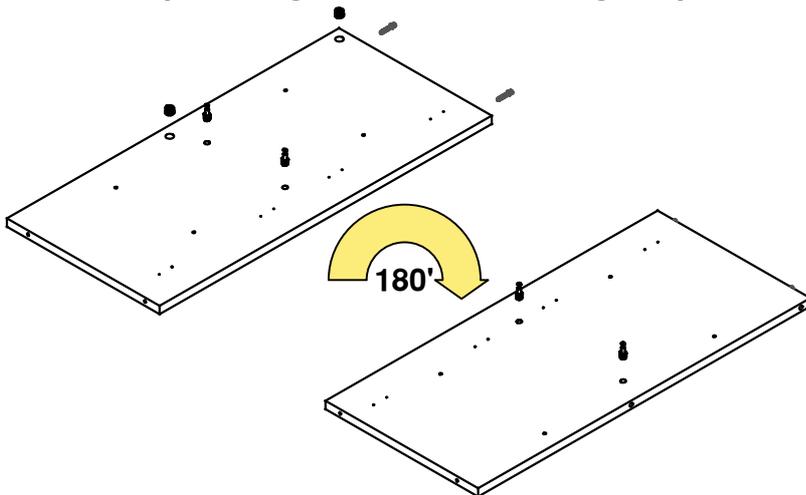

6

**Step 6**  
Attach partition panel to back panel.


Once the cams and pins are engaged ensure that the cams are fully tightened.

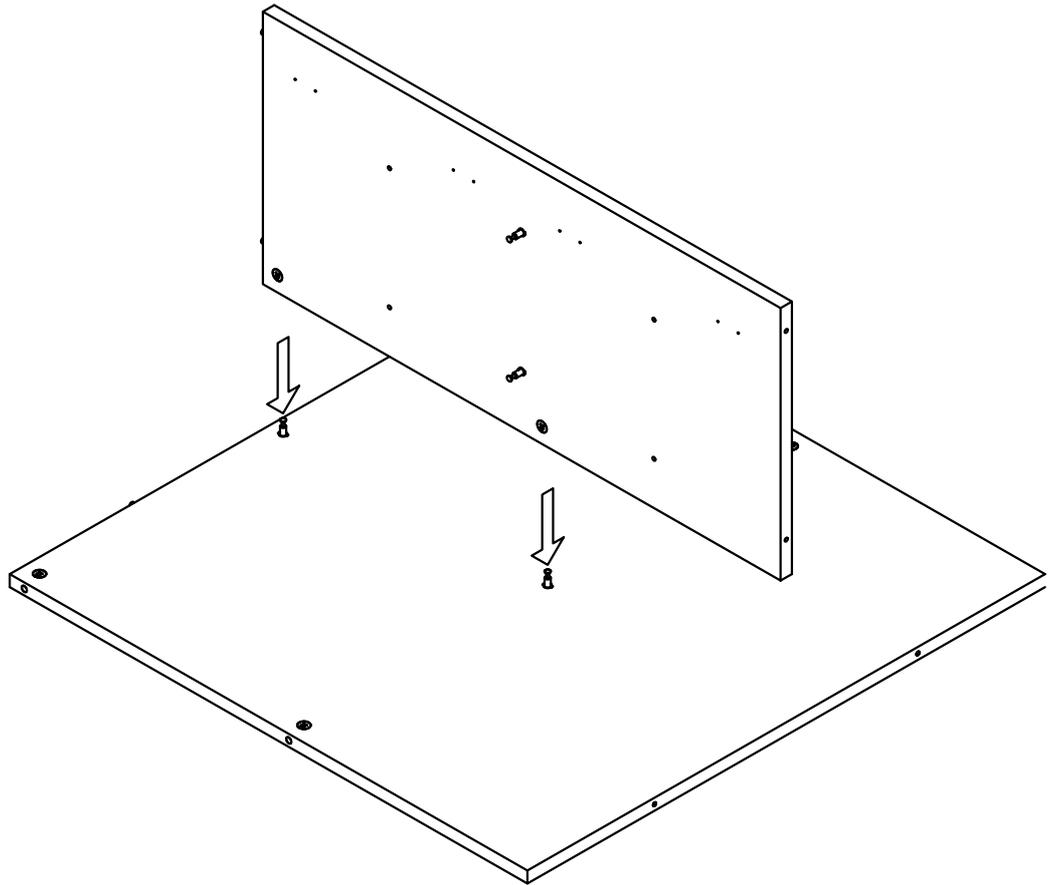

7


**Step 7**  
Attach shelves to either side of partition.

Once the cams and pins are engaged ensure that the cams are fully tightened.

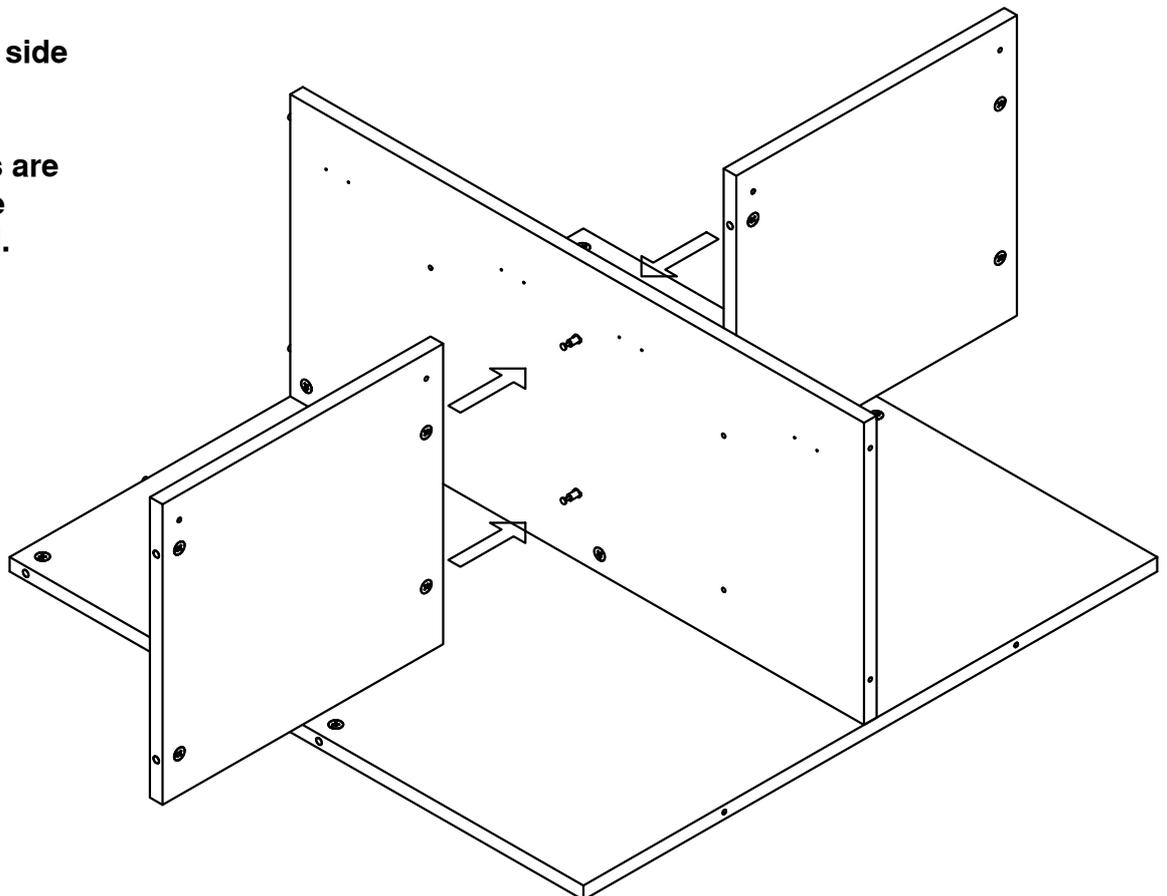


**Step 8**  
Attach the side panels to unit.

Once the cams and pins are engaged ensure that the cams are fully tightened.

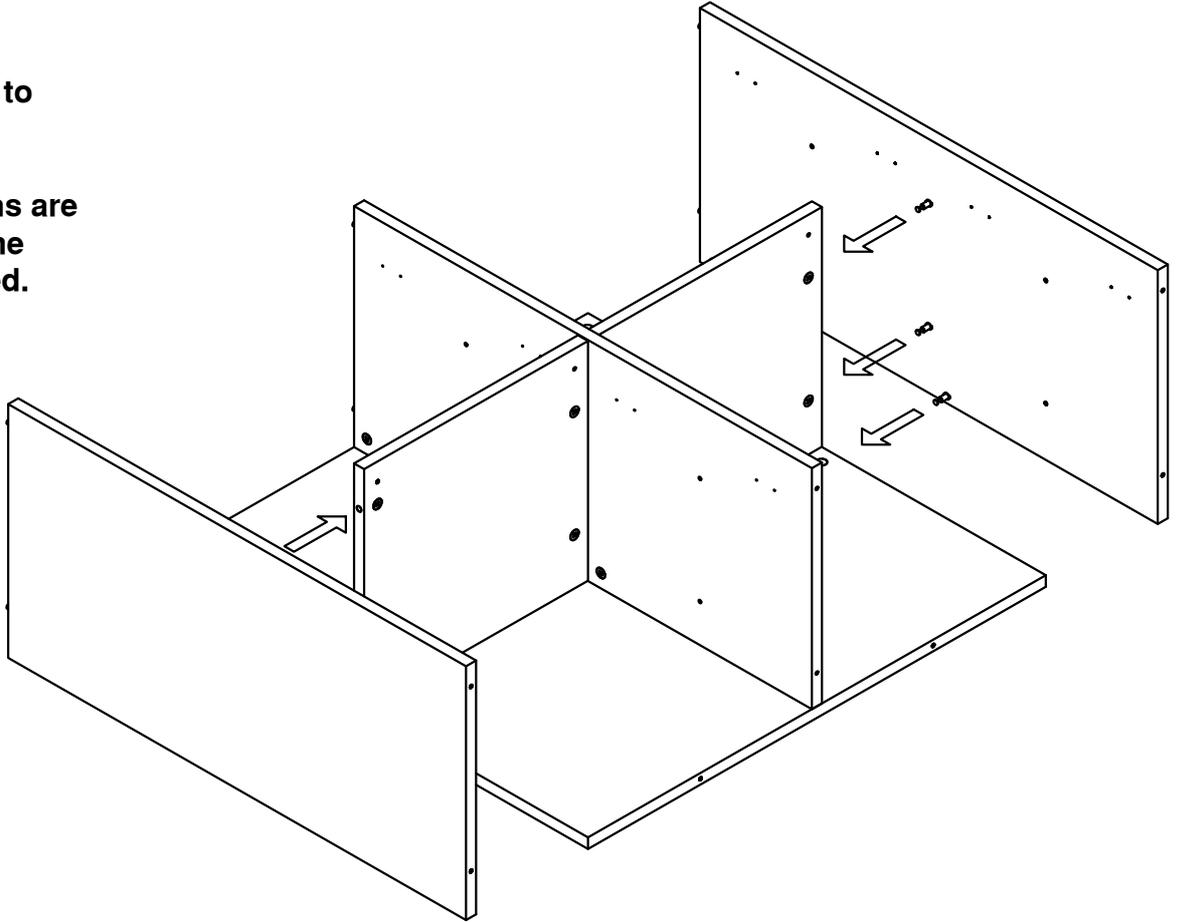

**Step 9**  
Attach top panel to unit.

Once the cams and pins are engaged ensure that the cams are fully tightened.

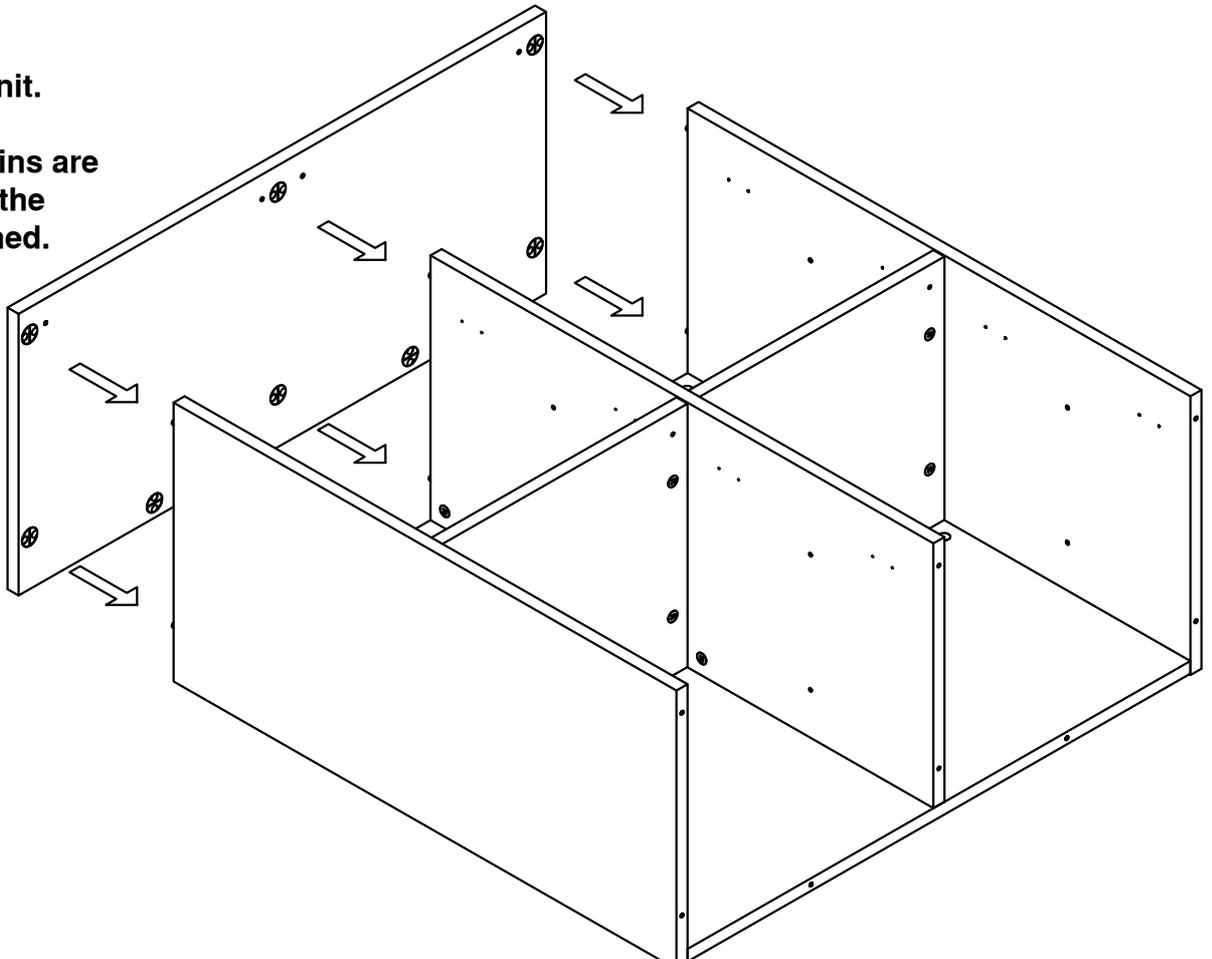


10


**Step 10**  
Attach the base to the unit using the confirmat screws provided.

A 4mm Allen key is required to insert the screws.

Ensure they are fully screwed in before attempting to attach the adjustable feet.

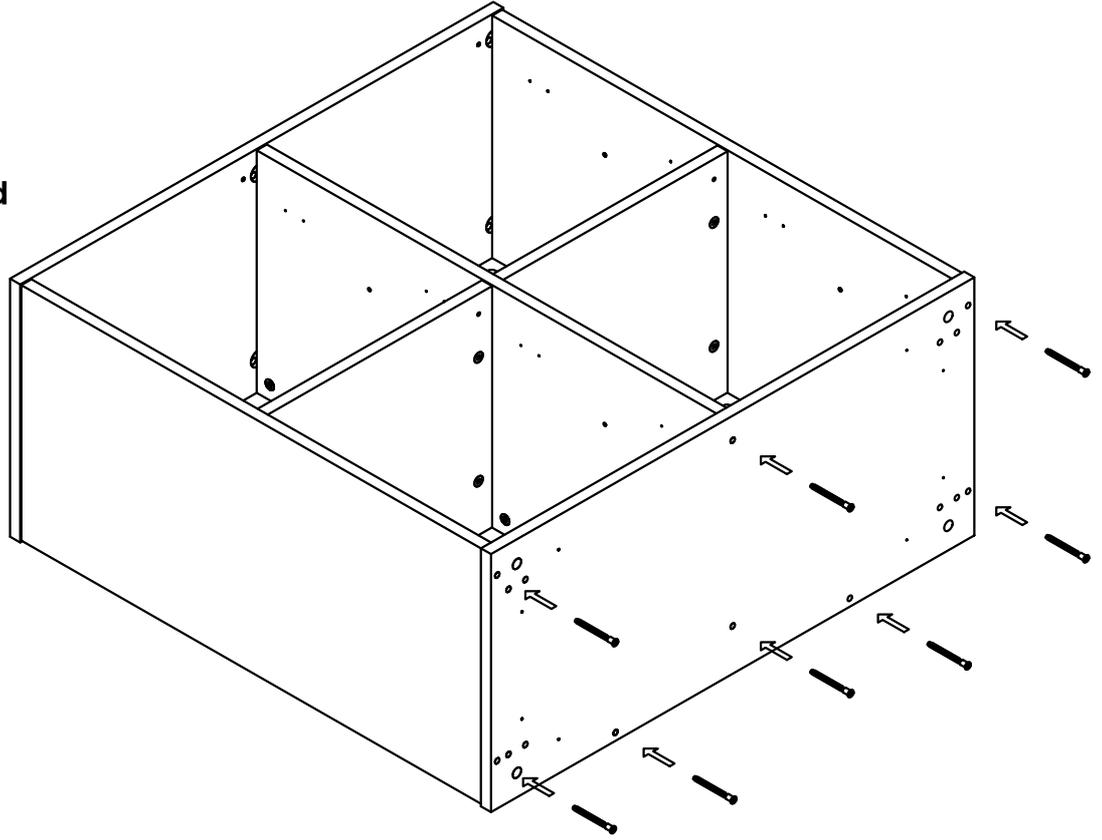

QUANTITY - 8

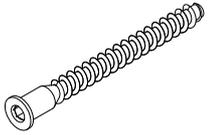


70mm CONFIRMAT SCREW  
RM-CFM02

11

**Step 11**  
Attach the 4 adjustable feet inner housings to the base of the unit.

Each foot should be attached using 2 of the 3.5 x 15mm wood screws provided.

Once attached screw on the adjustable foot outer housing.

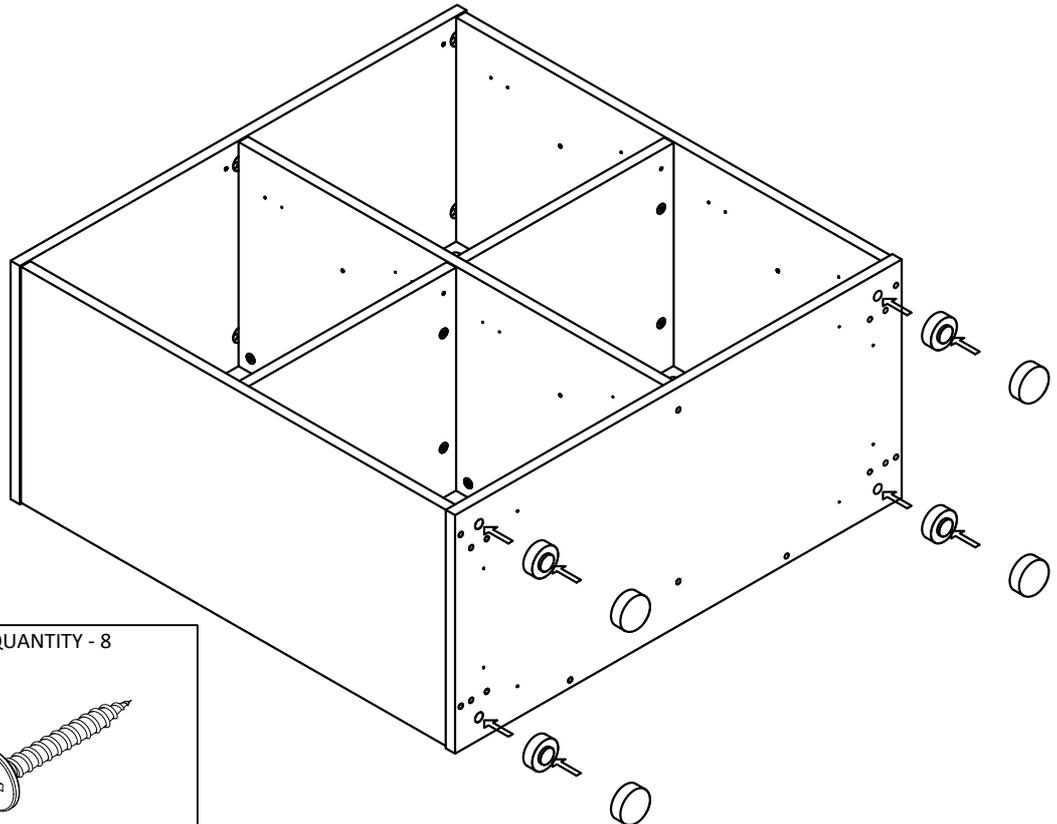

QUANTITY - 4





50mm ADJUSTABLE FOOT

QUANTITY - 8




3.5 x 15mm WOOD SCREW  
RM-SCR26

**Step 12**  
**Stand the unit upright &**  
**position in desired location.**

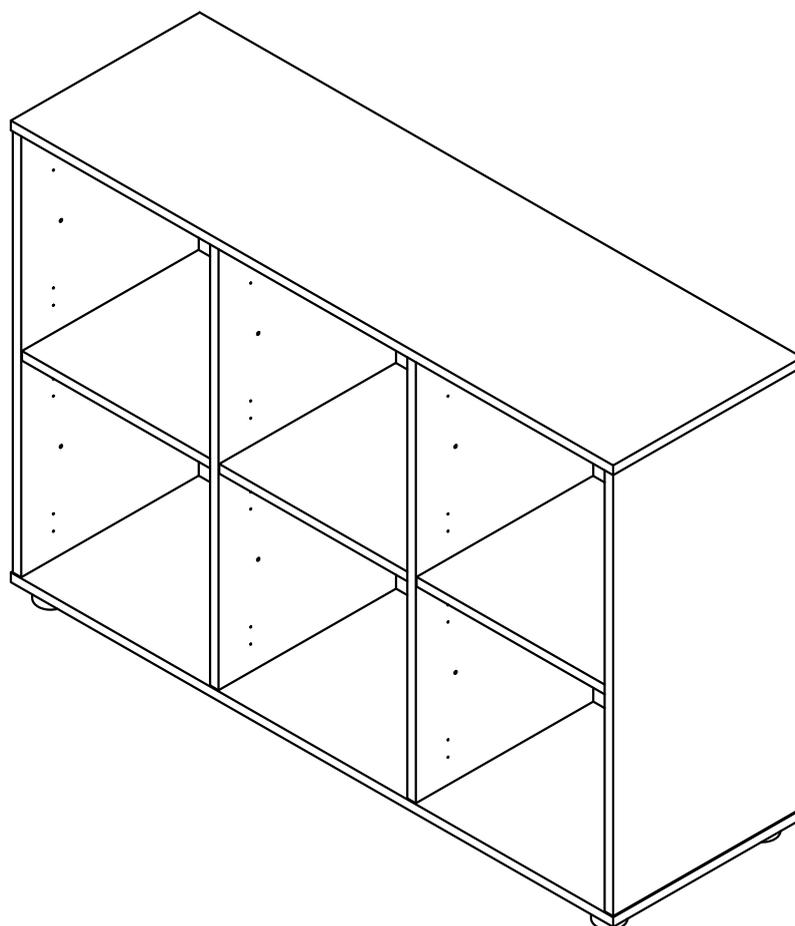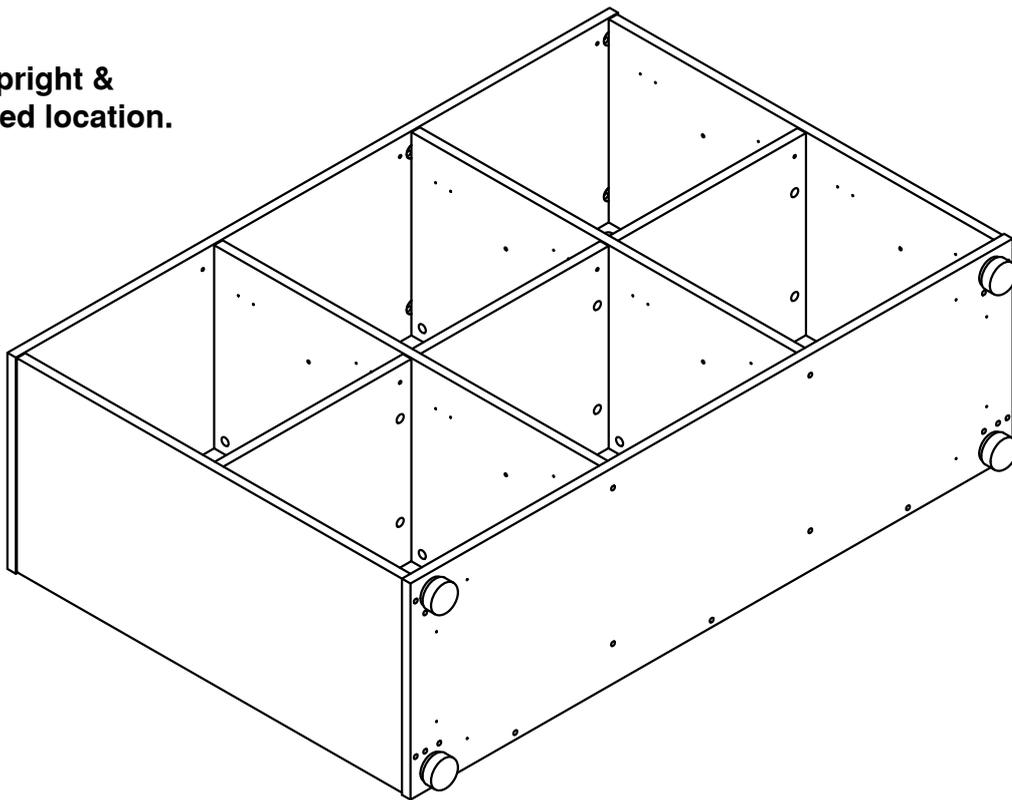


# UCS2-3

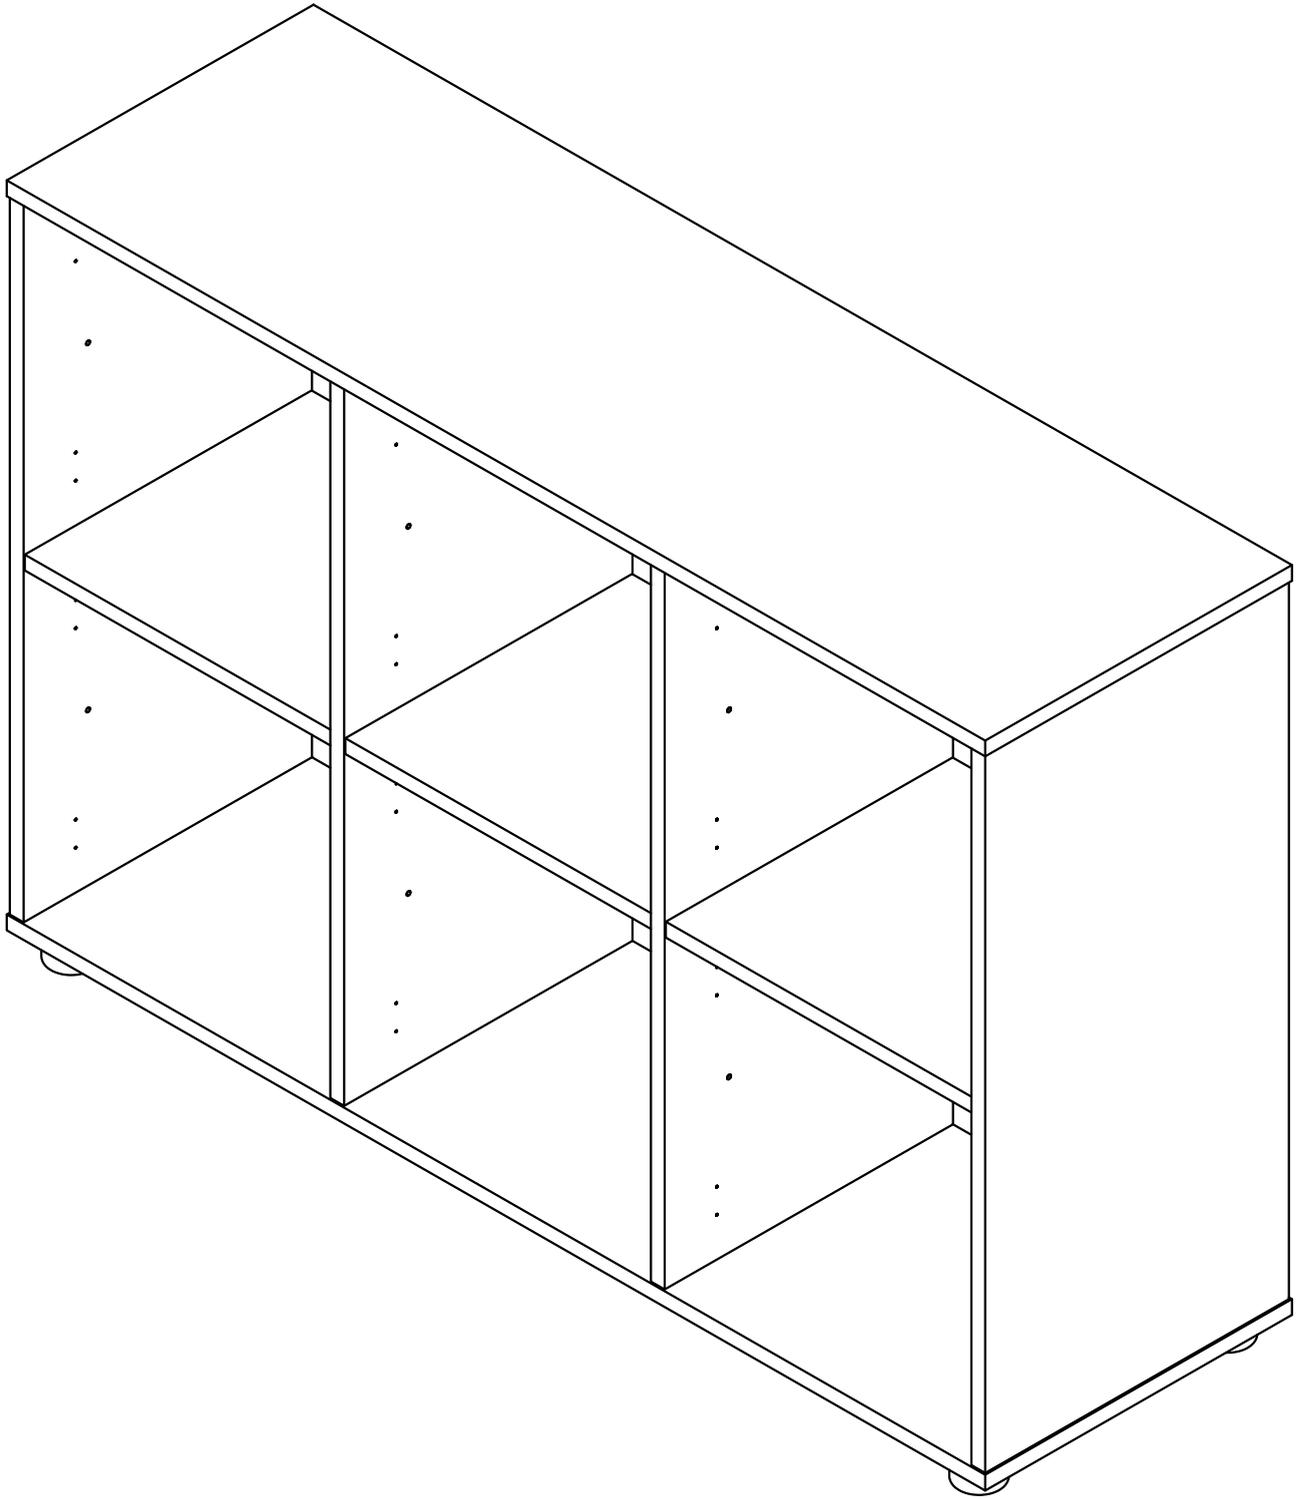






# Please check that you have all the panels!




TRIPLE TOP AND BASE

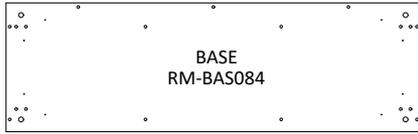


LOW SIDES AND SHELF

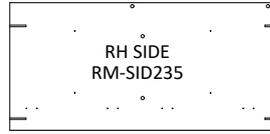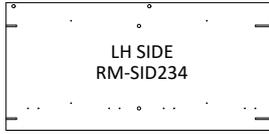



TRIPLE LOW BACK

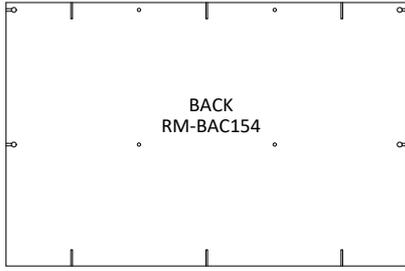

LOW PARTITION & SHELF

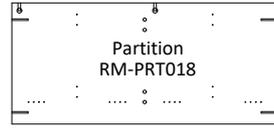


LOW PARTITION & SHELF

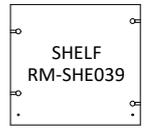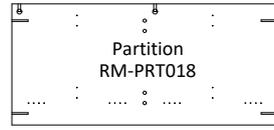

# Please check that you have all the hardware!

QUANTITY - 20




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 20




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 11

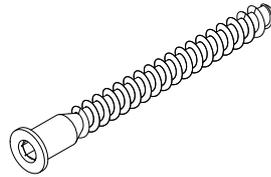


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 11

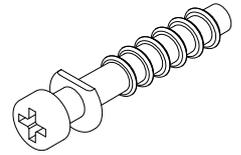


CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

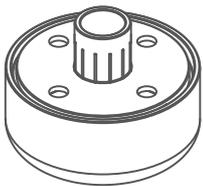


50mm ADJUSTABLE FOOT

QUANTITY - 8



3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1


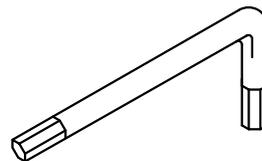


ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.



1

**Step 1**  
Insert pins into the pre drilled holes on the LH side panel.

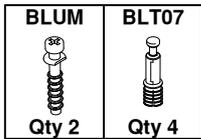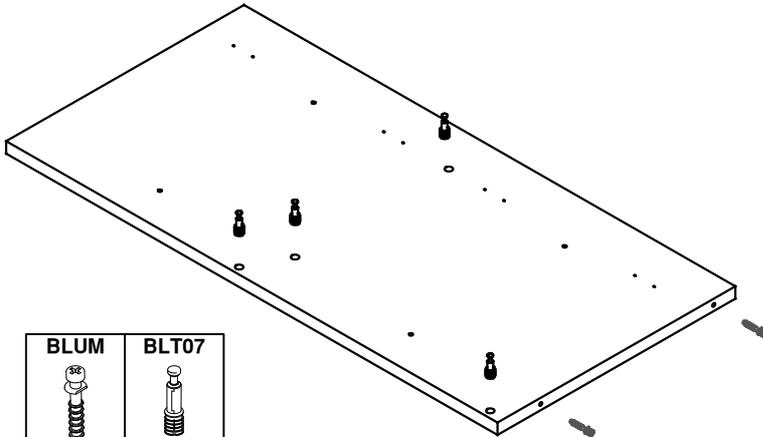



2

**Step 2**  
Insert pins into the pre drilled holes on the RH side panel.

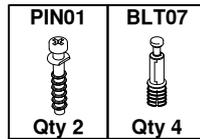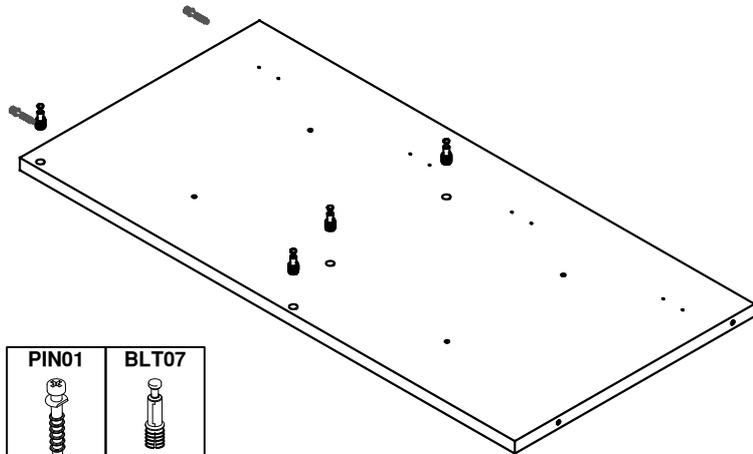



3

**Step 3**  
Insert cams into the pre drilled holes on the shelf panels. Repeat for all 3 shelves.

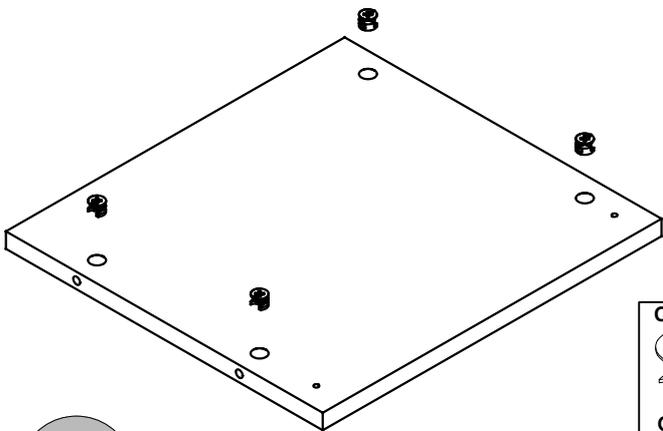



4

**Step 4**  
Insert cams & pins into the pre drilled holes on the back panel.

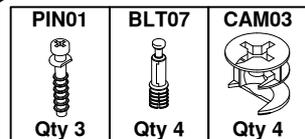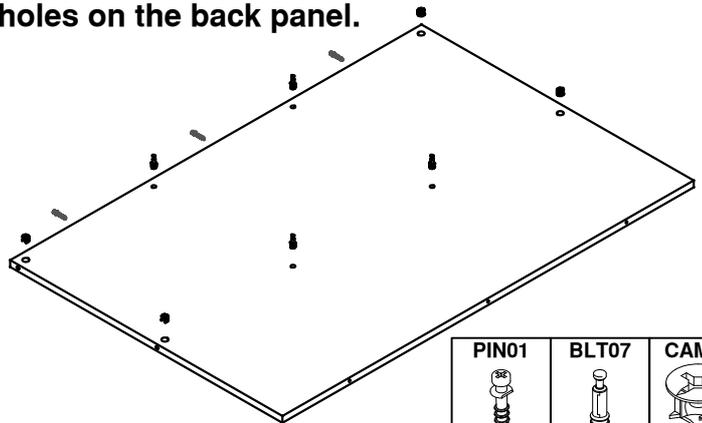

5


**Step 5**  
Insert the cam and pin fittings first before turning the partition panel over to insert the remaining pins. Repeat for both partitions.

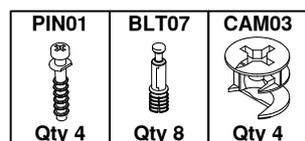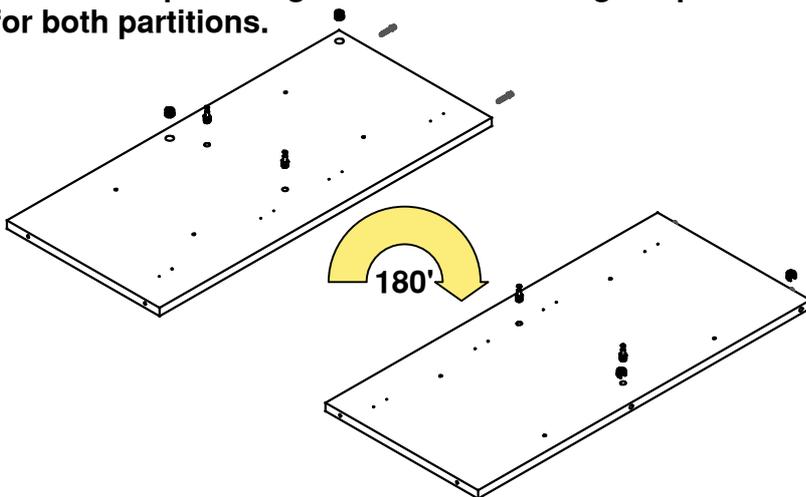

6

**Step 6**  
Attach the one shelf to partition.


Once the cams and pins are engaged ensure that the cams are fully tightened.

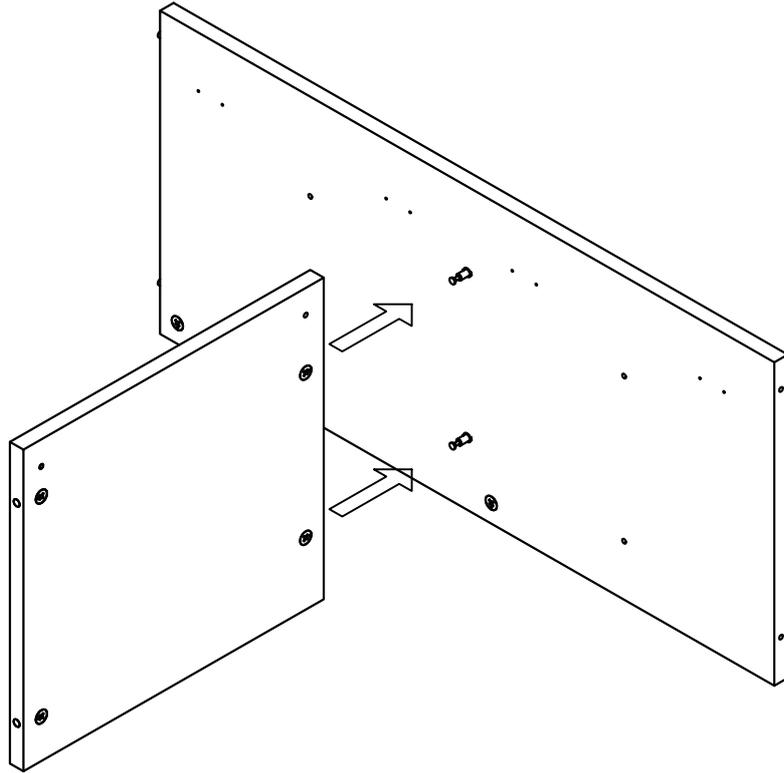

7

**Step 7**  
Attach other partition to shelf.


Once the cams and pins are engaged ensure that the cams are fully tightened.

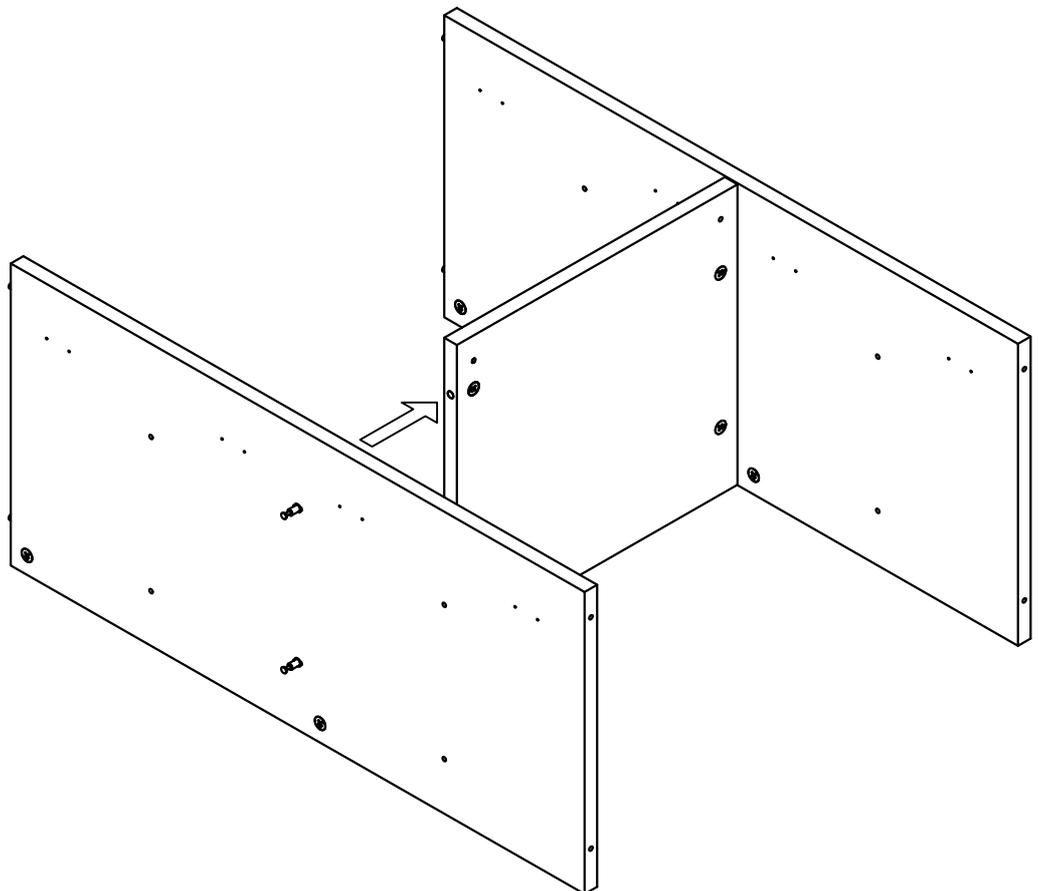

8

**Step 8**  
Attach the partitions to back panel.


Once the cams and pins are engaged ensure that the cams are fully tightened.

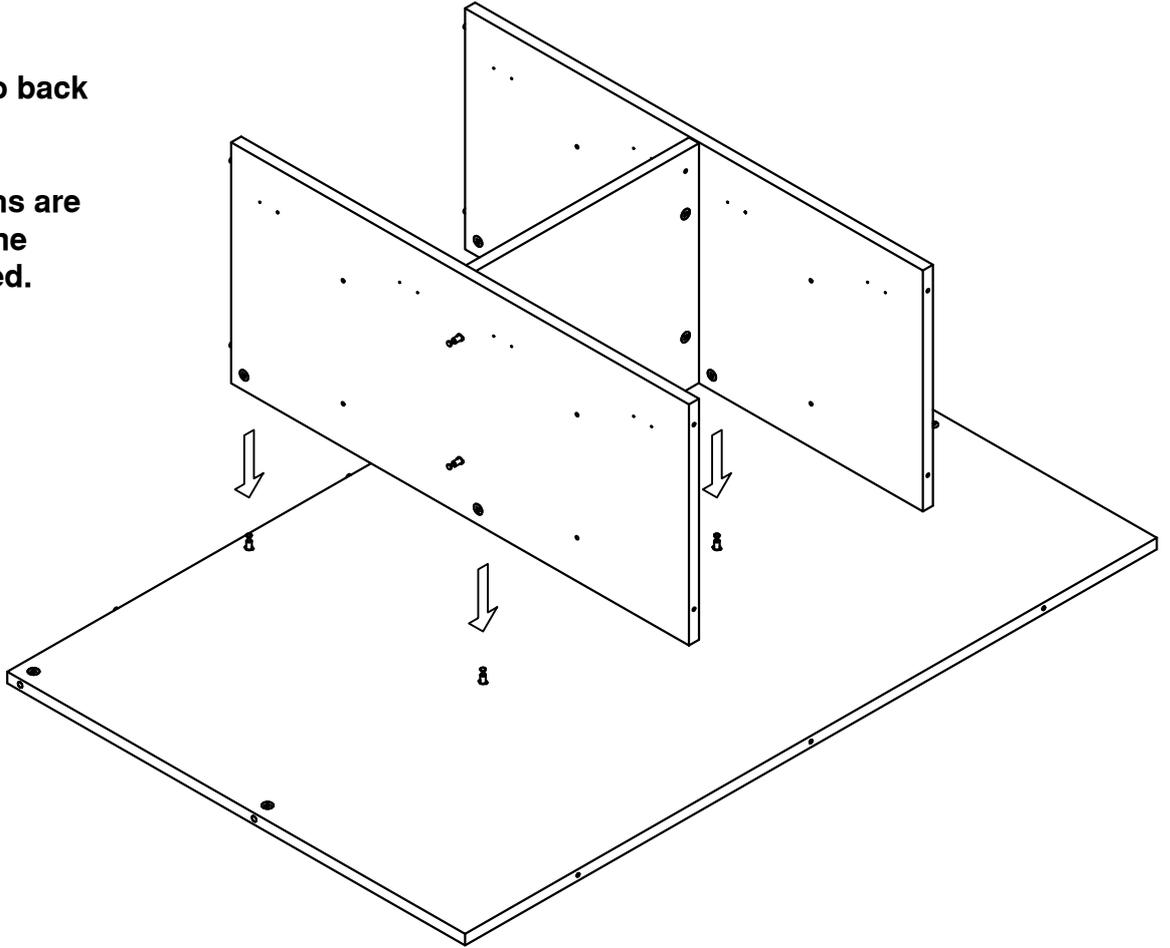

9

**Step 9**  
Attach shelves to either side of partitions.


Once the cams and pins are engaged ensure that the cams are fully tightened.

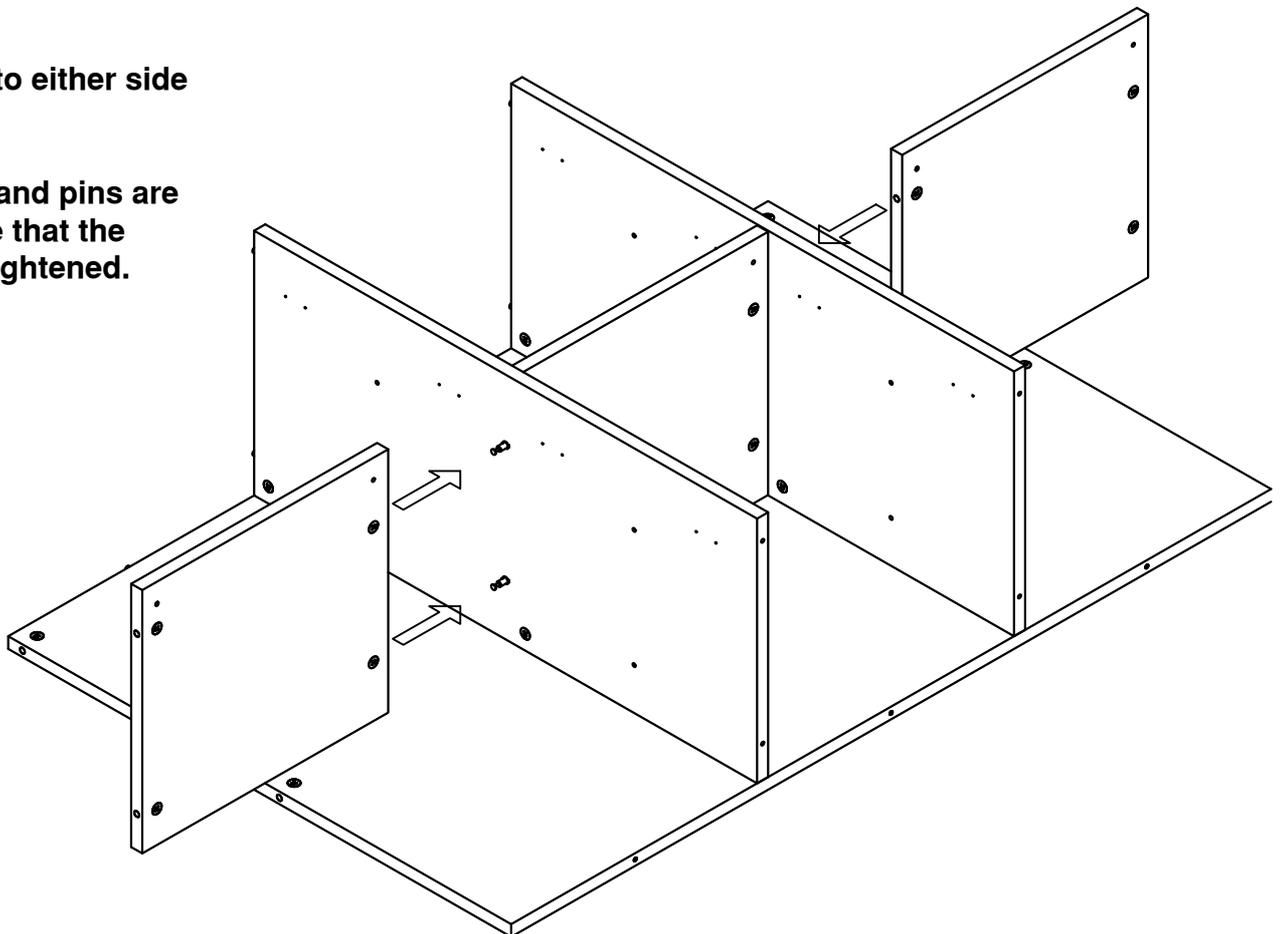

10

**Step 10**  
**Attach the LH & RH sides.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

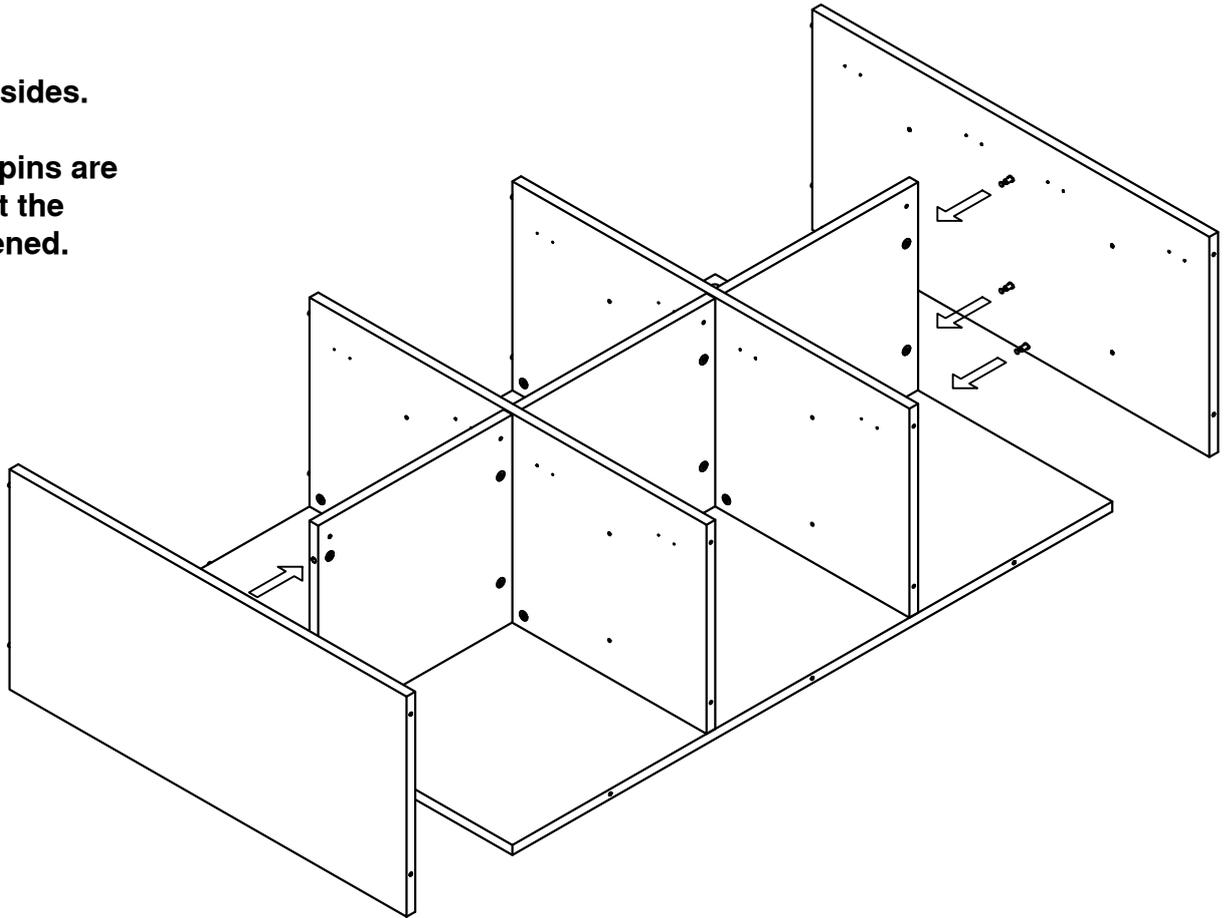

11

**Step 11**  
**Attach the top to the unit.**

Once the cams and pins are engaged ensure that the cams are fully tightened.

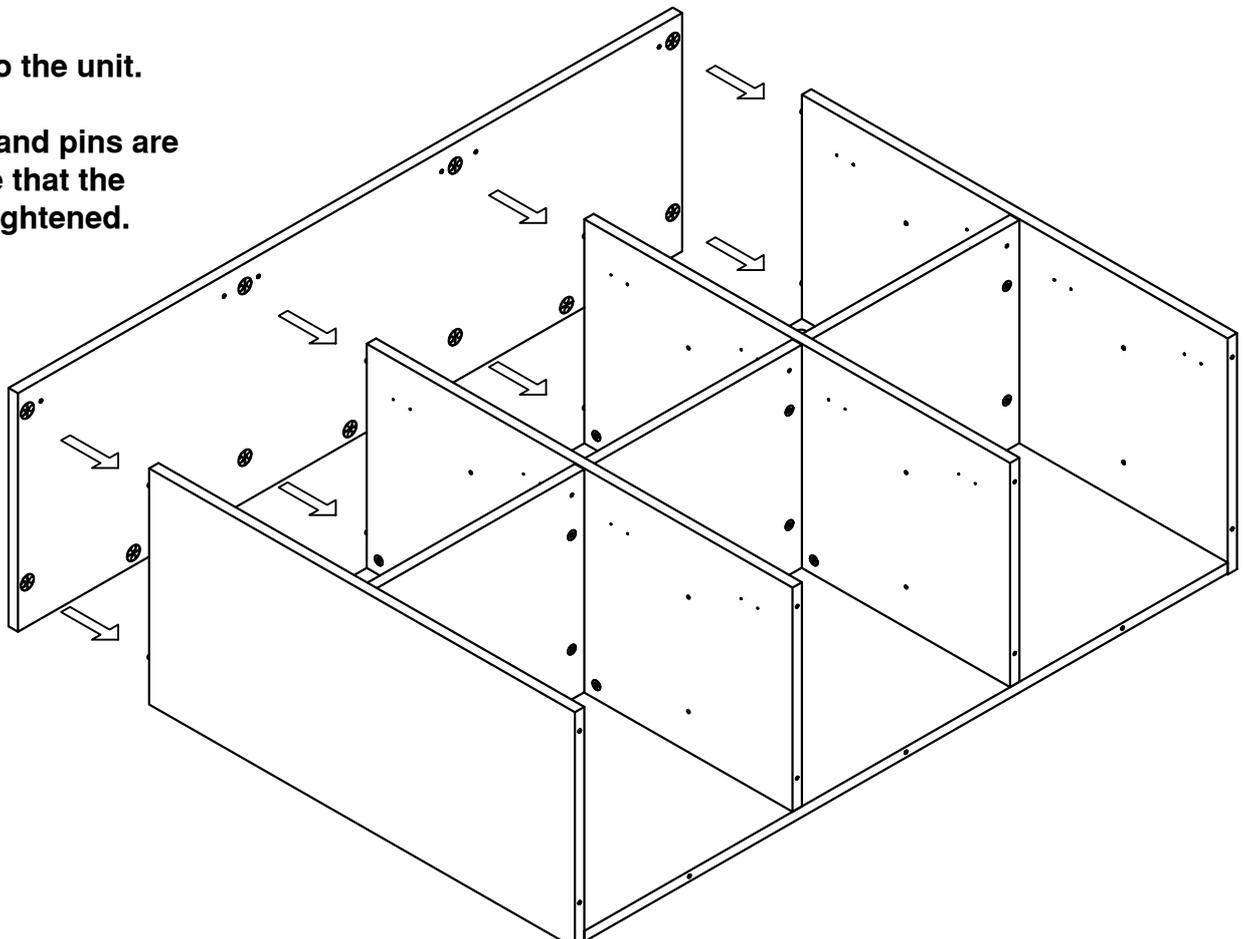


# 12


**Step 12**  
Attach the base to the unit using the confirmat screws provided.

A 4mm Allen key is required to insert the screws.

Ensure they are fully screwed in before attempting to attach the adjustable feet.

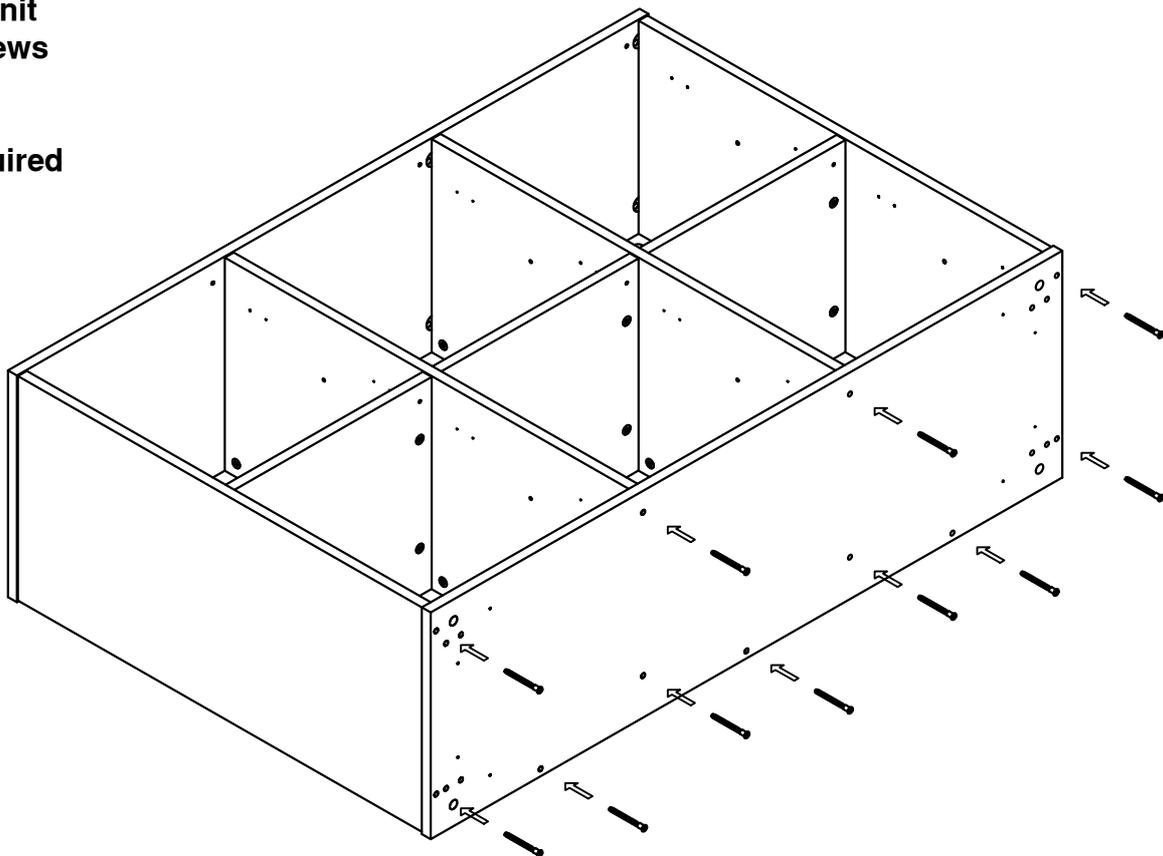

QUANTITY - 11

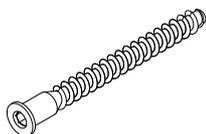


70mm CONFIRMAT SCREW  
RM-CFM02

# 13

**Step 13**  
Attach the 4 adjustable feet inner housings to the base of the unit.

Each foot should be attached using 2 of the 3.5x15mm wood screws provided.

Once attached screw on the adjustable foot outer housing.

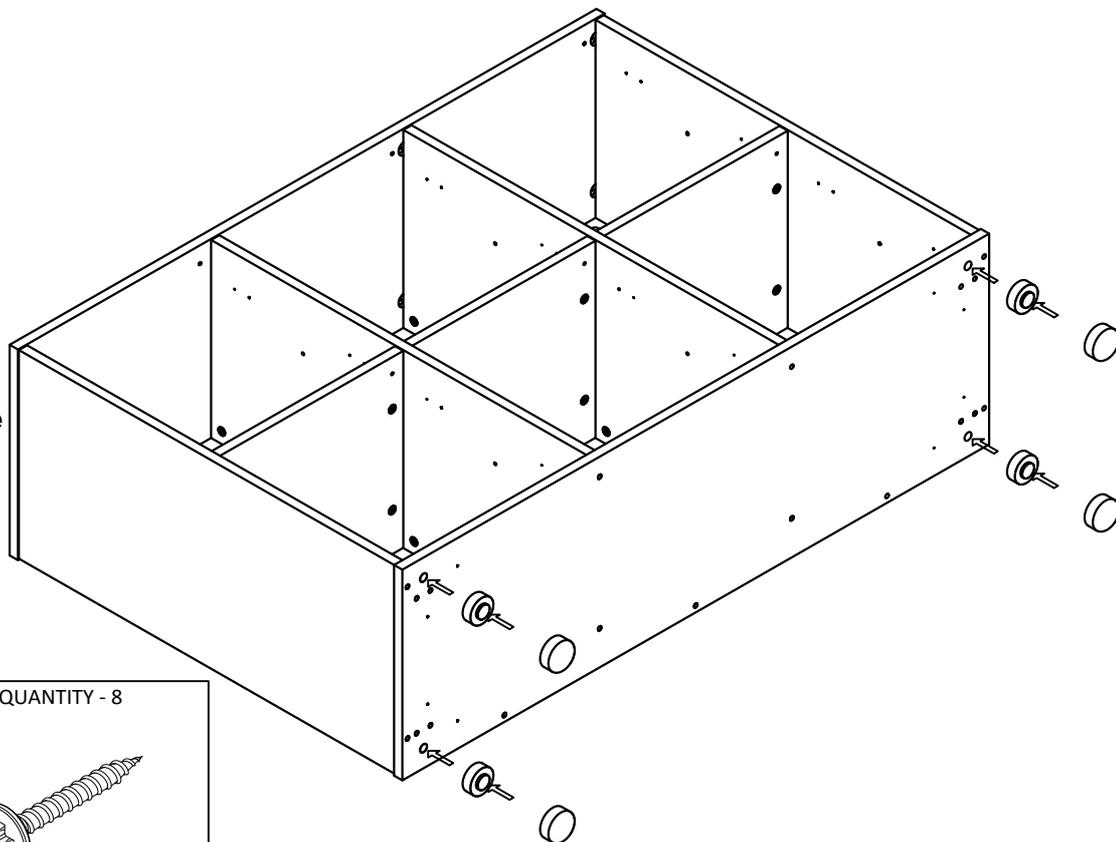

QUANTITY - 4





50mm ADJUSTABLE FOOT

QUANTITY - 8




3.5 x 15mm WOOD SCREW  
RM-SCR26

**Step 14**  
**Stand the unit upright and**  
**position in your desired**  
**location.**

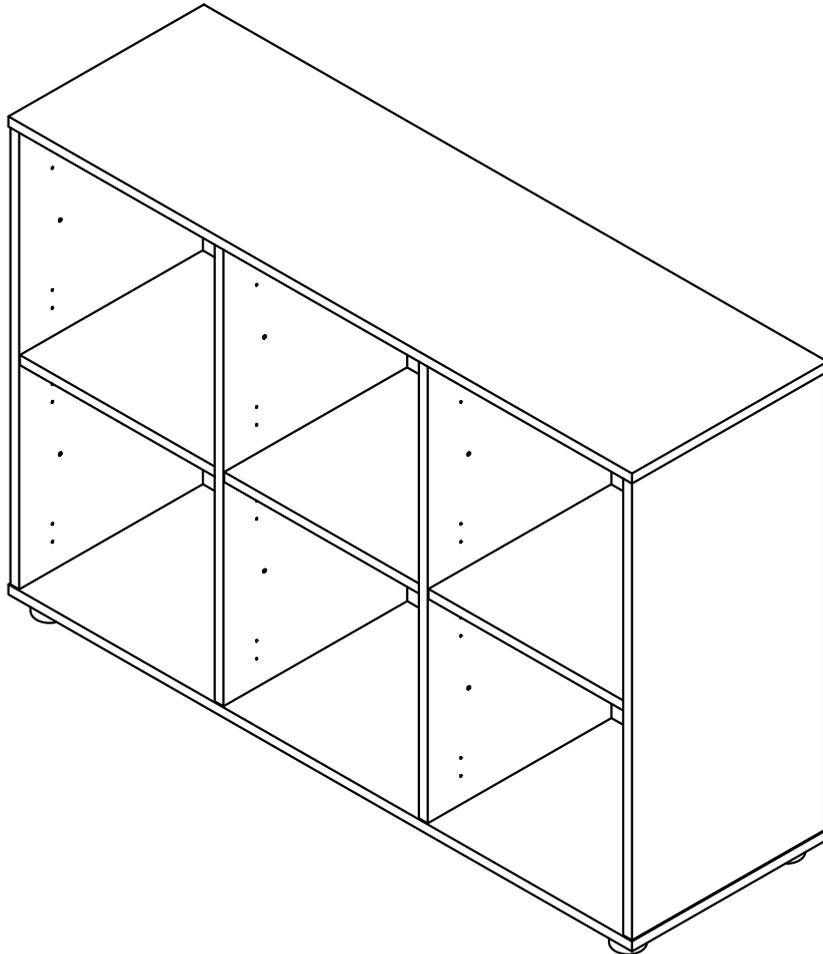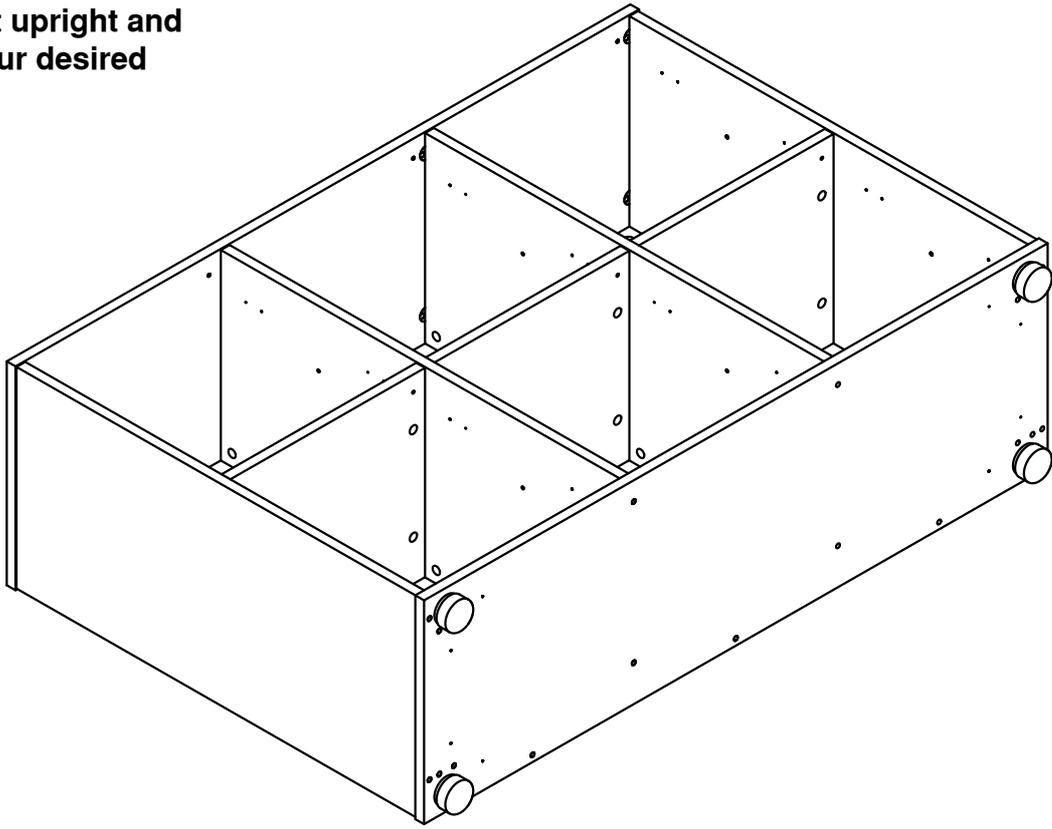

# UCS3-1

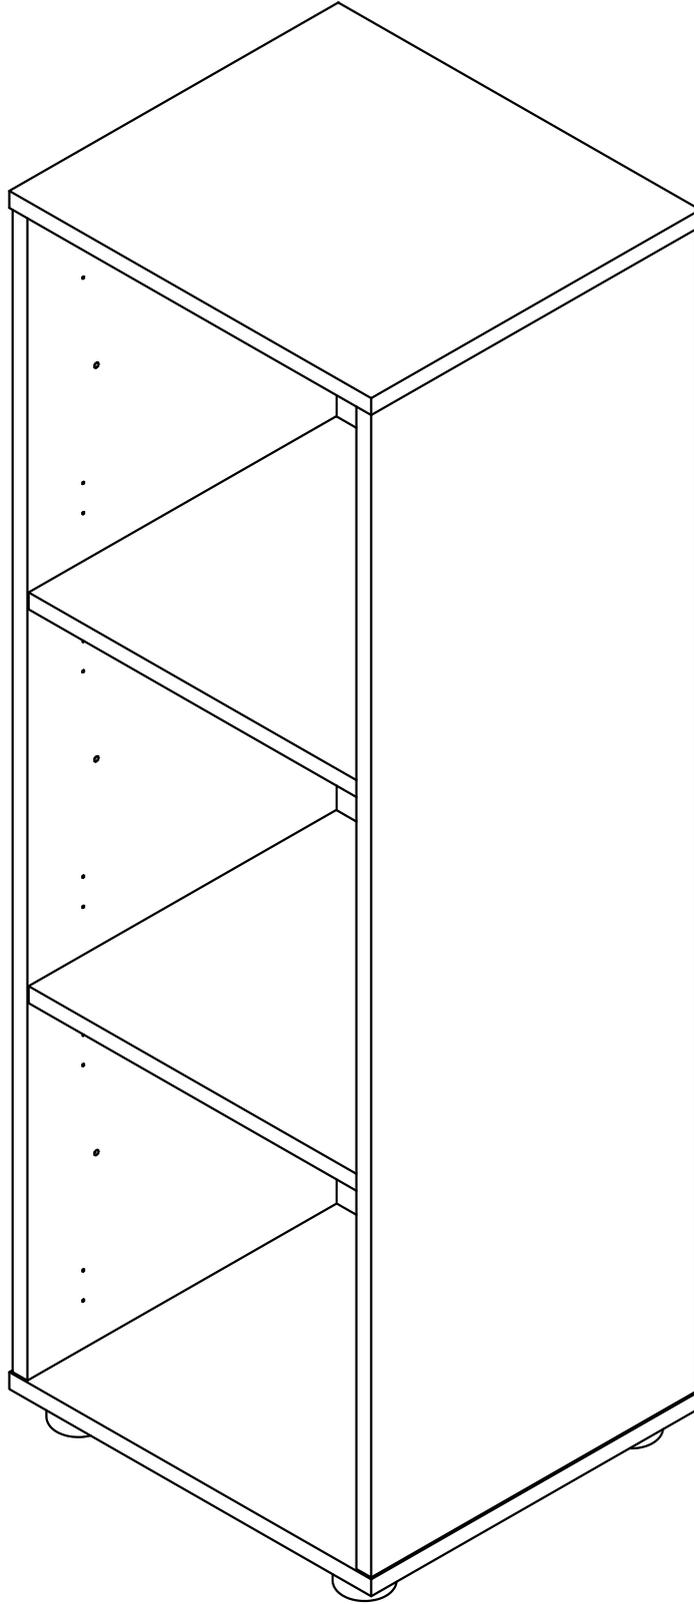






# Please check that you have all the panels!




SINGLE TOP AND BASE

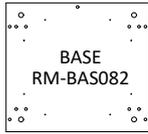

HIGH SIDES AND SHELF

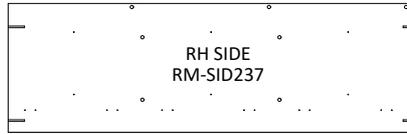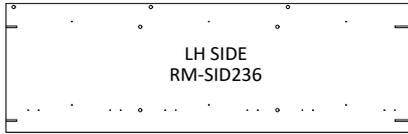


SINGLE HIGH BACK

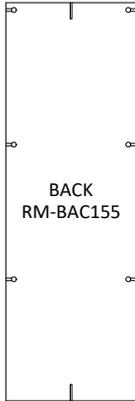

# Please check that you have all the hardware!

QUANTITY - 14




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 14




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 5

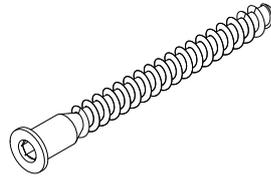


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 5

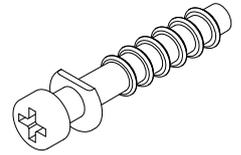

CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

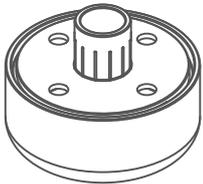


50mm ADJUSTABLE FOOT

QUANTITY - 8



3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1

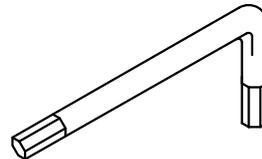



ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.

1

**Step 1**



Insert pins into the pre drilled holes on the LH side panel.

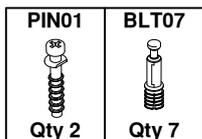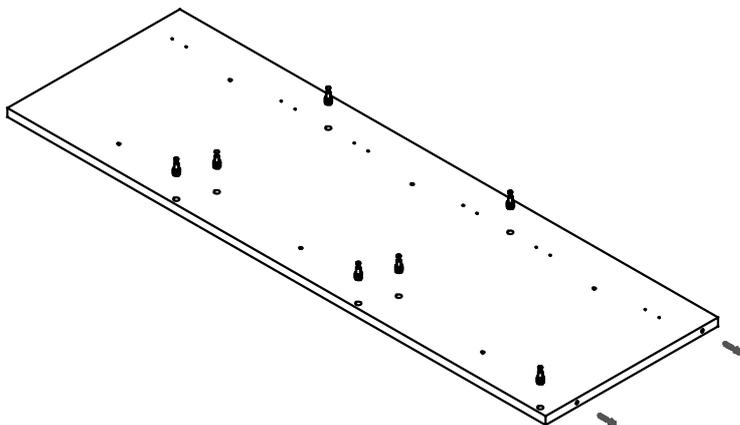

2

**Step 2**


Insert pins into the pre drilled holes on the RH side panel.

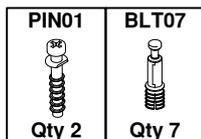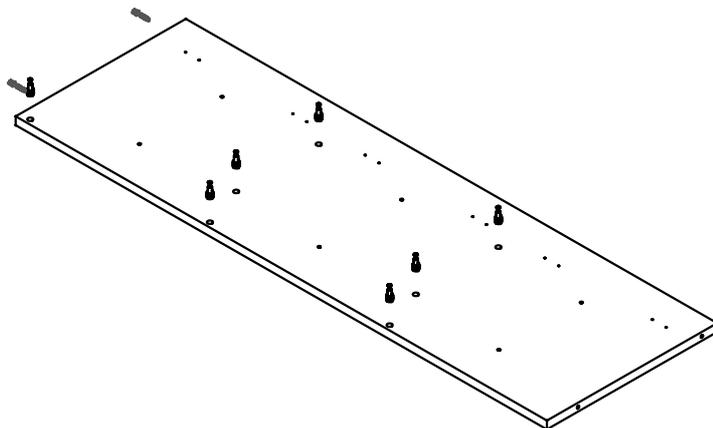

3

**Step 3**



Insert cams into the pre drilled holes on the shelf panels. Repeat for both shelves.

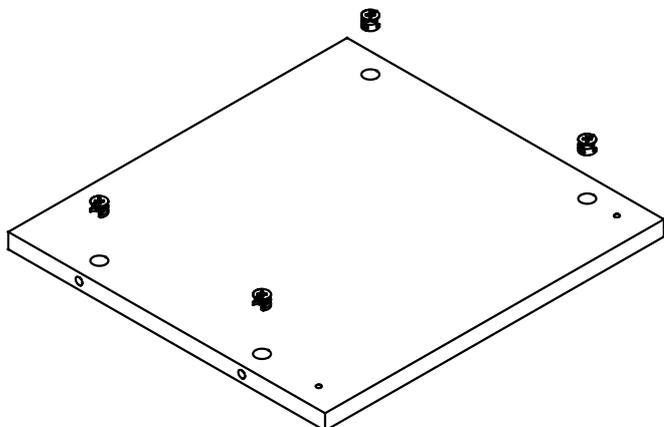

4

**Step 4**


Insert cams & pins into the pre drilled holes on the back panel.

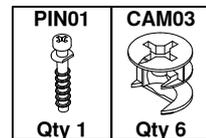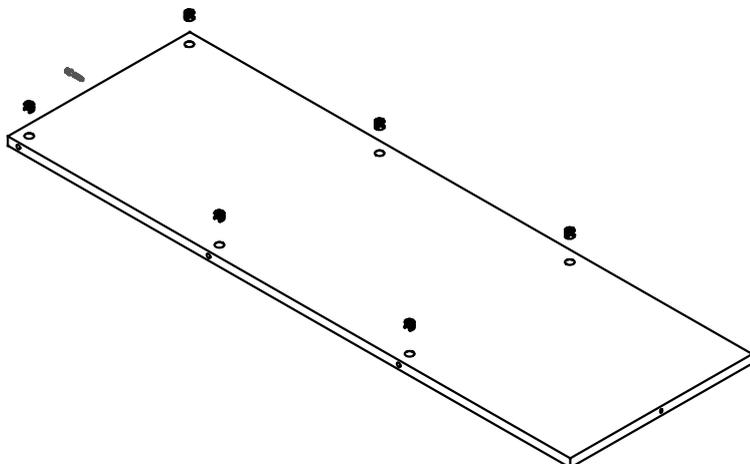

5

**Step 5**  
**Attach shelves to LH side panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

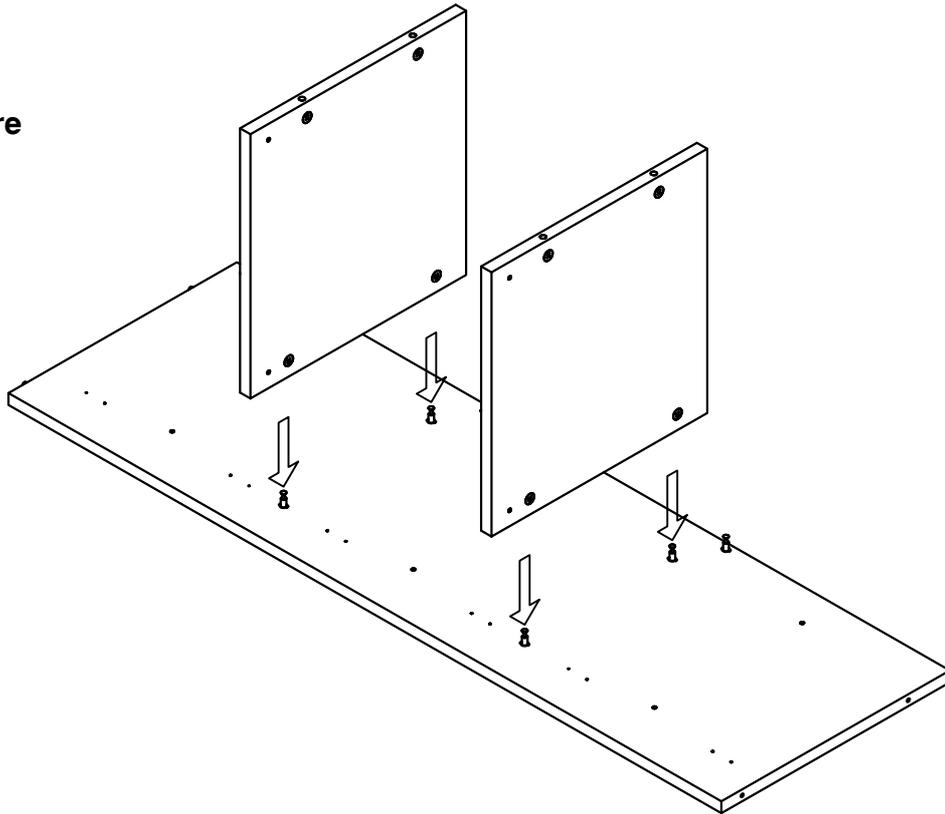

6

**Step 6**  
**Attach back panel to LH side panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

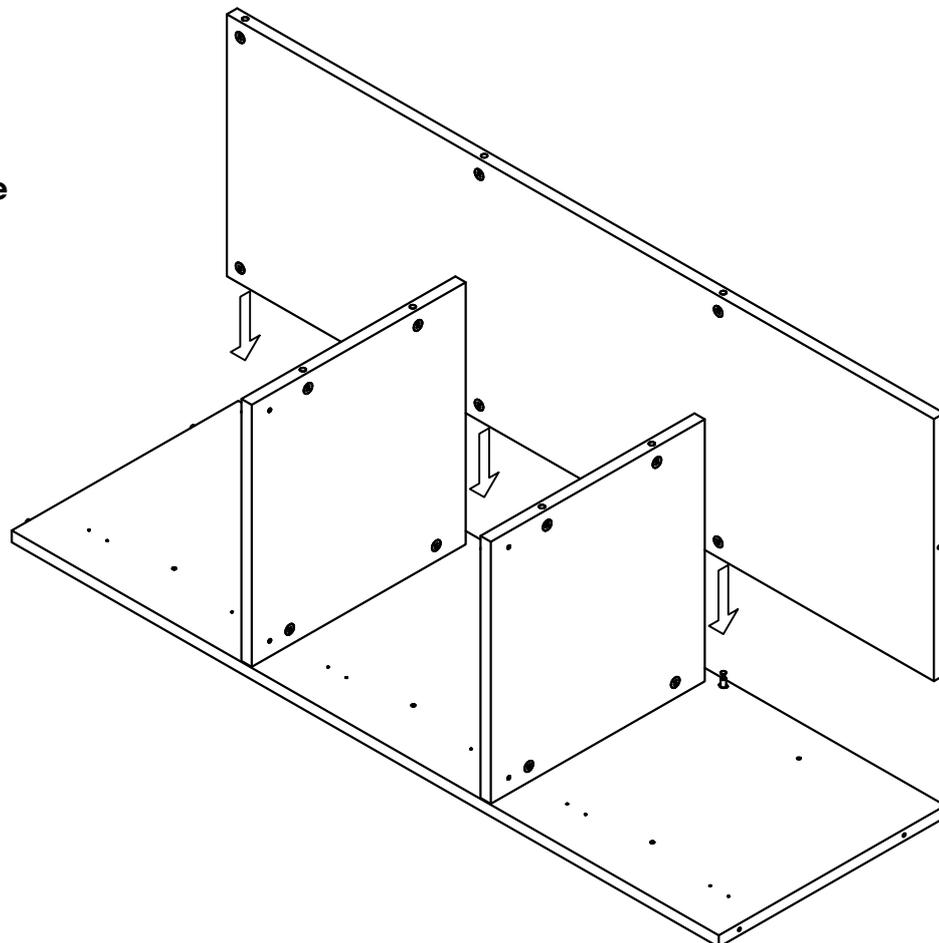

7

**Step 7**  
**Attach the RH side panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

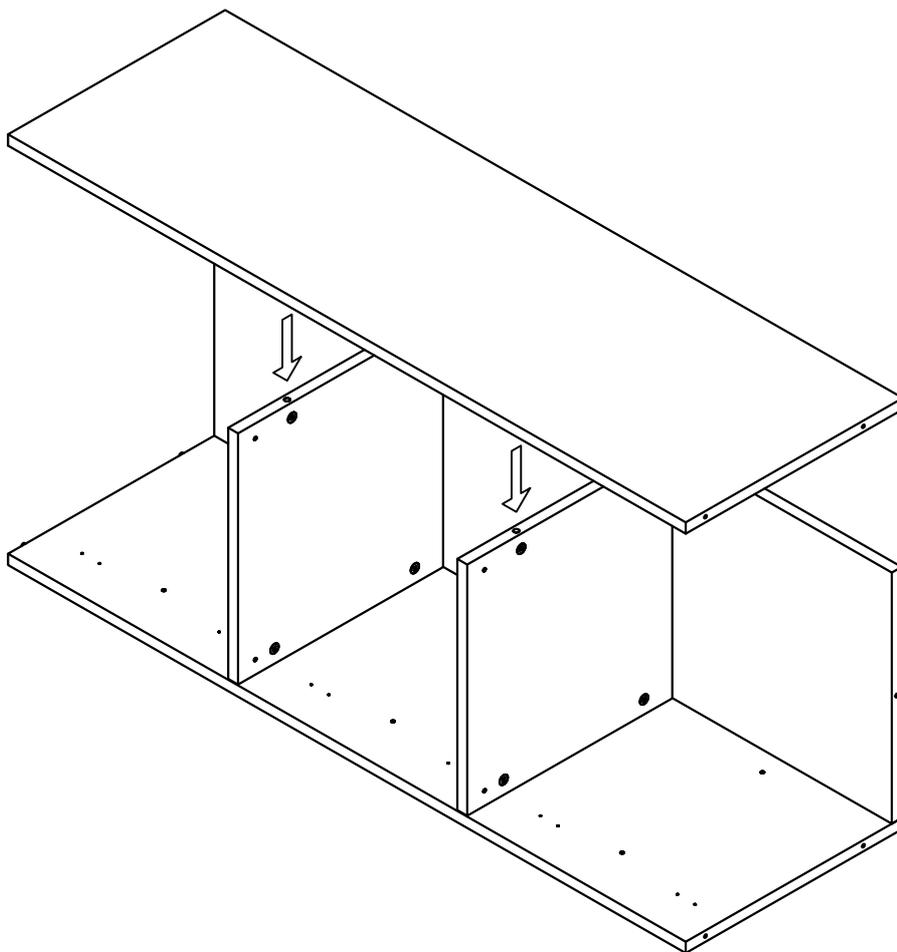

8

**Step 8**  
**Attach top panel.**

Once the cams and pins are engaged ensure that the cams are fully tightened.

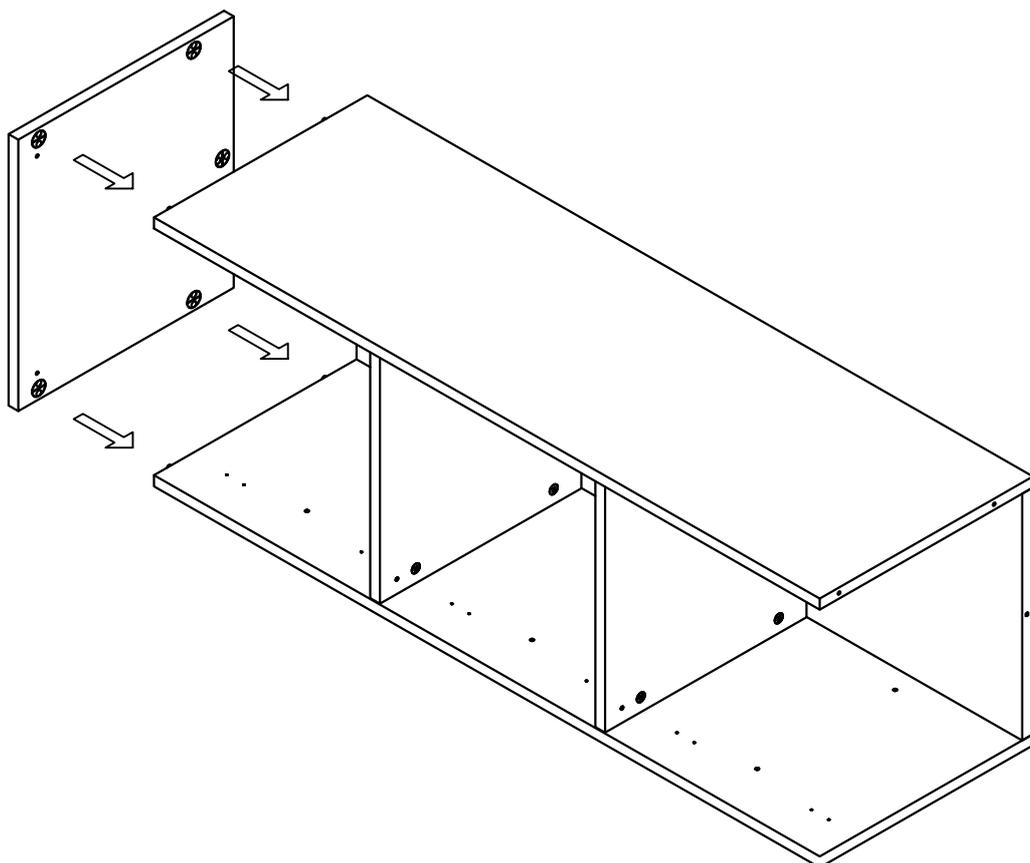


# 9


**Step 9**  
**Attach the base to the unit**  
**using the confirmat screws**  
**provided.**

**A 4mm Allen key is required**  
**to insert the screws.**

**Ensure they are fully**  
**screwed in before**  
**attempting to attach the**  
**adjustable feet.**

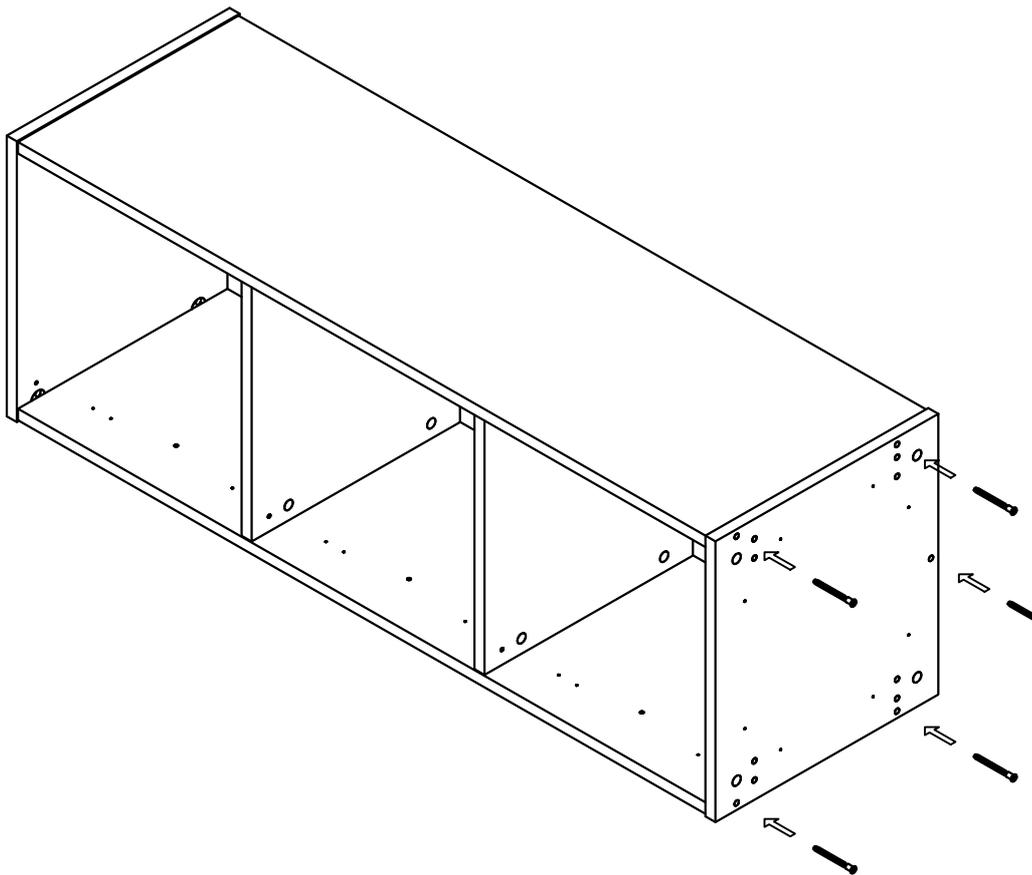

QUANTITY - 5

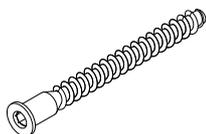


70mm CONFIRMAT SCREW  
 RM-CFM02

# 10

**Step 10**  
**Attach the 4 adjustable feet**  
**inner housings to the base**  
**of the unit.**

**Each foot should be**  
**attached using 2 of the**  
**4x20mm wood screws**  
**provided.**

**Once attached screw on the**  
**adjustable foot outer**  
**housing.**

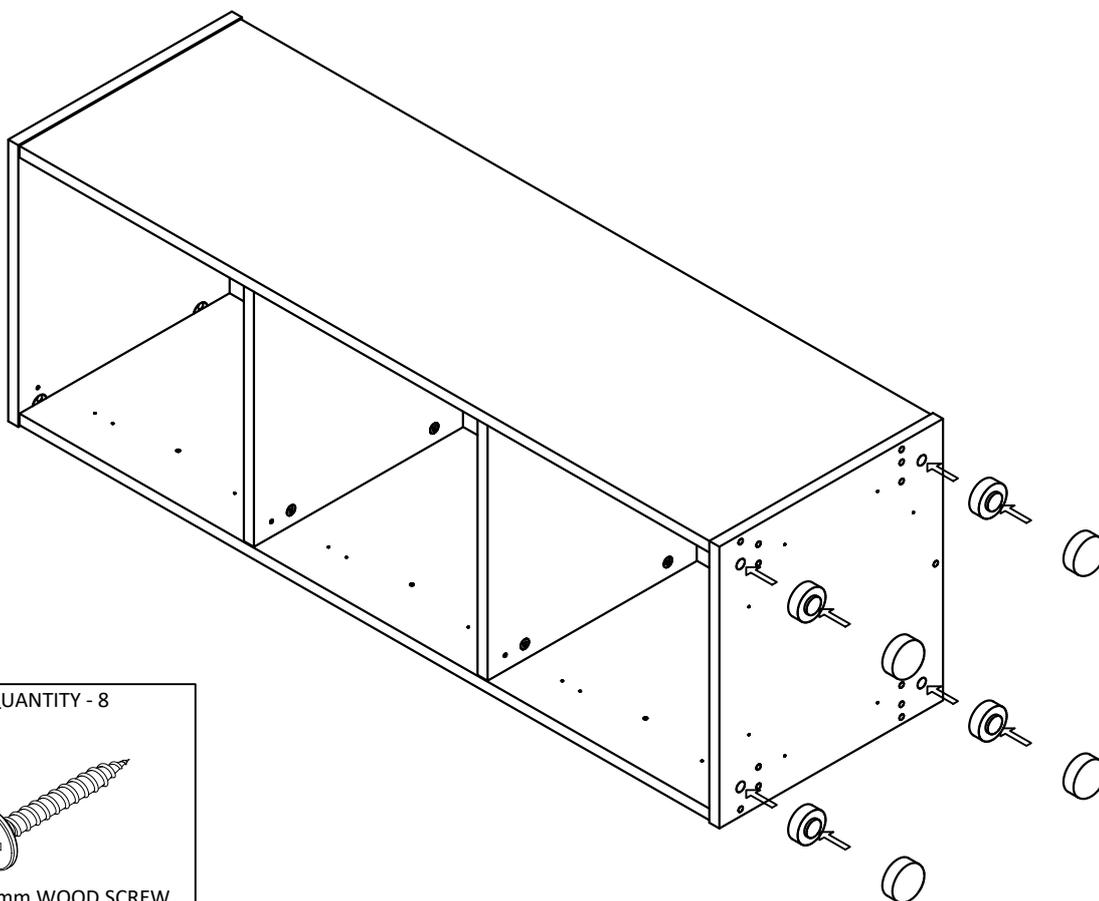

QUANTITY - 4





50mm ADJUSTABLE FOOT



QUANTITY - 8



3.5 x 15mm WOOD SCREW  
 RM-SCR26


**Step 11**  
**Stand the unit upright and**  
**position in your desired**  
**location.**

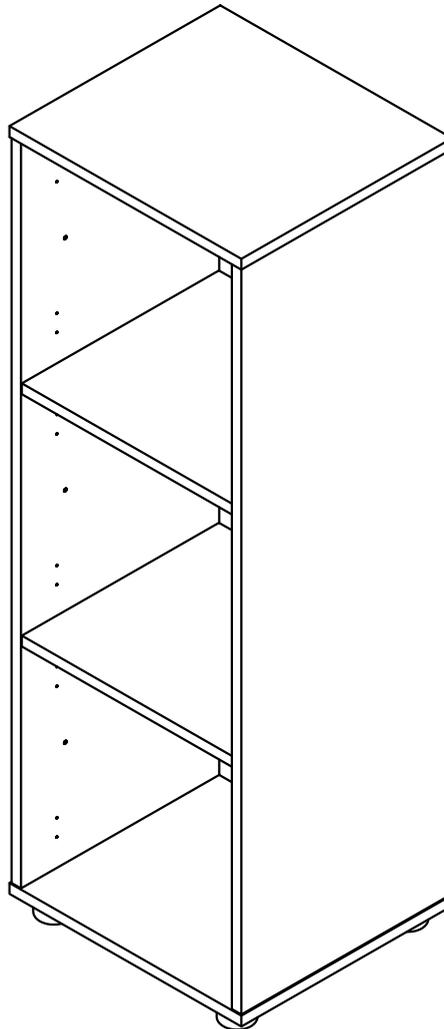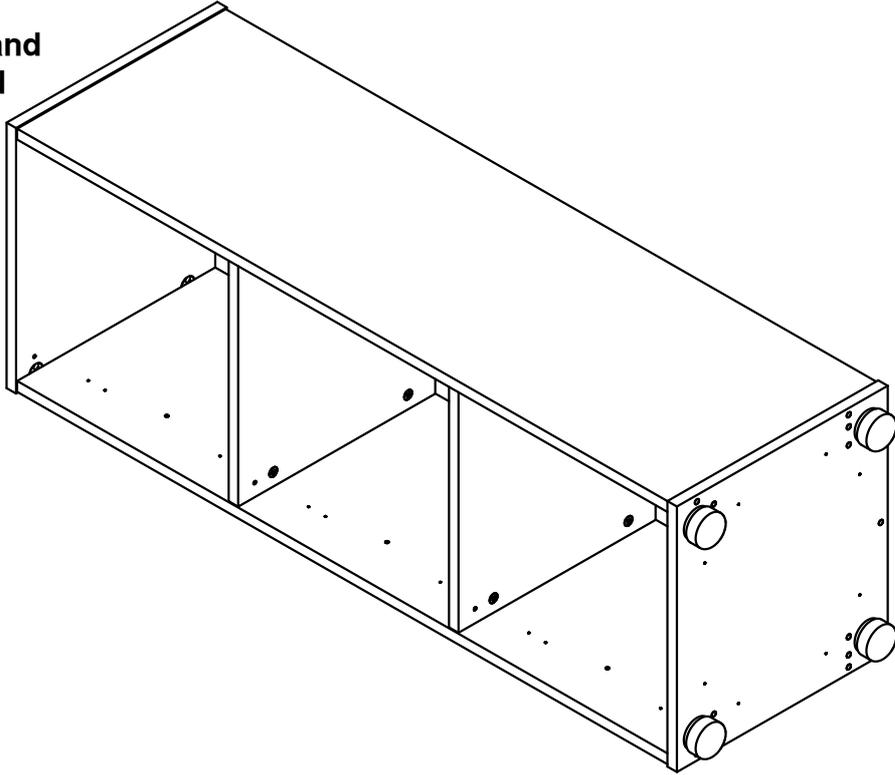

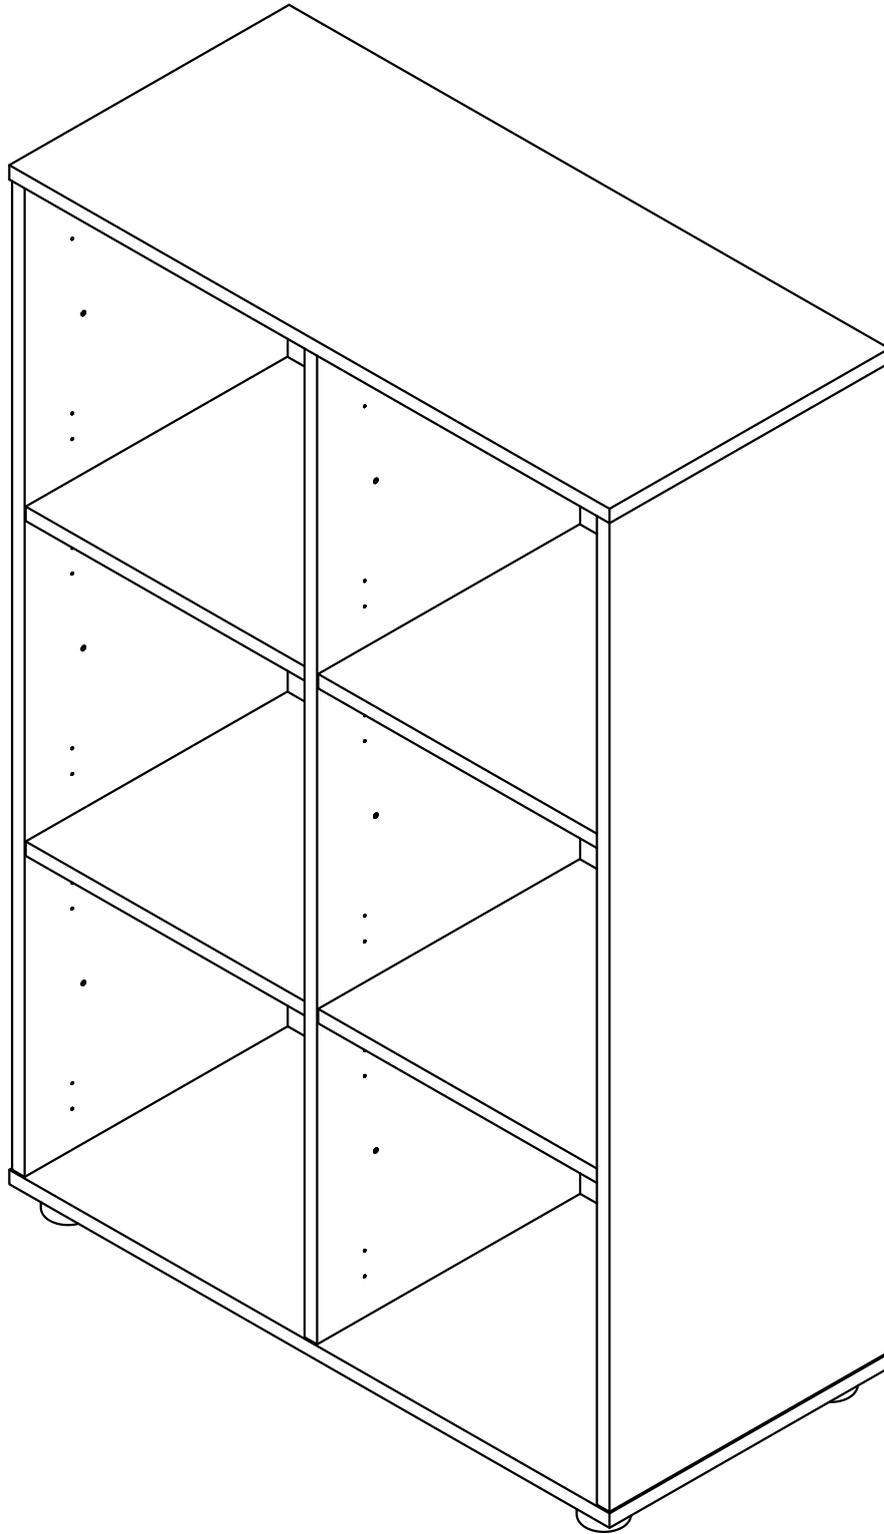






# Please check that you have all the panels!




TRIPLE TOP AND BASE

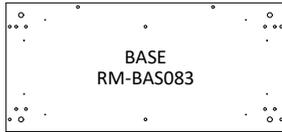


HIGH SIDES AND SHELF

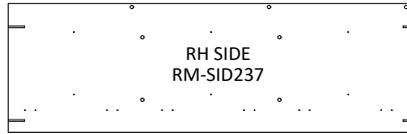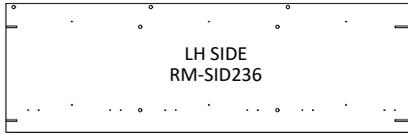

TRIPLE HIGH BACK

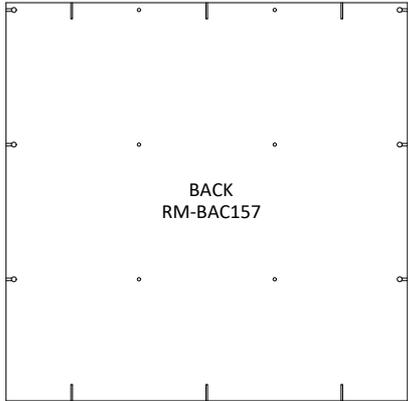


HIGH PARTITION & SHELF

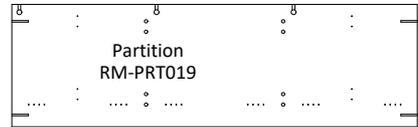

# Please check that you have all the hardware!

QUANTITY - 25




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 25




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 8

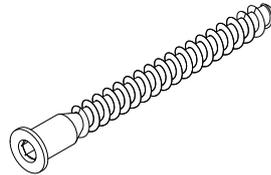


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 8

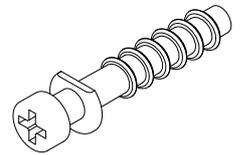


CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

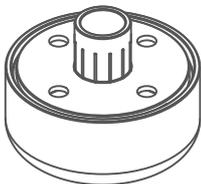


50mm ADJUSTABLE FOOT

QUANTITY - 8

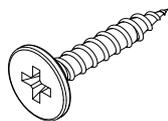

3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1


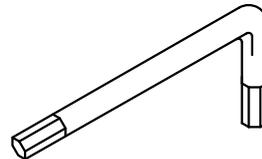


ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.



1

**Step 1**  
Insert pins into the pre drilled holes on the LH side panel.

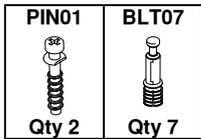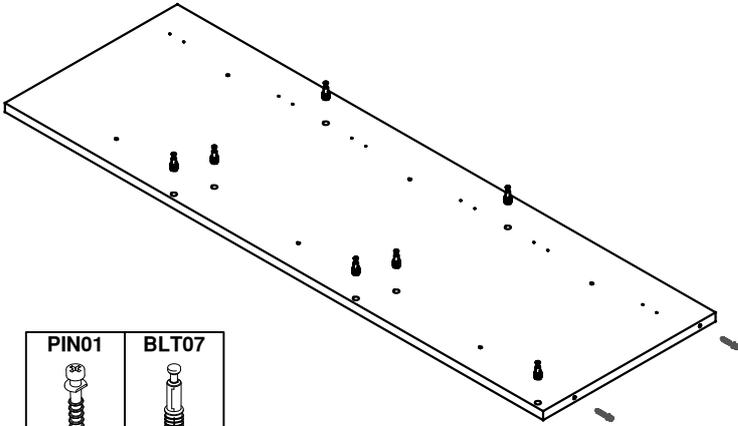


2

**Step 2**  
Insert pins into the pre drilled holes on the RH side panel.

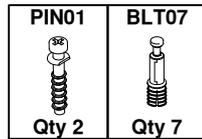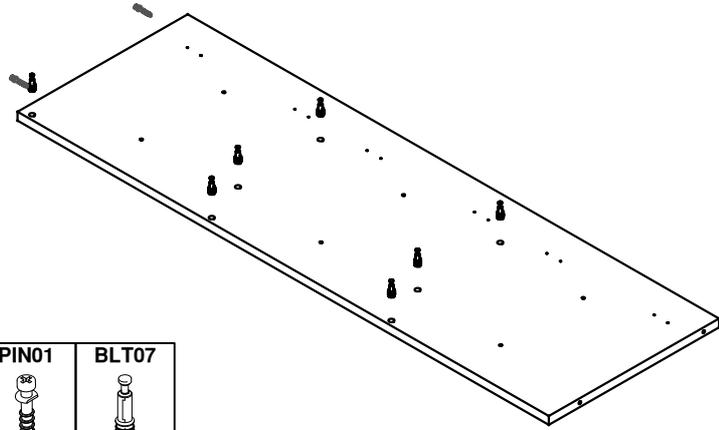



3

**Step 3**  
Insert cams into the pre drilled holes on the shelf panels. Repeat for all 4 shelves.

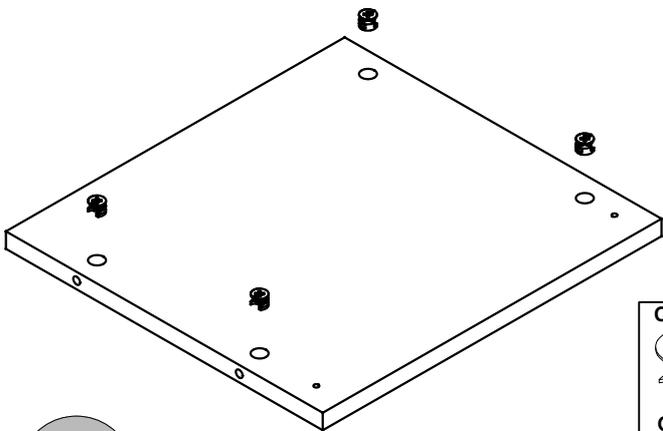



4

**Step 4**  
Insert cams & pins into the pre drilled holes on the back panel.

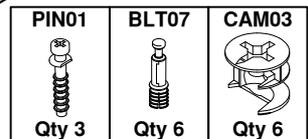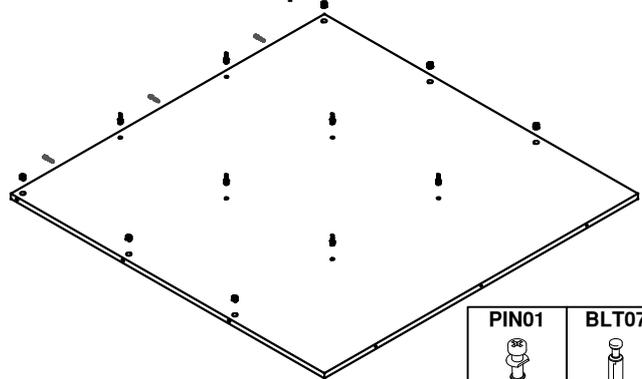

5


**Step 5**  
Insert the cam and pin fittings first before turning the partition panel over to insert the remaining pins. Repeat for both partitions.

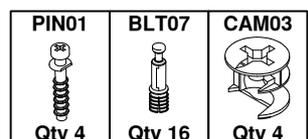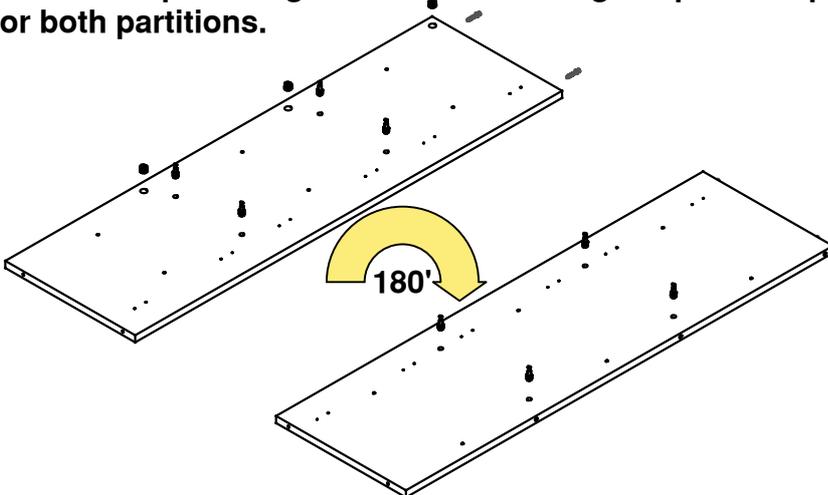

6

**Step 6**  
Attach the partition to back panel.


Once the cams and pins are engaged ensure that the cams are fully tightened.

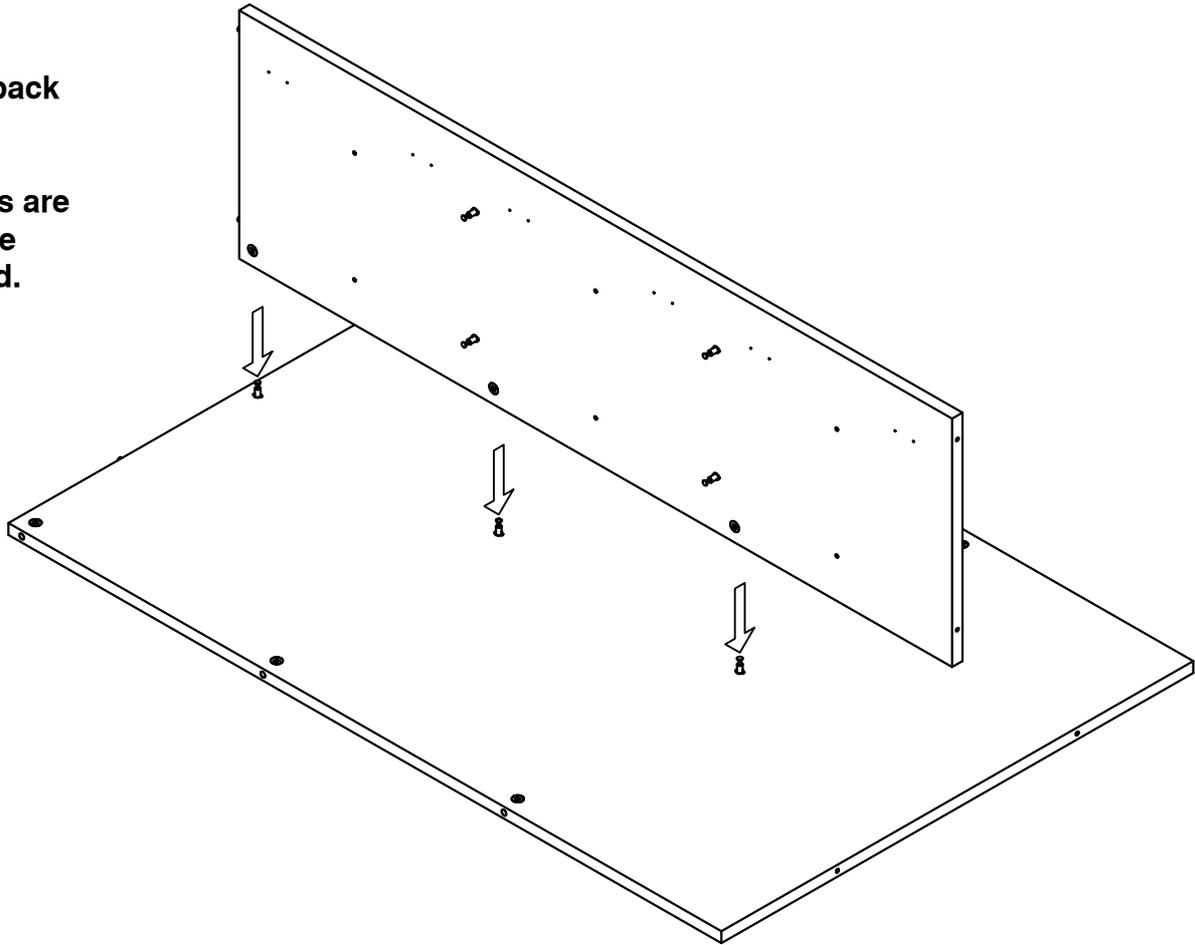

7

**Step 7**  
Attach all shelves to partition.


Once the cams and pins are engaged ensure that the cams are fully tightened.

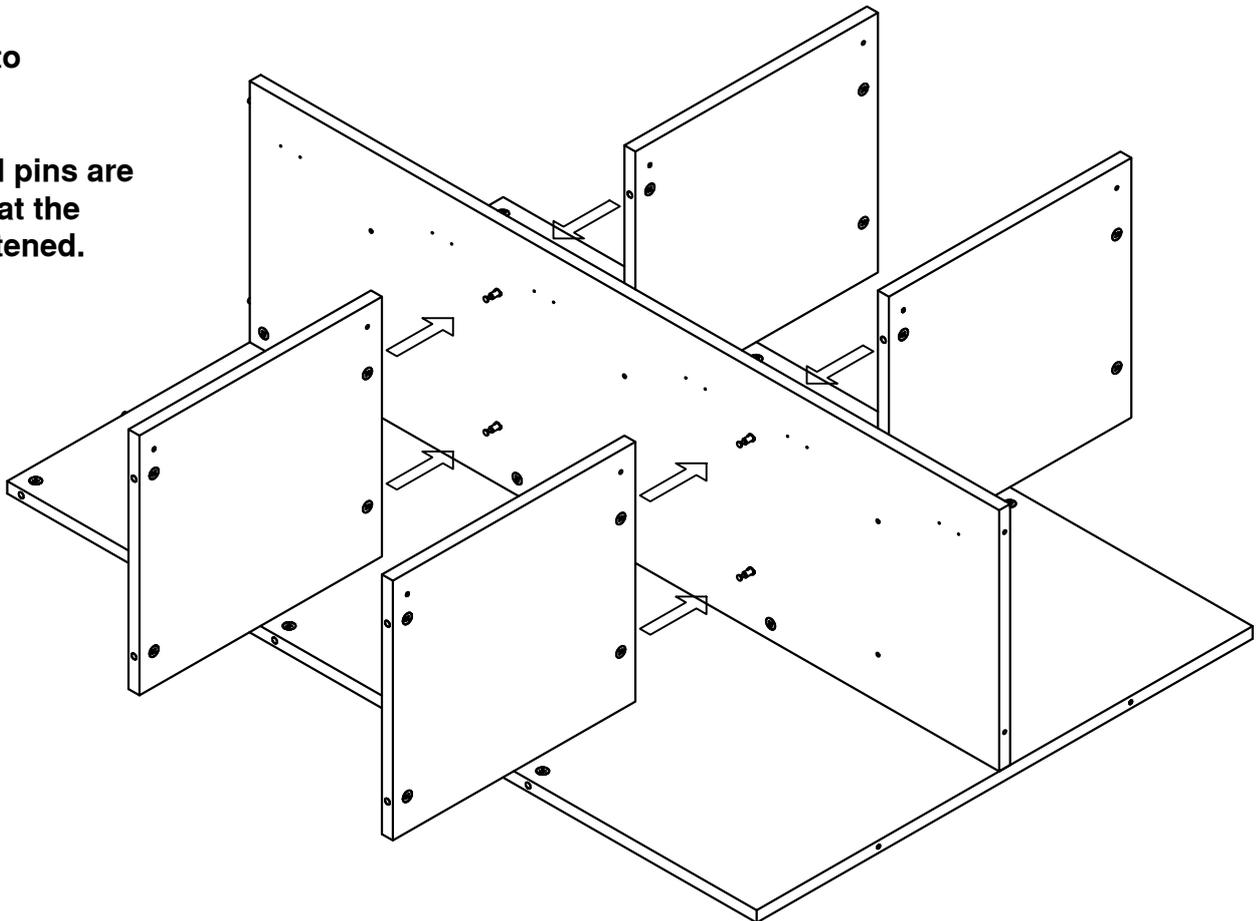

8

**Step 8**  
**Attach the side panels**


Once the cams and pins are engaged ensure that the cams are fully tightened.

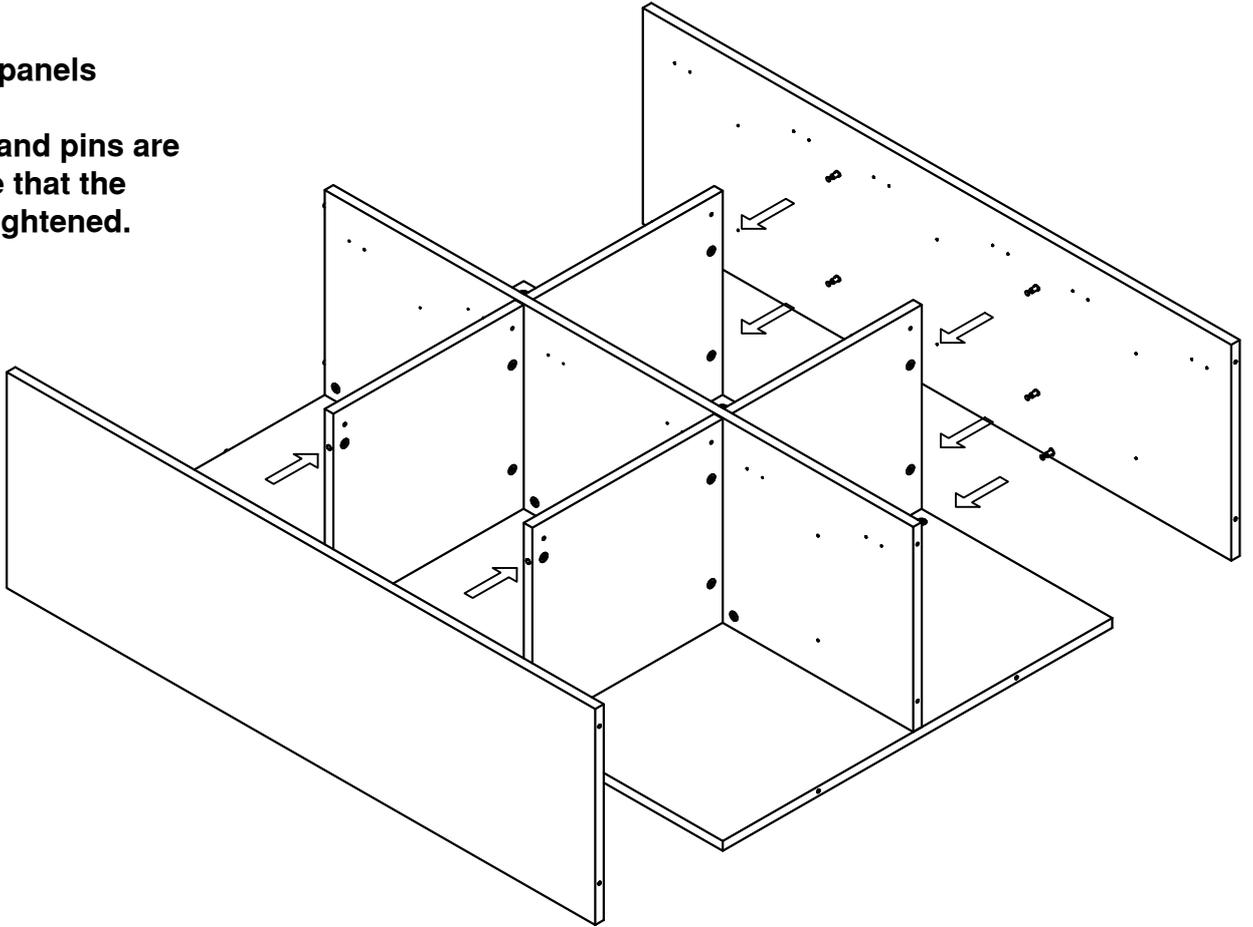

9

**Step 9**  
**Attach top panel.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

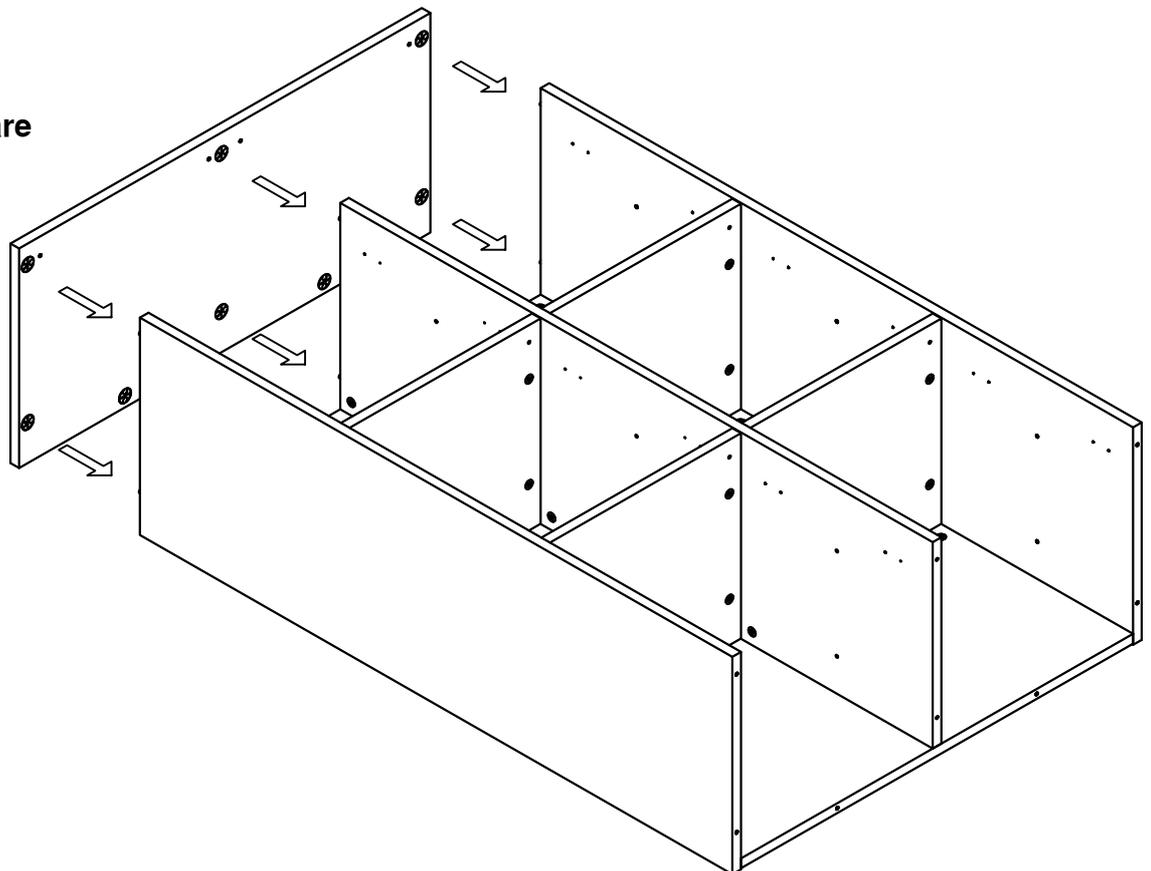


**Step 10**  
**Attach the base to the unit**  
**using the confirmat screws**  
**provided.**

**A 4mm Allen key is required**  
**to insert the screws.**

**Ensure they are fully**  
**screwed in before**  
**attempting to attach the**  
**adjustable feet.**

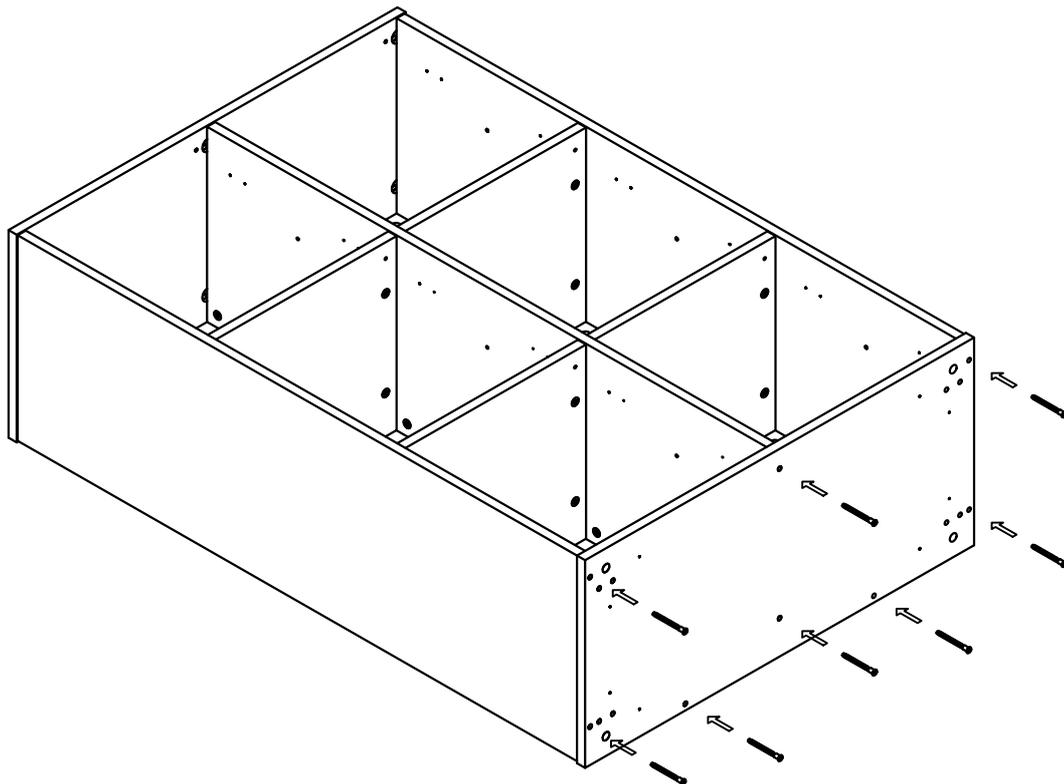

QUANTITY - 8

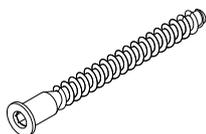


70mm CONFIRMAT SCREW  
 RM-CFM02

**Step 11**  
**Attach the 4 adjustable feet**  
**inner housings to the base**  
**of the unit.**

**Each foot should be**  
**attached using 2 of the**  
**3.5x15mm wood screws**  
**provided.**

**Once attached screw on the**  
**adjustable foot outer**  
**housing.**

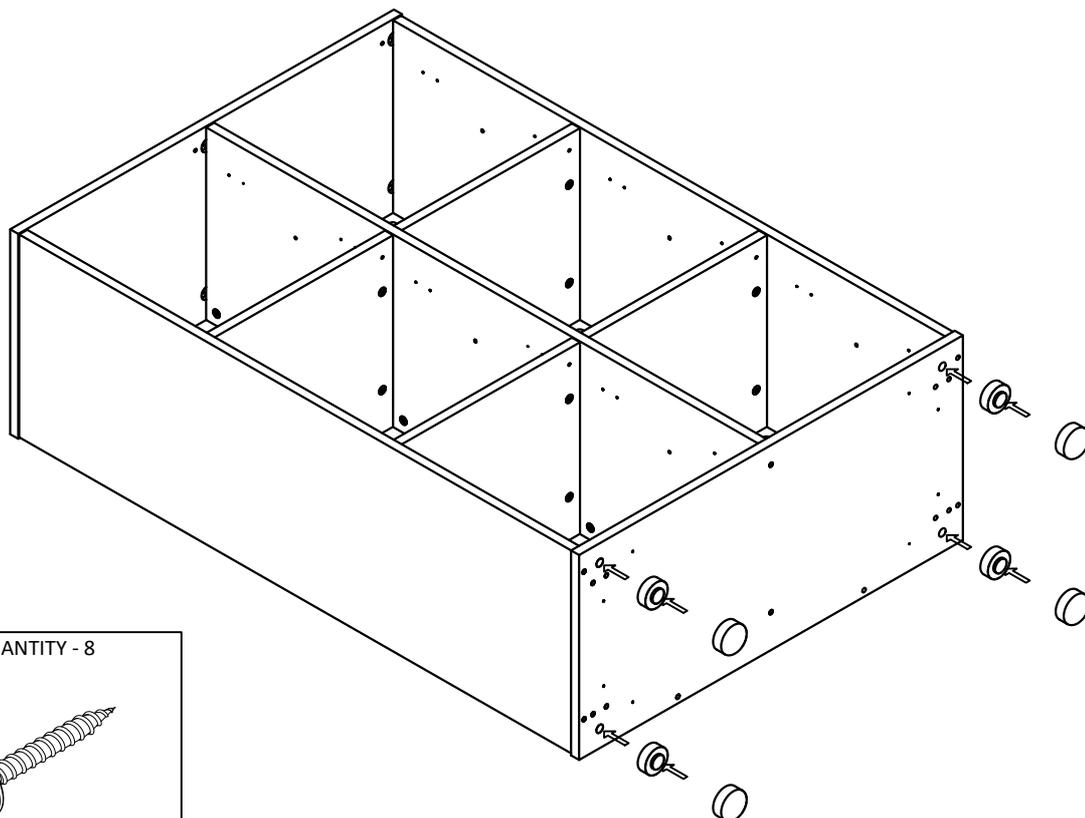

QUANTITY - 4





50mm ADJUSTABLE FOOT

QUANTITY - 8




3.5 x 15mm WOOD SCREW  
 RM-SCR26

**Step 12**  
**Stand the unit upright and**  
**position in your desired**  
**location.**






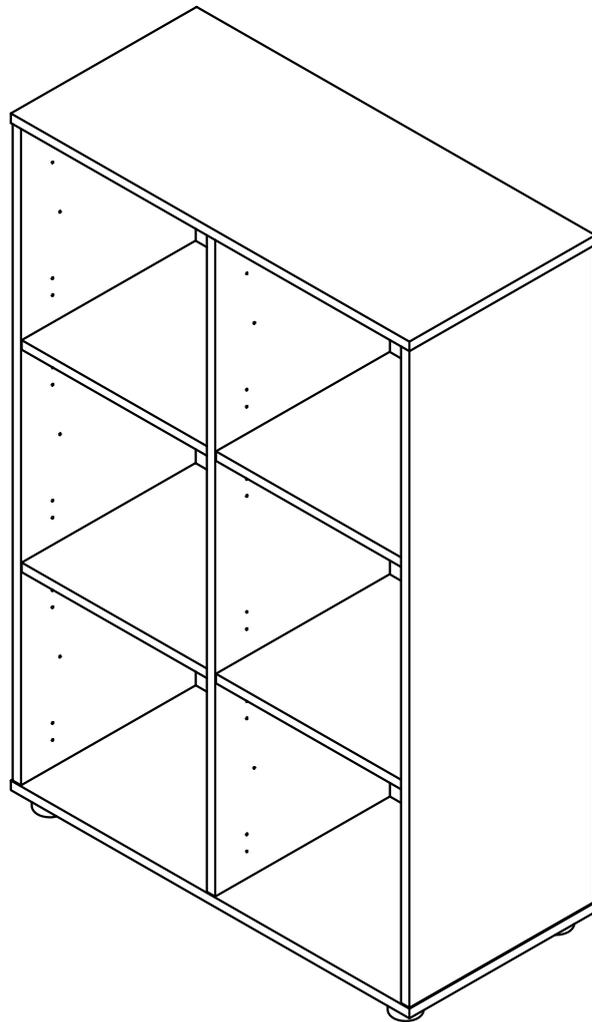
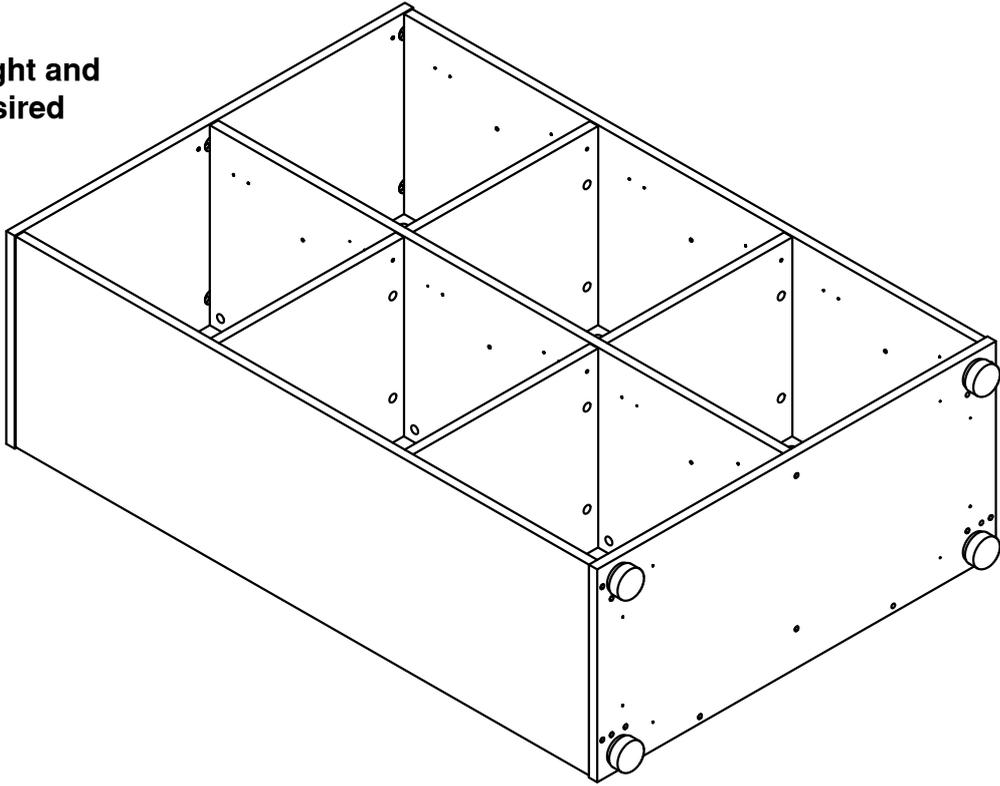


# UCS3-3

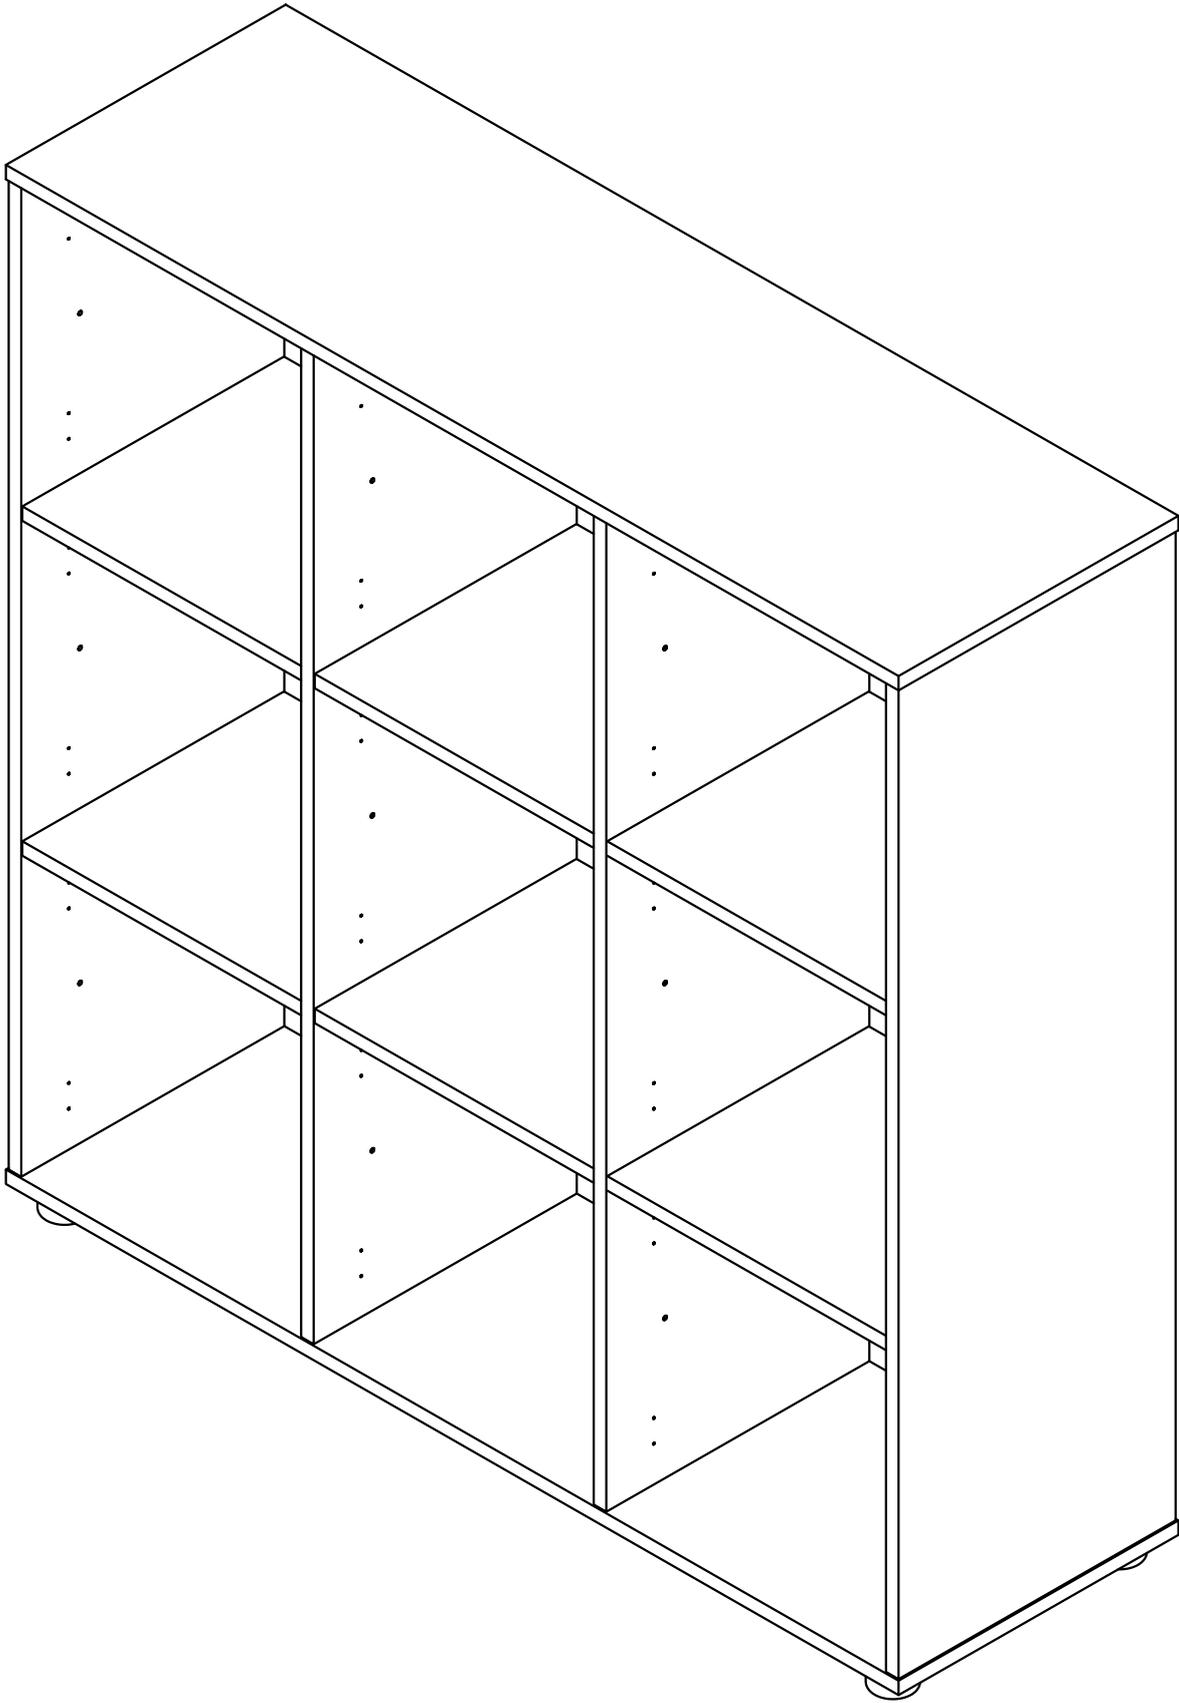




# Please check that you have all the panels!

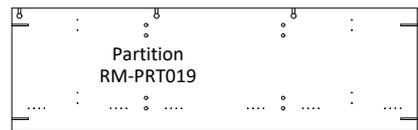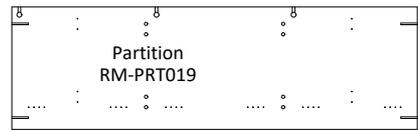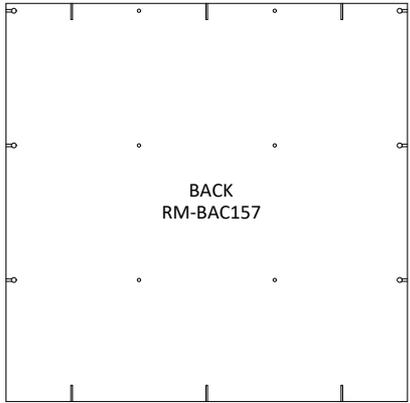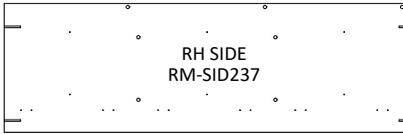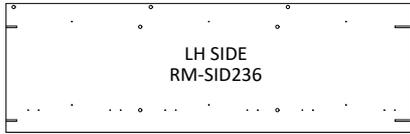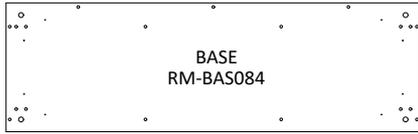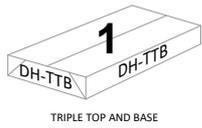

# Please check that you have all the hardware!

QUANTITY - 36




24mm QUICKFIX PIN  
RM-BLT006

QUANTITY - 36




15mm QUICKFIX CAM  
RM-CAM03

QUANTITY - 11

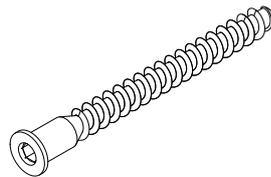


70mm CONFIRMAT SCREW  
RM-CFM02

QUANTITY - 11

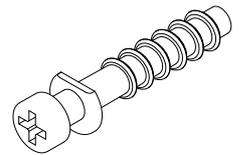


CONNECTOR SCREW  
RM-PIN01

QUANTITY - 4

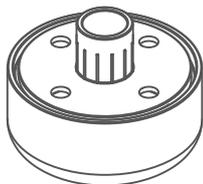


50mm ADJUSTABLE FOOT

QUANTITY - 8

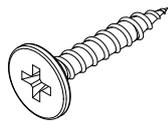

3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1


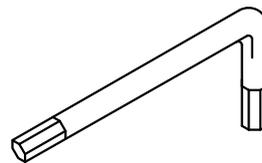


ALLEN KEY 4MM  
RM-ALK01

Prepare all the panels by inserting the listed fittings into the corresponding holes.



1

**Step 1**  
Insert pins into the pre drilled holes on the LH side panel.

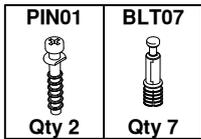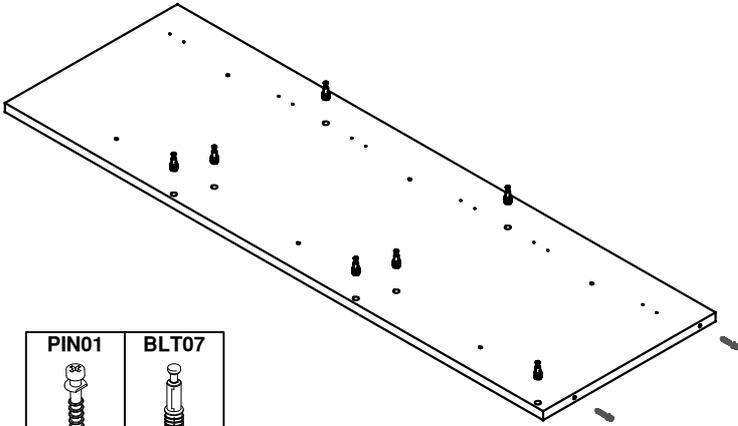



2

**Step 2**  
Insert pins into the pre drilled holes on the RH side panel.

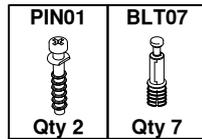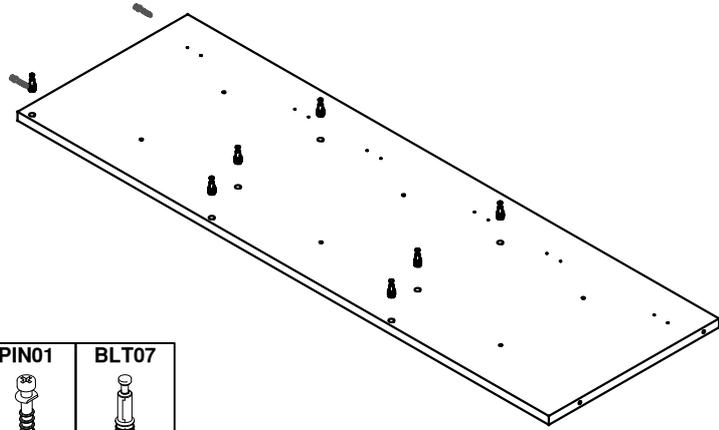



3

**Step 3**  
Insert cams into the pre drilled holes on the shelf panels. Repeat for all 6 shelves.

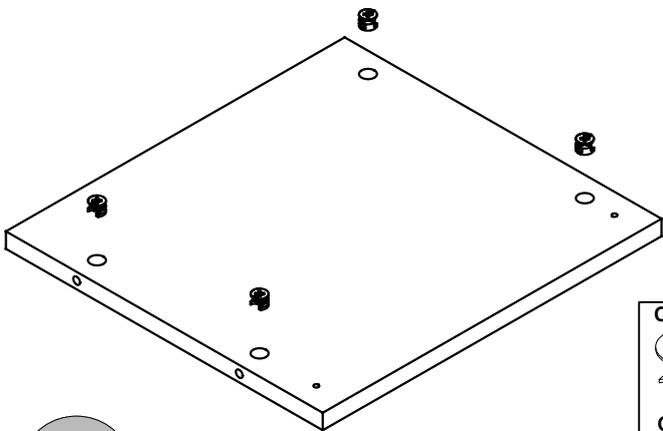



4

**Step 4**  
Insert cams & pins into the pre drilled holes on the back panel.

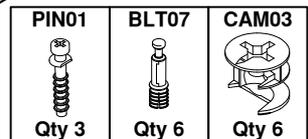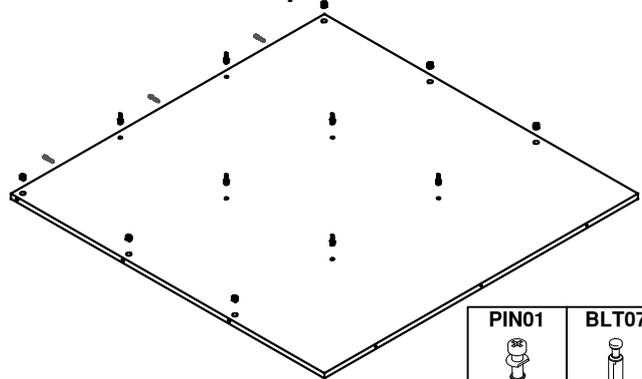

5


**Step 5**  
Insert the cam and pin fittings first before turning the partition panel over to insert the remaining pins. Repeat for both partitions.

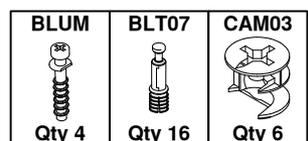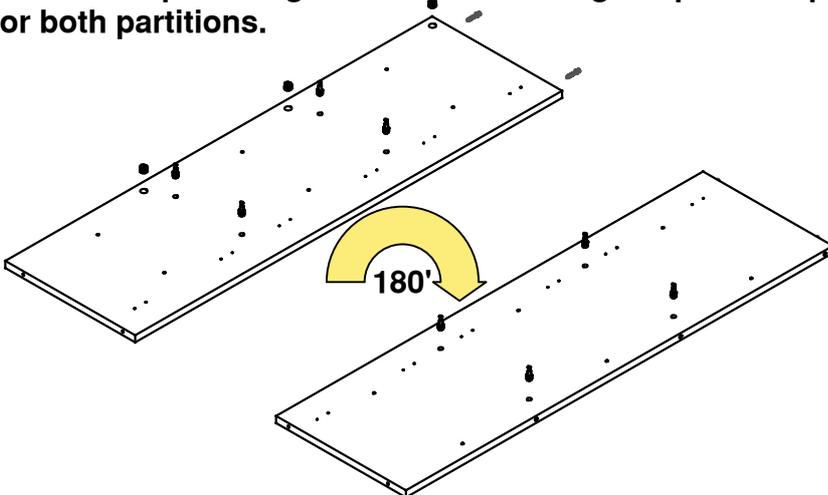

6

**Step 6**  
Attach the two shelves to partition.


Once the cams and pins are engaged ensure that the cams are fully tightened.

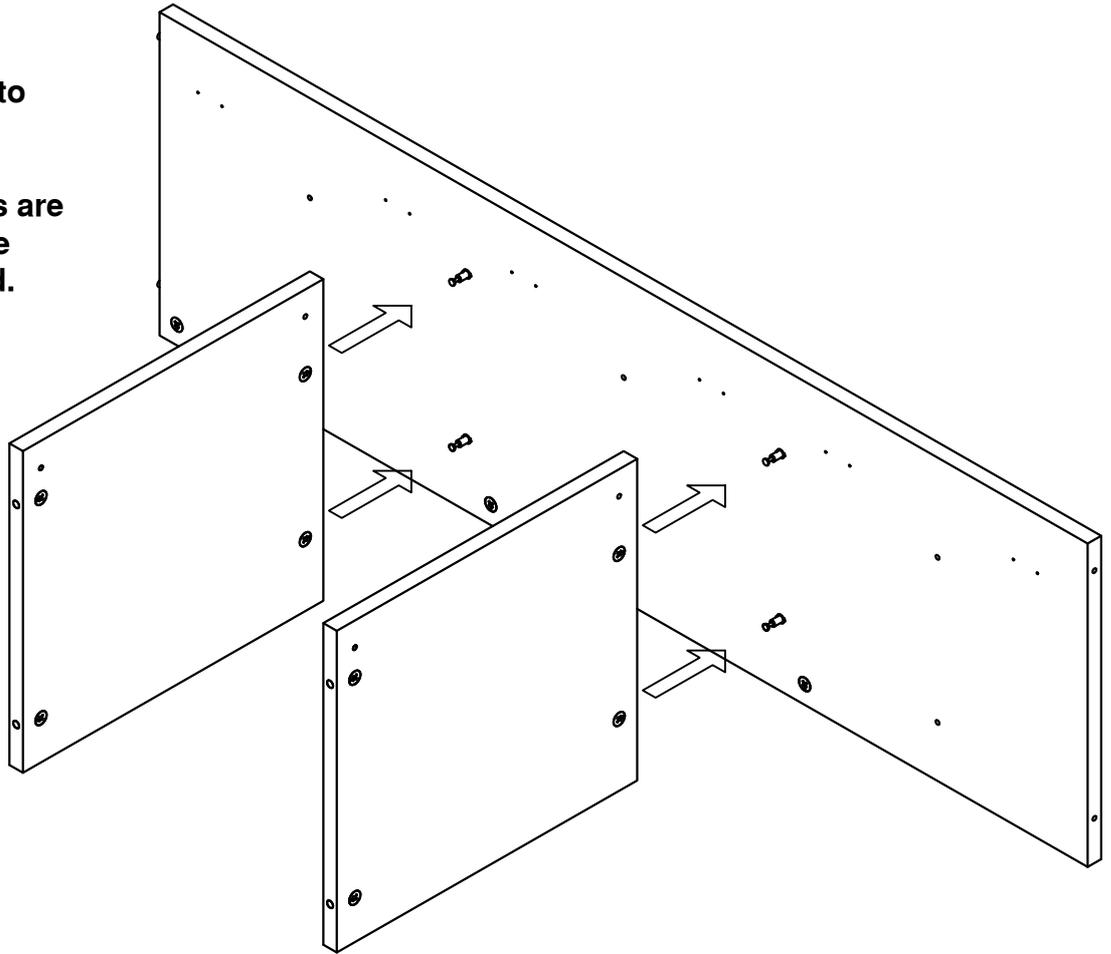

7


**Step 7**  
Attach other partition to shelves

Once the cams and pins are engaged ensure that the cams are fully tightened.

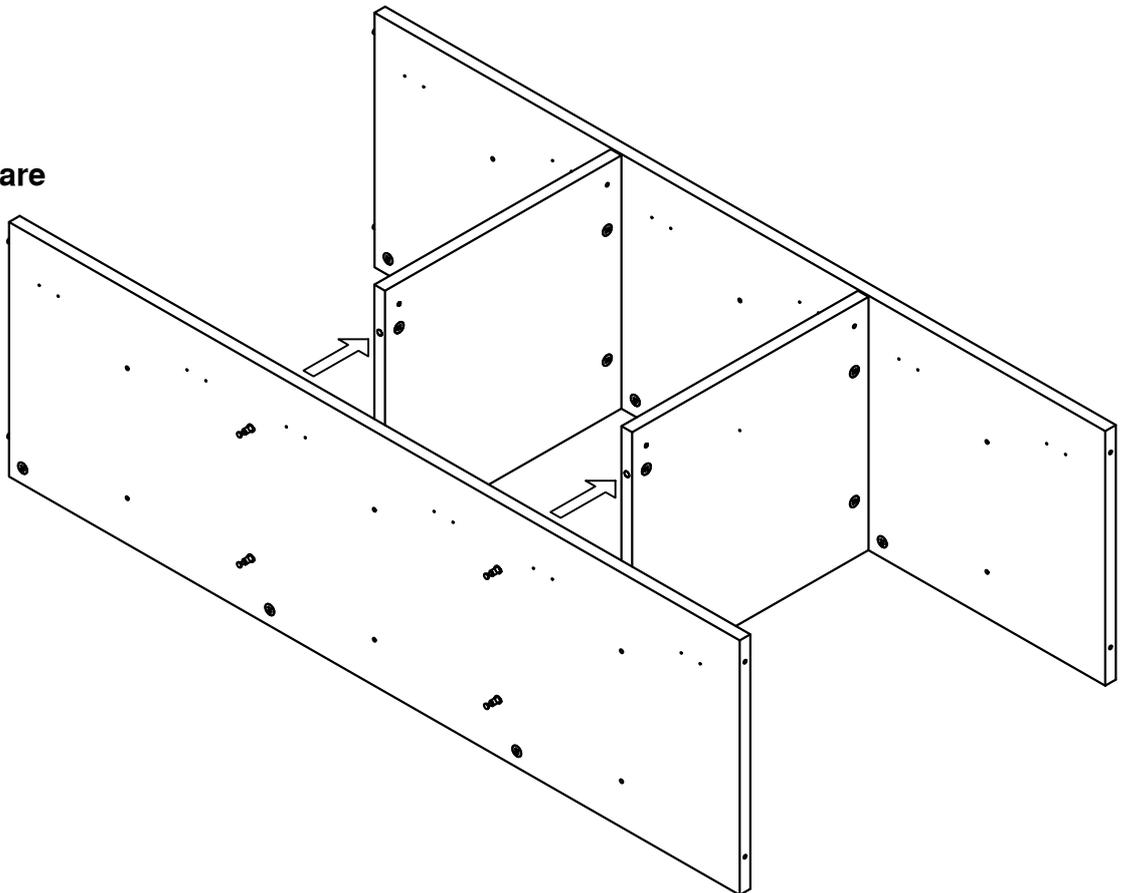


**Step 8**  
Attach the partitions to back panel.

Once the cams and pins are engaged ensure that the cams are fully tightened.

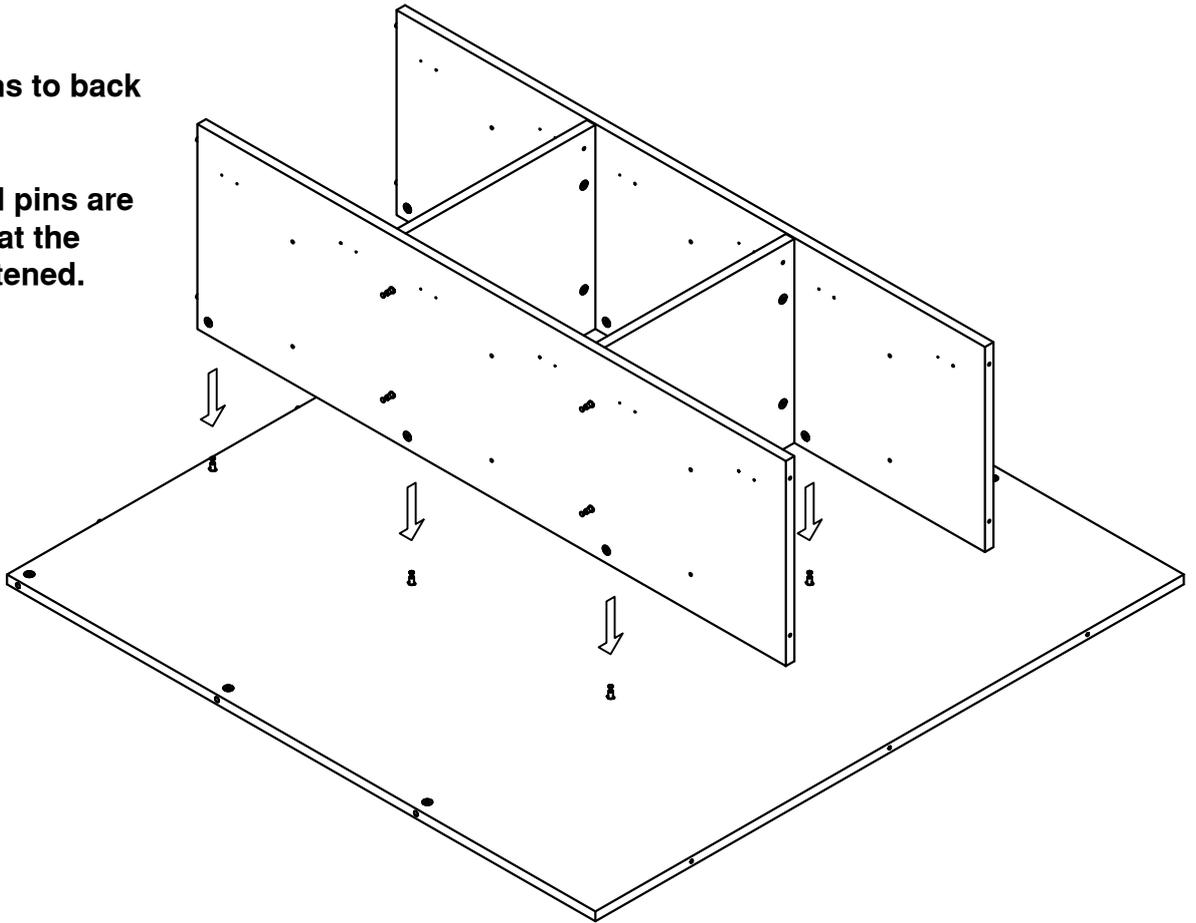

**Step 9**  
Attach shelves to either side of partitions.


Once the cams and pins are engaged ensure that the cams are fully tightened.

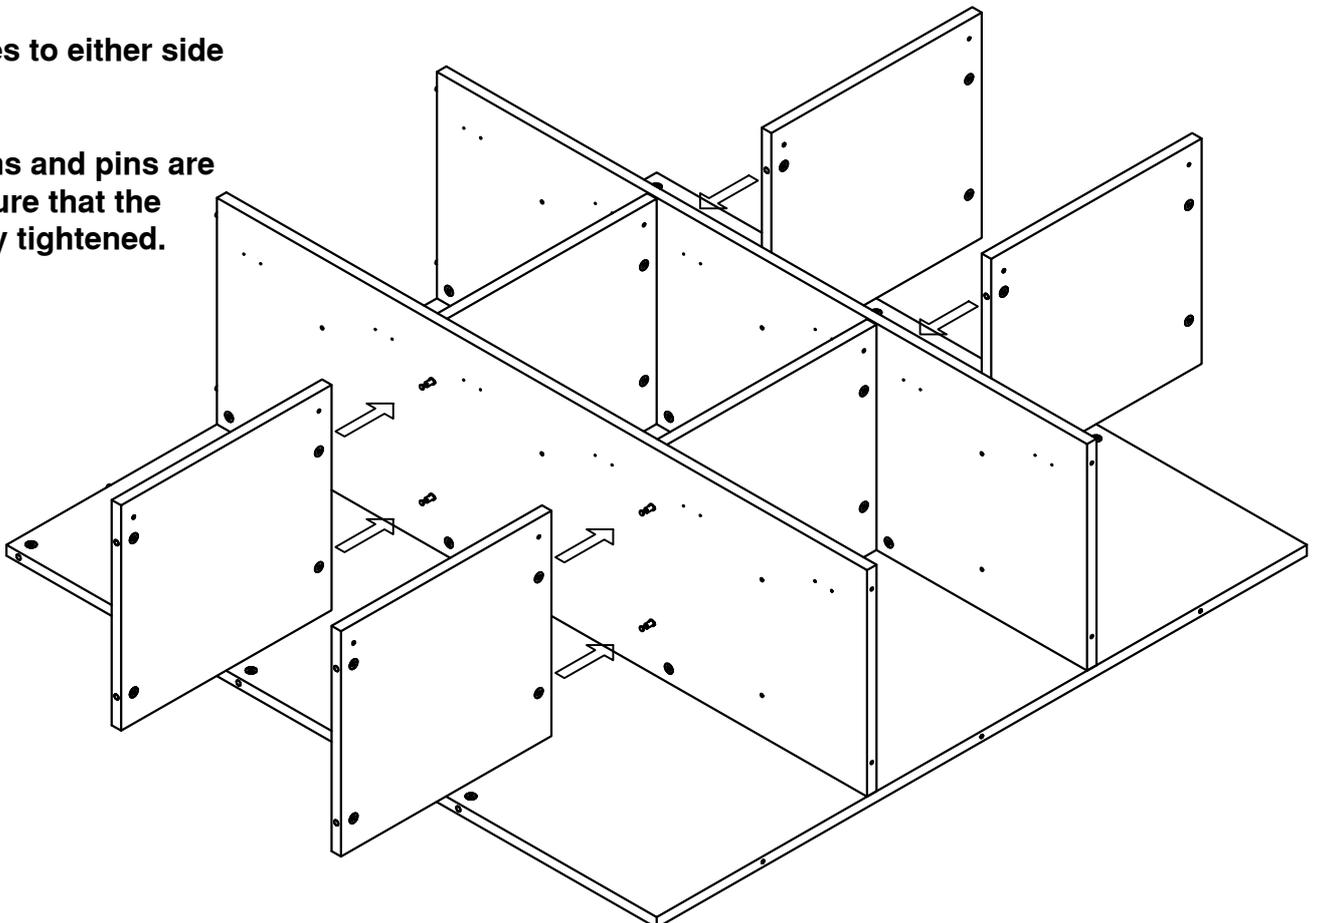

10

**Step 10**  
**Attach the LH & RH sides.**


Once the cams and pins are engaged ensure that the cams are fully tightened.

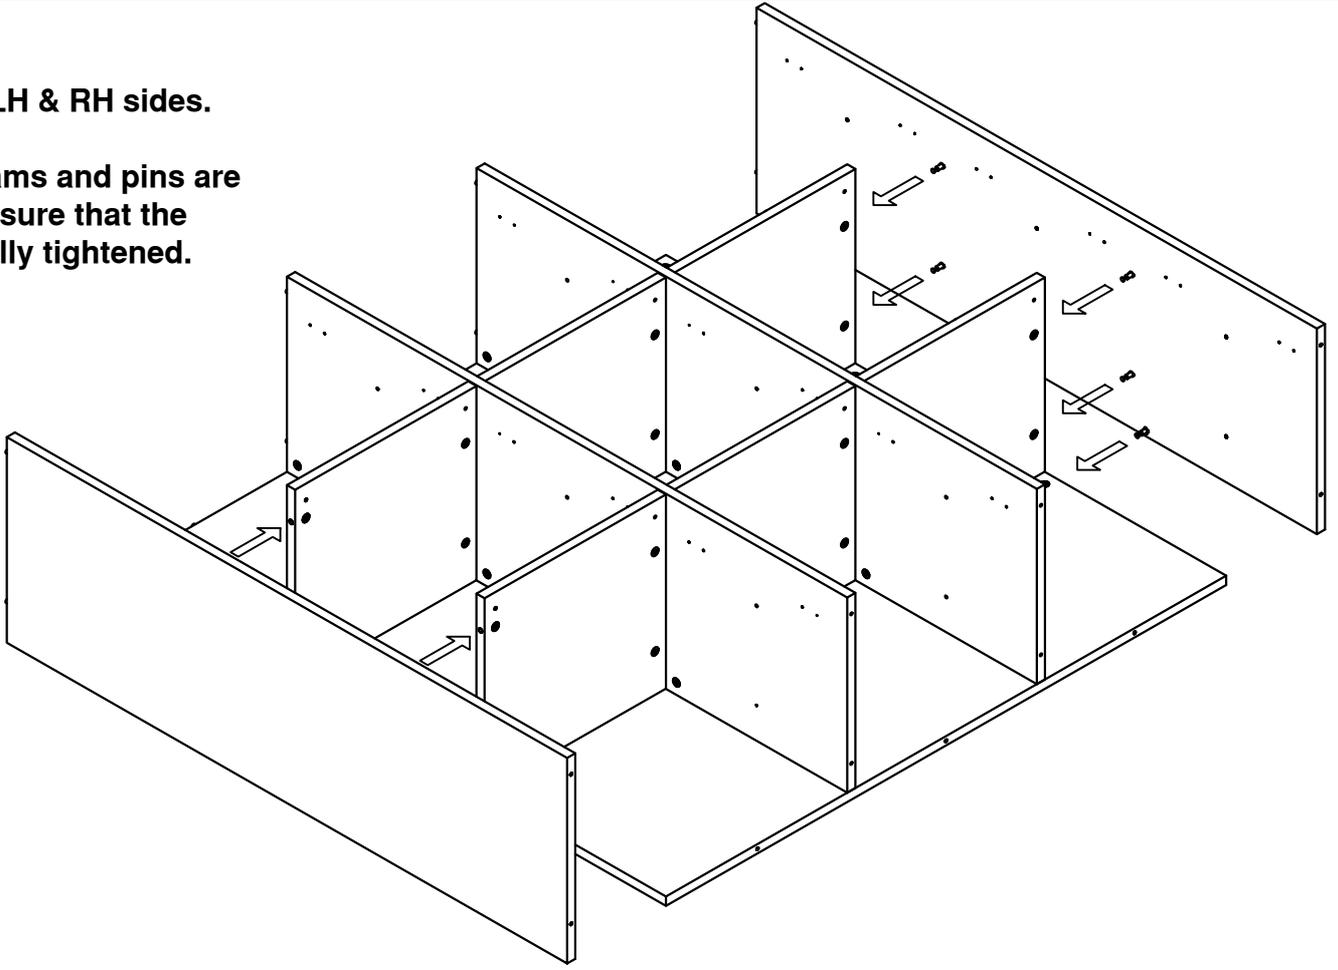

11

**Step 11**  
**Attach the top to the unit.**

Once the cams and pins are engaged ensure that the cams are fully tightened.

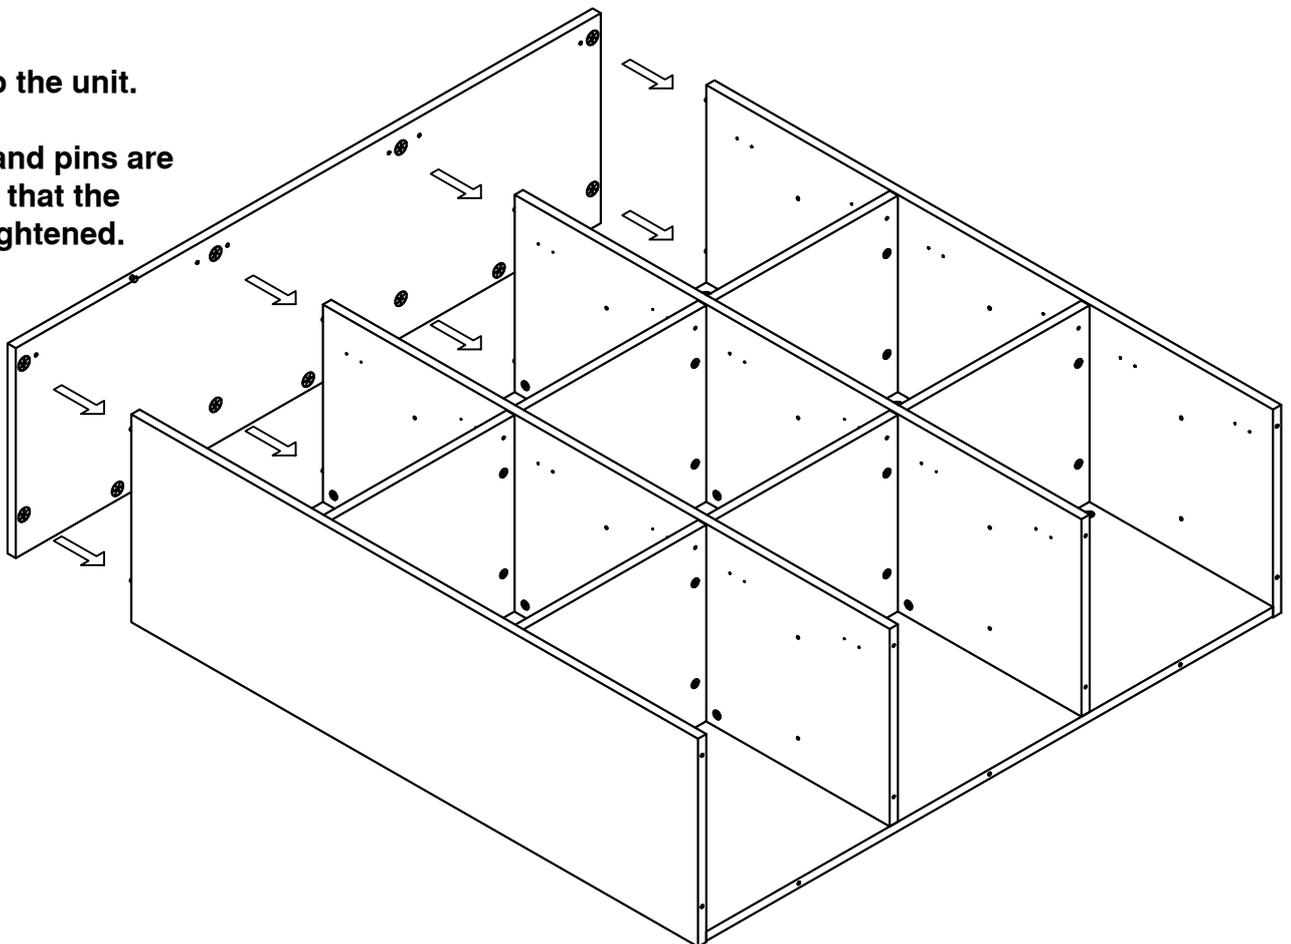


# 12


**Step 12**  
Attach the base to the unit using the confirmat screws provided.

A 4mm Allen key is required to insert the screws.

Ensure they are fully screwed in before attempting to attach the adjustable feet.

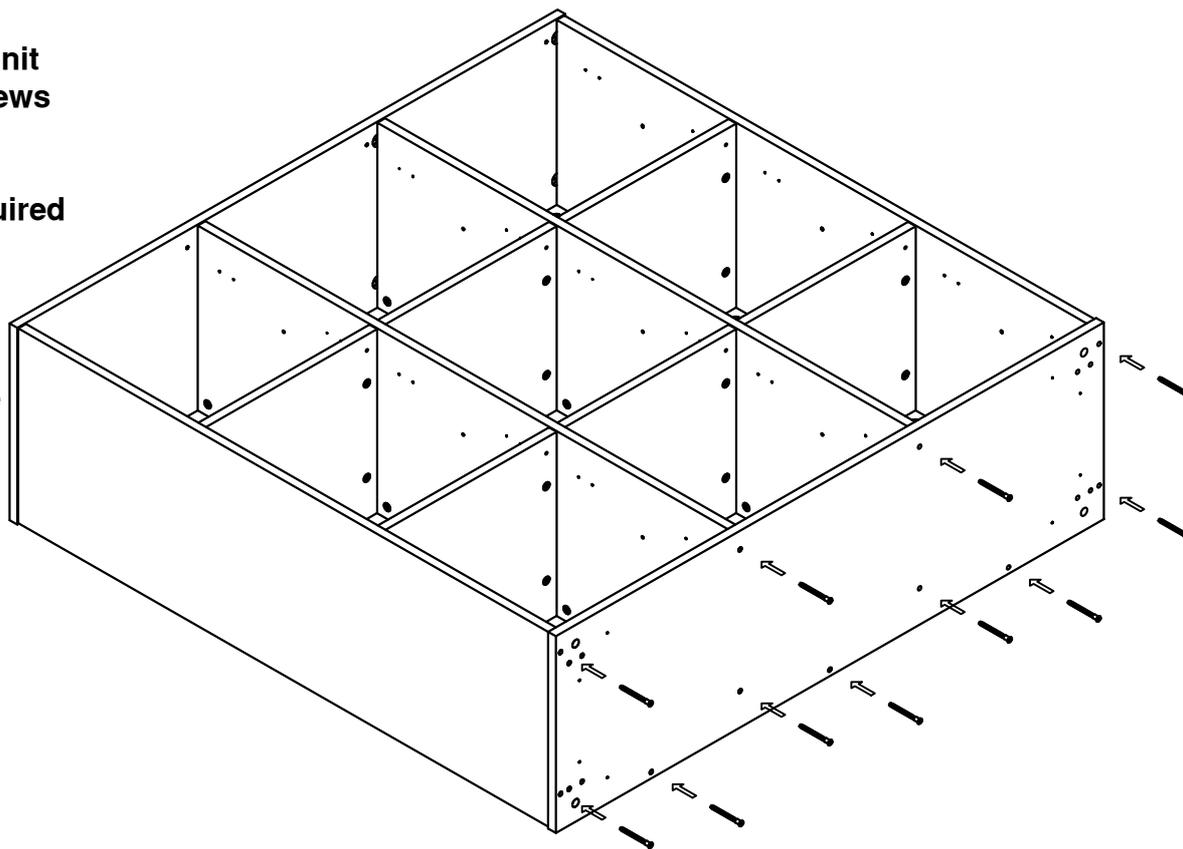

QUANTITY - 11

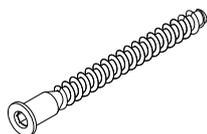


70mm CONFIRMAT SCREW  
RM-CFM02

# 13

**Step 13**  
Attach the 4 adjustable feet inner housings to the base of the unit.

Each foot should be attached using 2 of the 3.5x15mm wood screws provided.

Once attached screw on the adjustable foot outer housing.

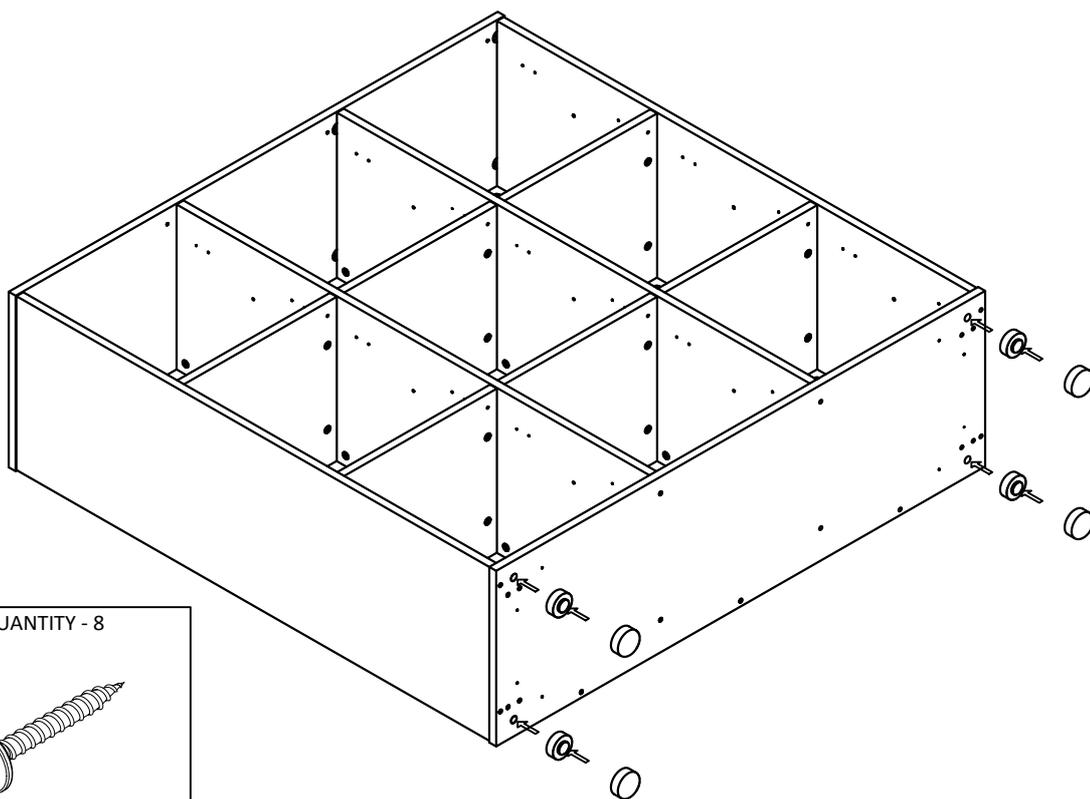

QUANTITY - 4





50mm ADJUSTABLE FOOT


QUANTITY - 8



3.5 x 15mm WOOD SCREW  
RM-SCR26

**Step 14**  
**Stand the unit upright and**  
**position in your desired**  
**location.**

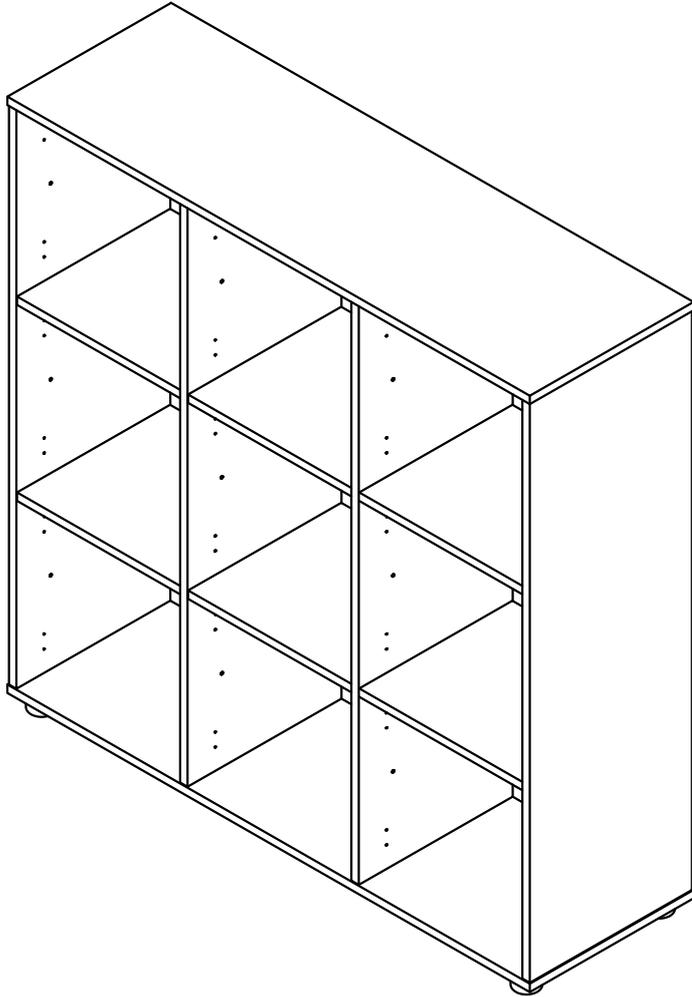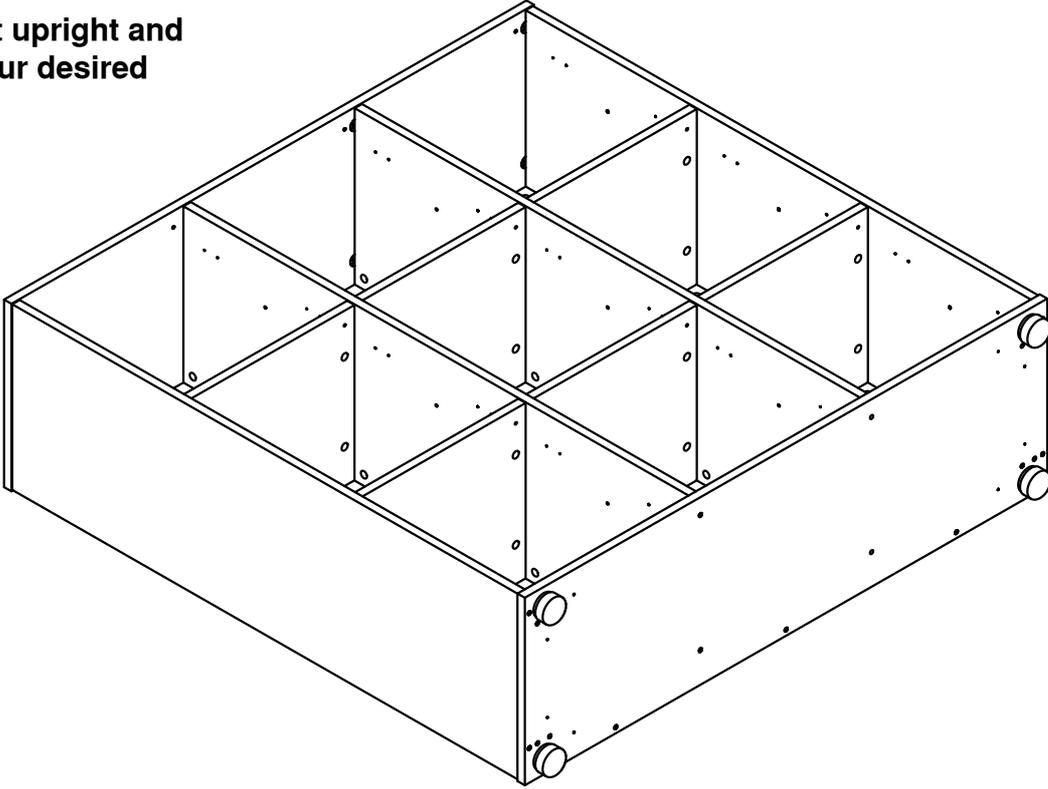

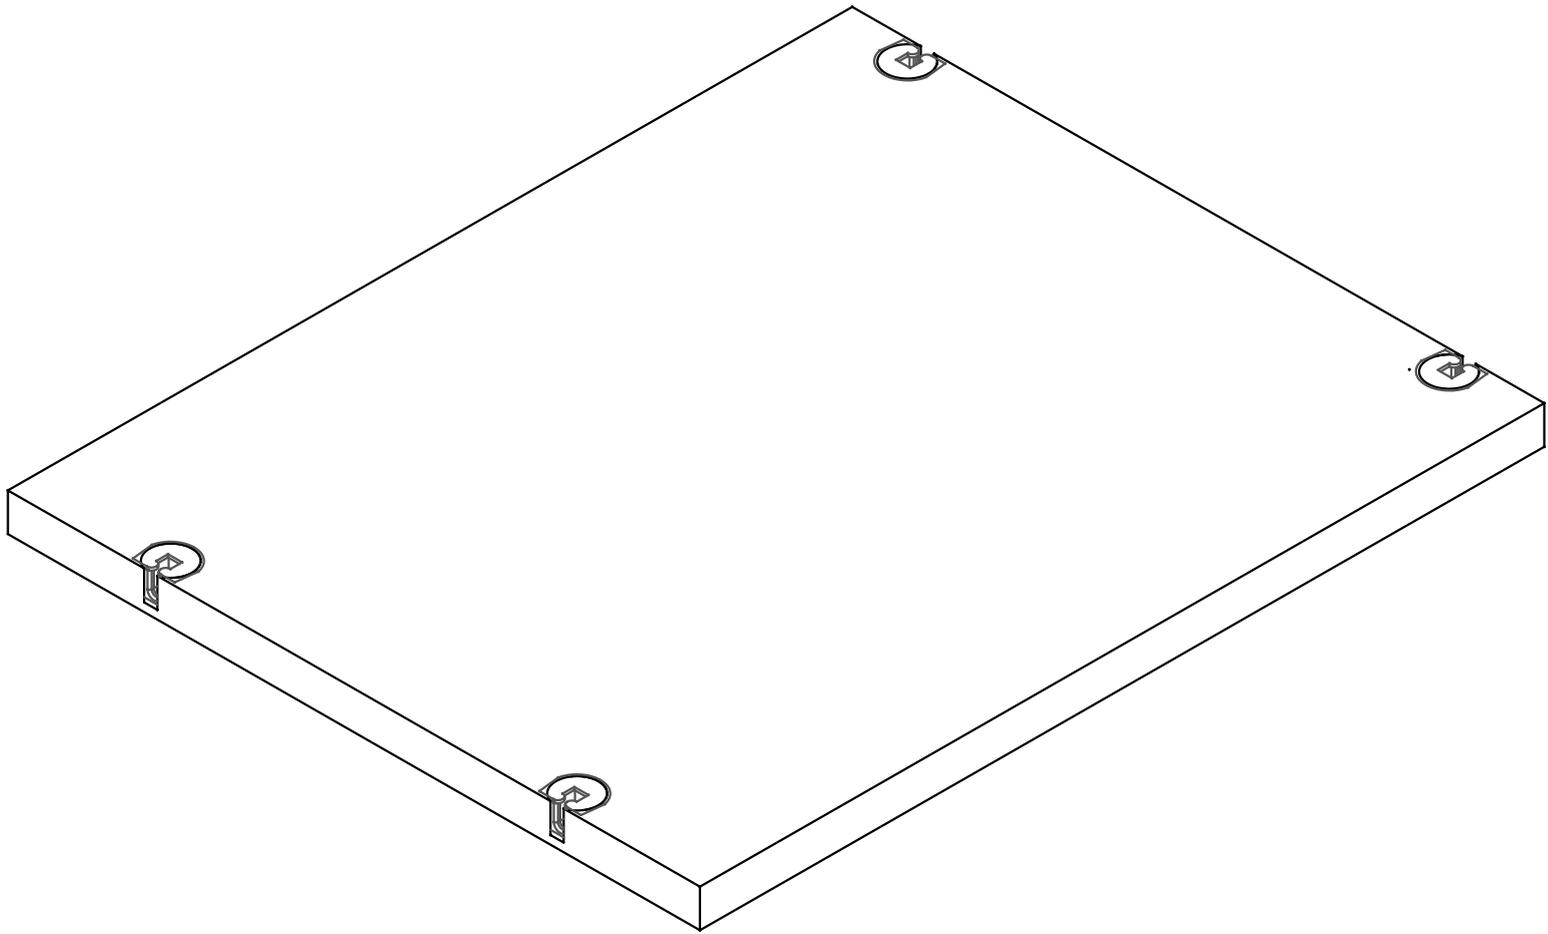




# Please check that you have all components



QUANTITY - 4

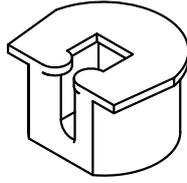

EXPANDING WEDGEFIX SY3151

QUANTITY - 4




QUICKFIX DOWELS SY3152

Prepare all the panels by inserting the listed fittings into the corresponding holes.


1

**Step 1**  
Insert shelf fittings into the pre drilled holes on the shelf panel.

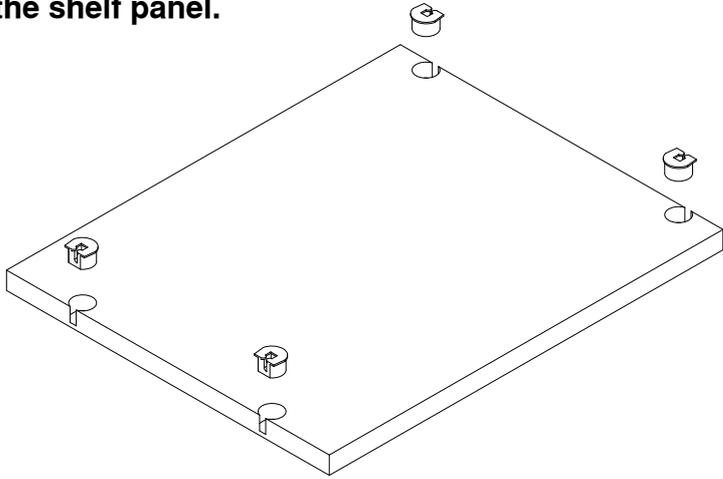



2



**Step 2**  
Screw shelf fitting into the pre drilled holes on the RH and LH side panels.

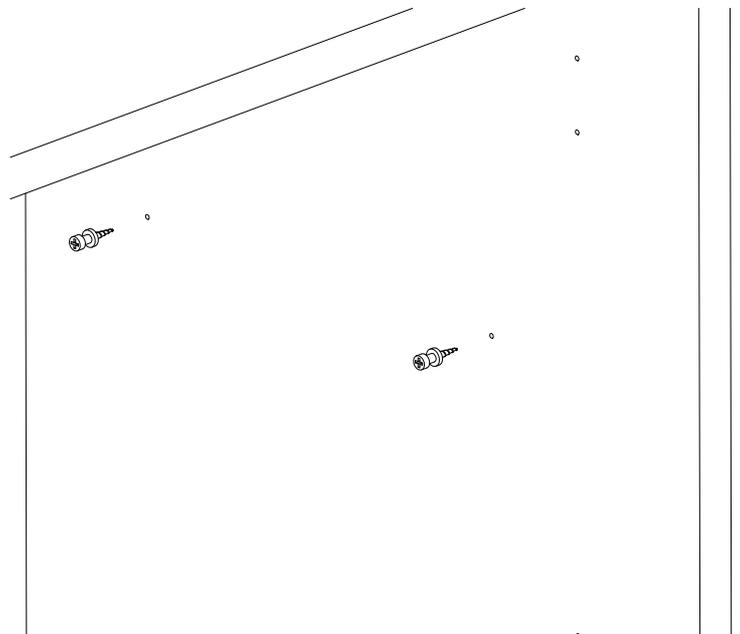

3


**Step 3**  
Insert shelf panel in the section to have shelf & drop onto pins making sure they are fully engaged.

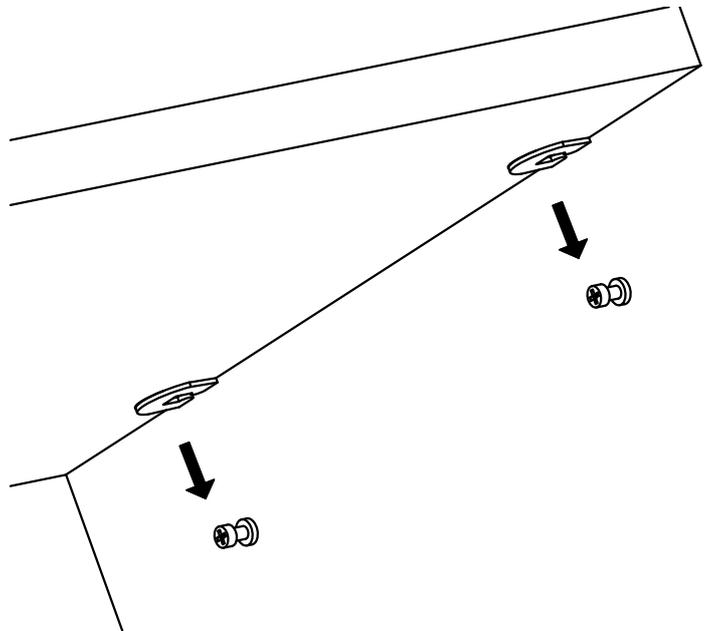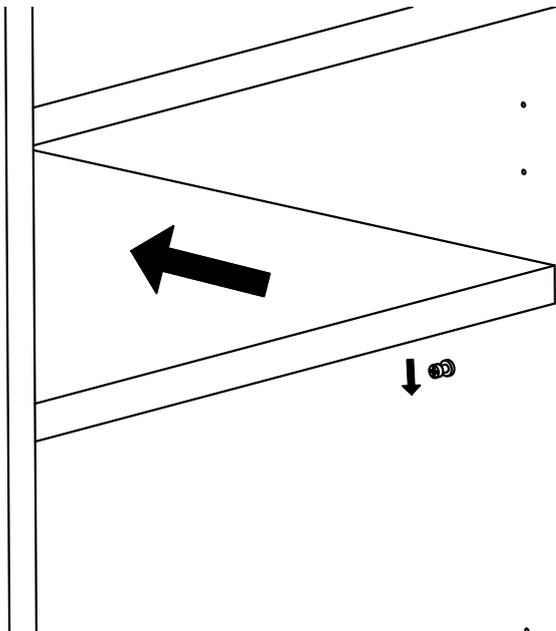

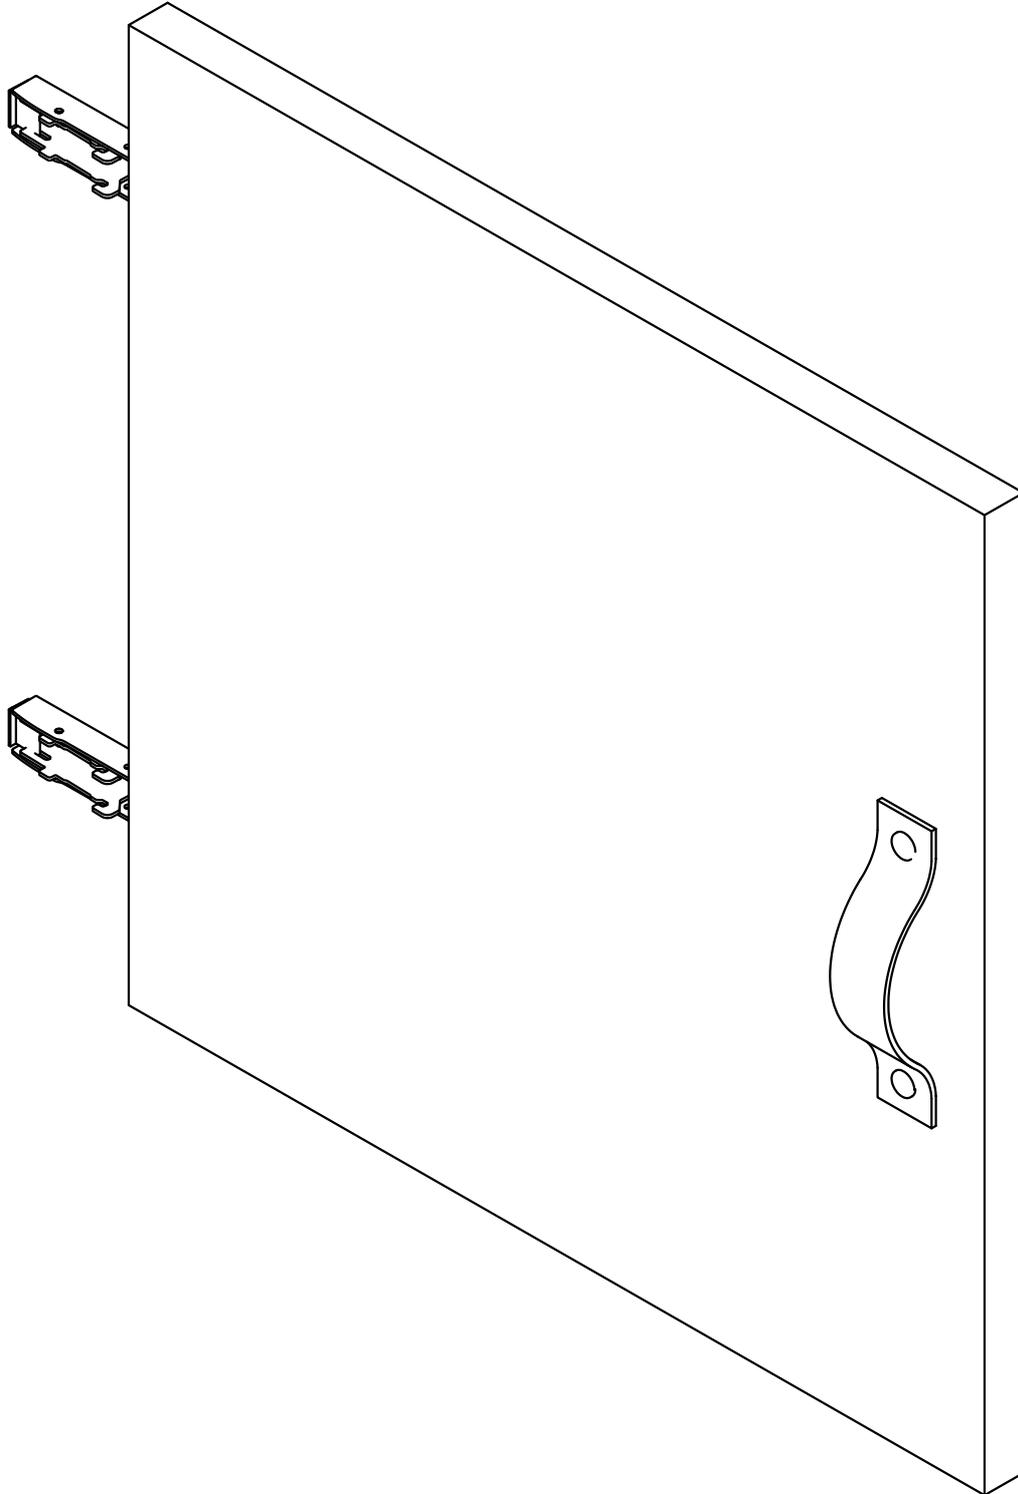



Please check that you have all the panels!

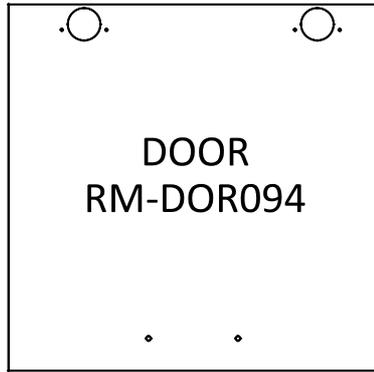

Please check that you have all the hardware!




QUANTITY - 2




M4 x 6mm SLOTTED SCREW  
RM-SCR27

QUANTITY - 2

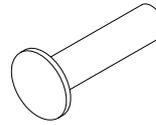


M4 x 20mm BOOK SCREW  
RM-SCR28

QUANTITY - 4

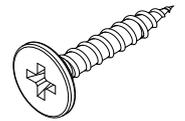


3.5 x 15mm WOOD SCREW  
RM-SCR26

QUANTITY - 1

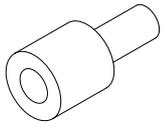


5mm Door Stop Peg

QUANTITY - 2

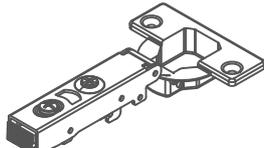


110' CLIP ON - SOFT CLOSE

QUANTITY - 2



CLIP ON HINGE PLATE

QUANTITY - 1

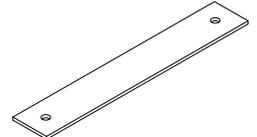





LEATHER STRAP HANDLE  
RM-HDL18

1

2

**Step 1**  
Place the hinges into the pre drilled holes on the inside face of the door panel.


**Step 2**  
Attach the hinges using the 3.5 x 15mm wood screws, 2 screws per hinge.

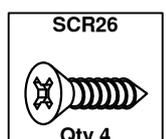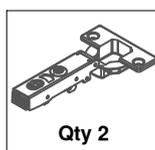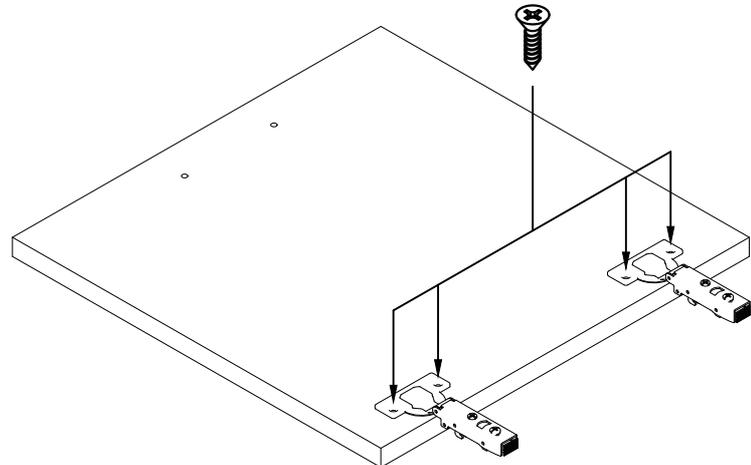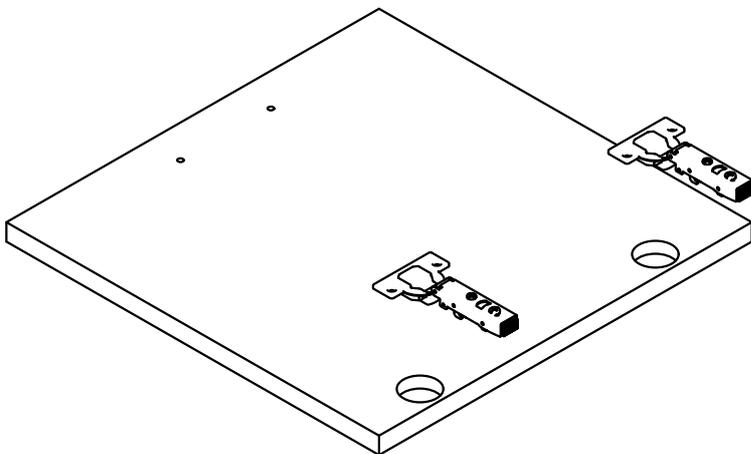

3

**Step 3**  
Attach leather handle to door using binding screws provided.

Slotted part of screw to the inside of door.

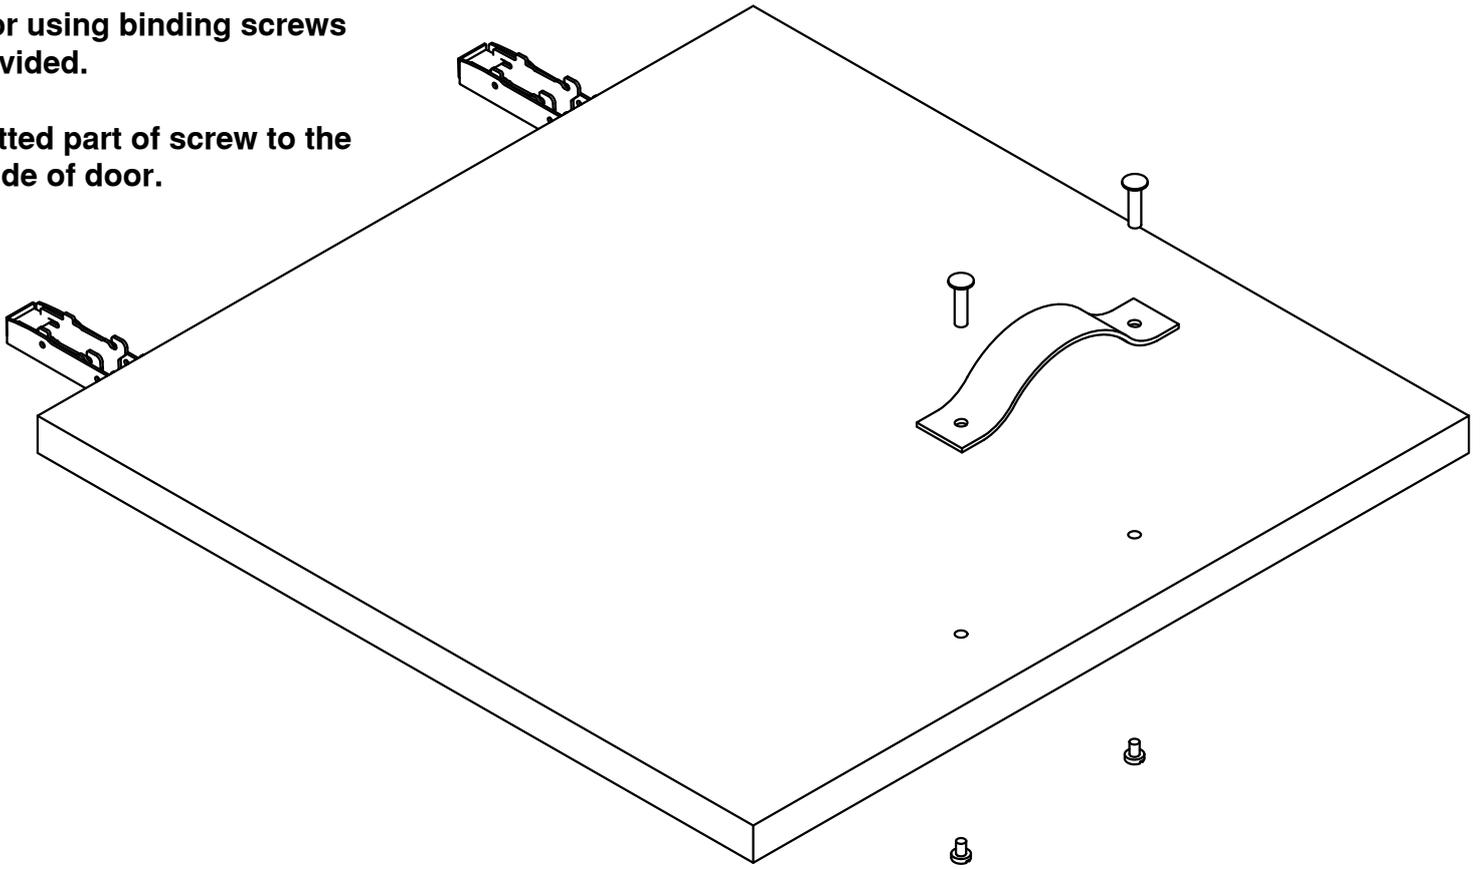

4

**Step 4**  
Attach the hinge plates to the pre drilled holes on the inside face of the bookcase side panels, these plates are fitted with pre attached screws.

Ensure the plate is fitted as per diagram 1.



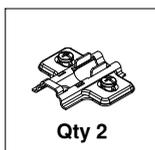



Diagram 1

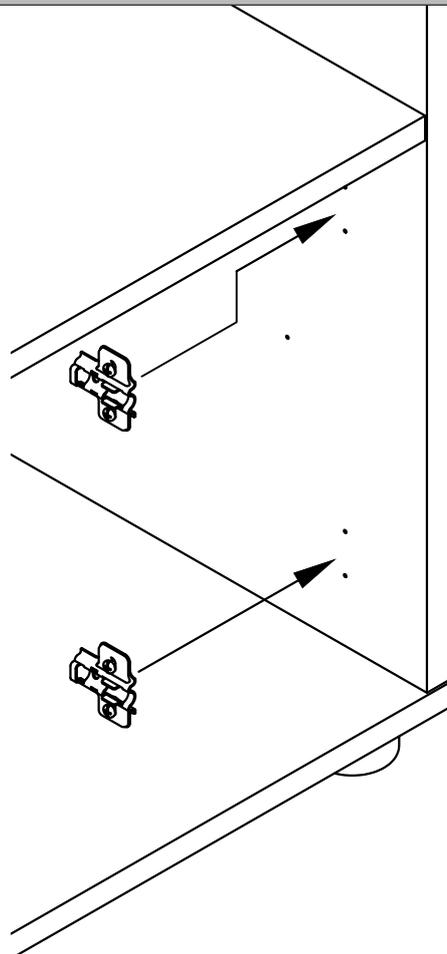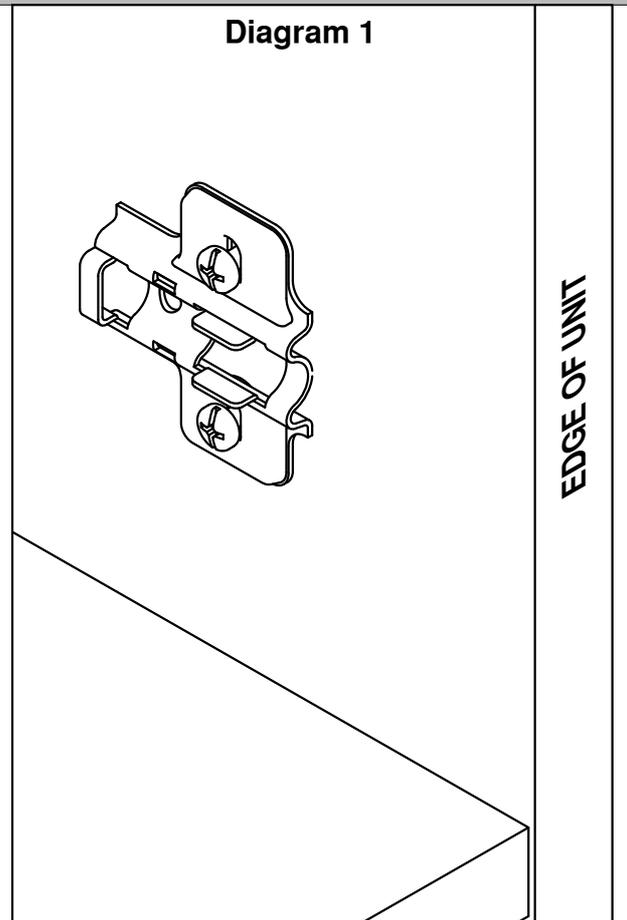


**Step 5**

Attach door to the unit. Diagrams 2 & 3 show how to lock the hinge to the plate. Always lock the top hinge into place first before repeating for bottom hinge.

Once the door is attached insert the door stop peg to prevent the door from closing in too far.

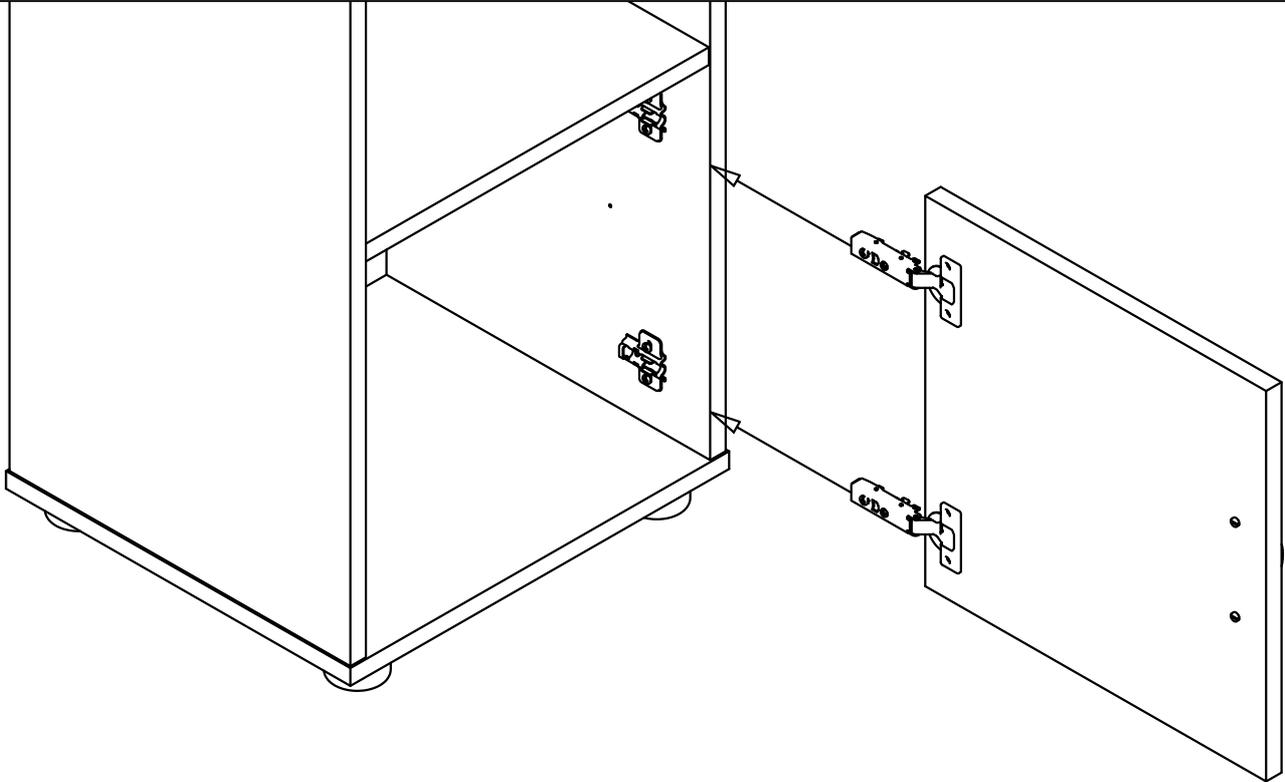


Ensure the hook of the hinge locates into the hinge plate.

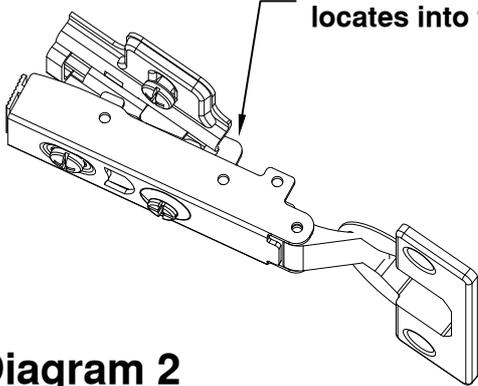



**Diagram 2**

Fasten the hinge to the plate by applying pressure here.

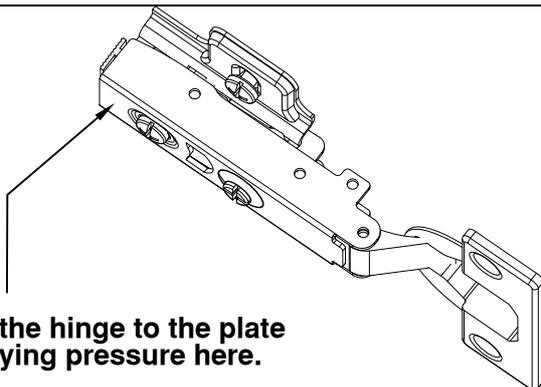


**Diagram 3**

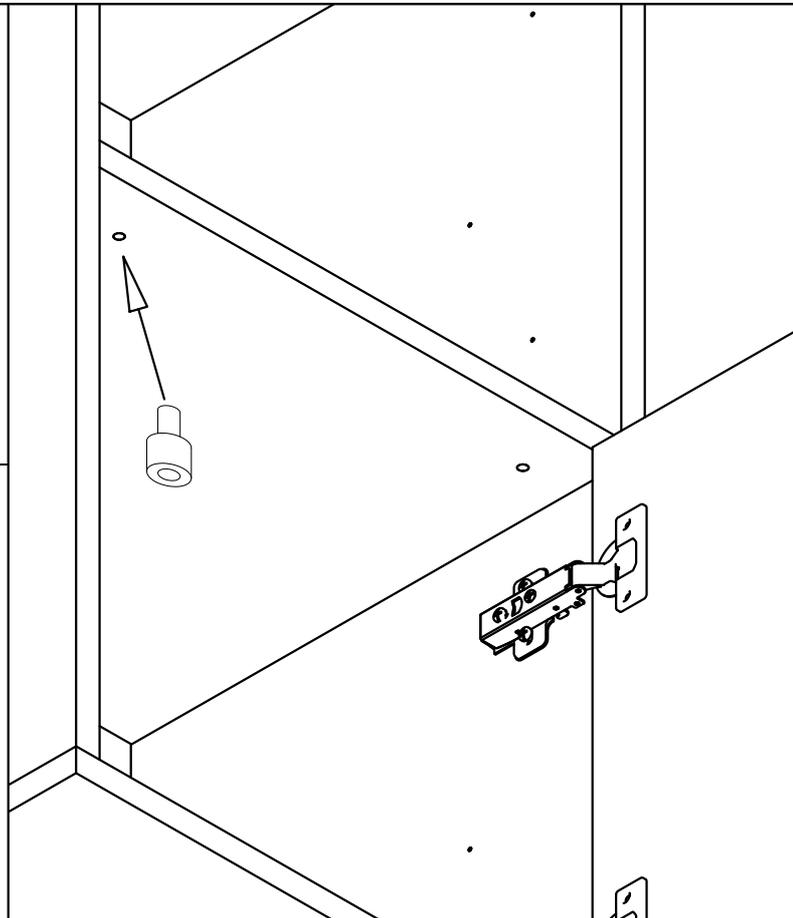

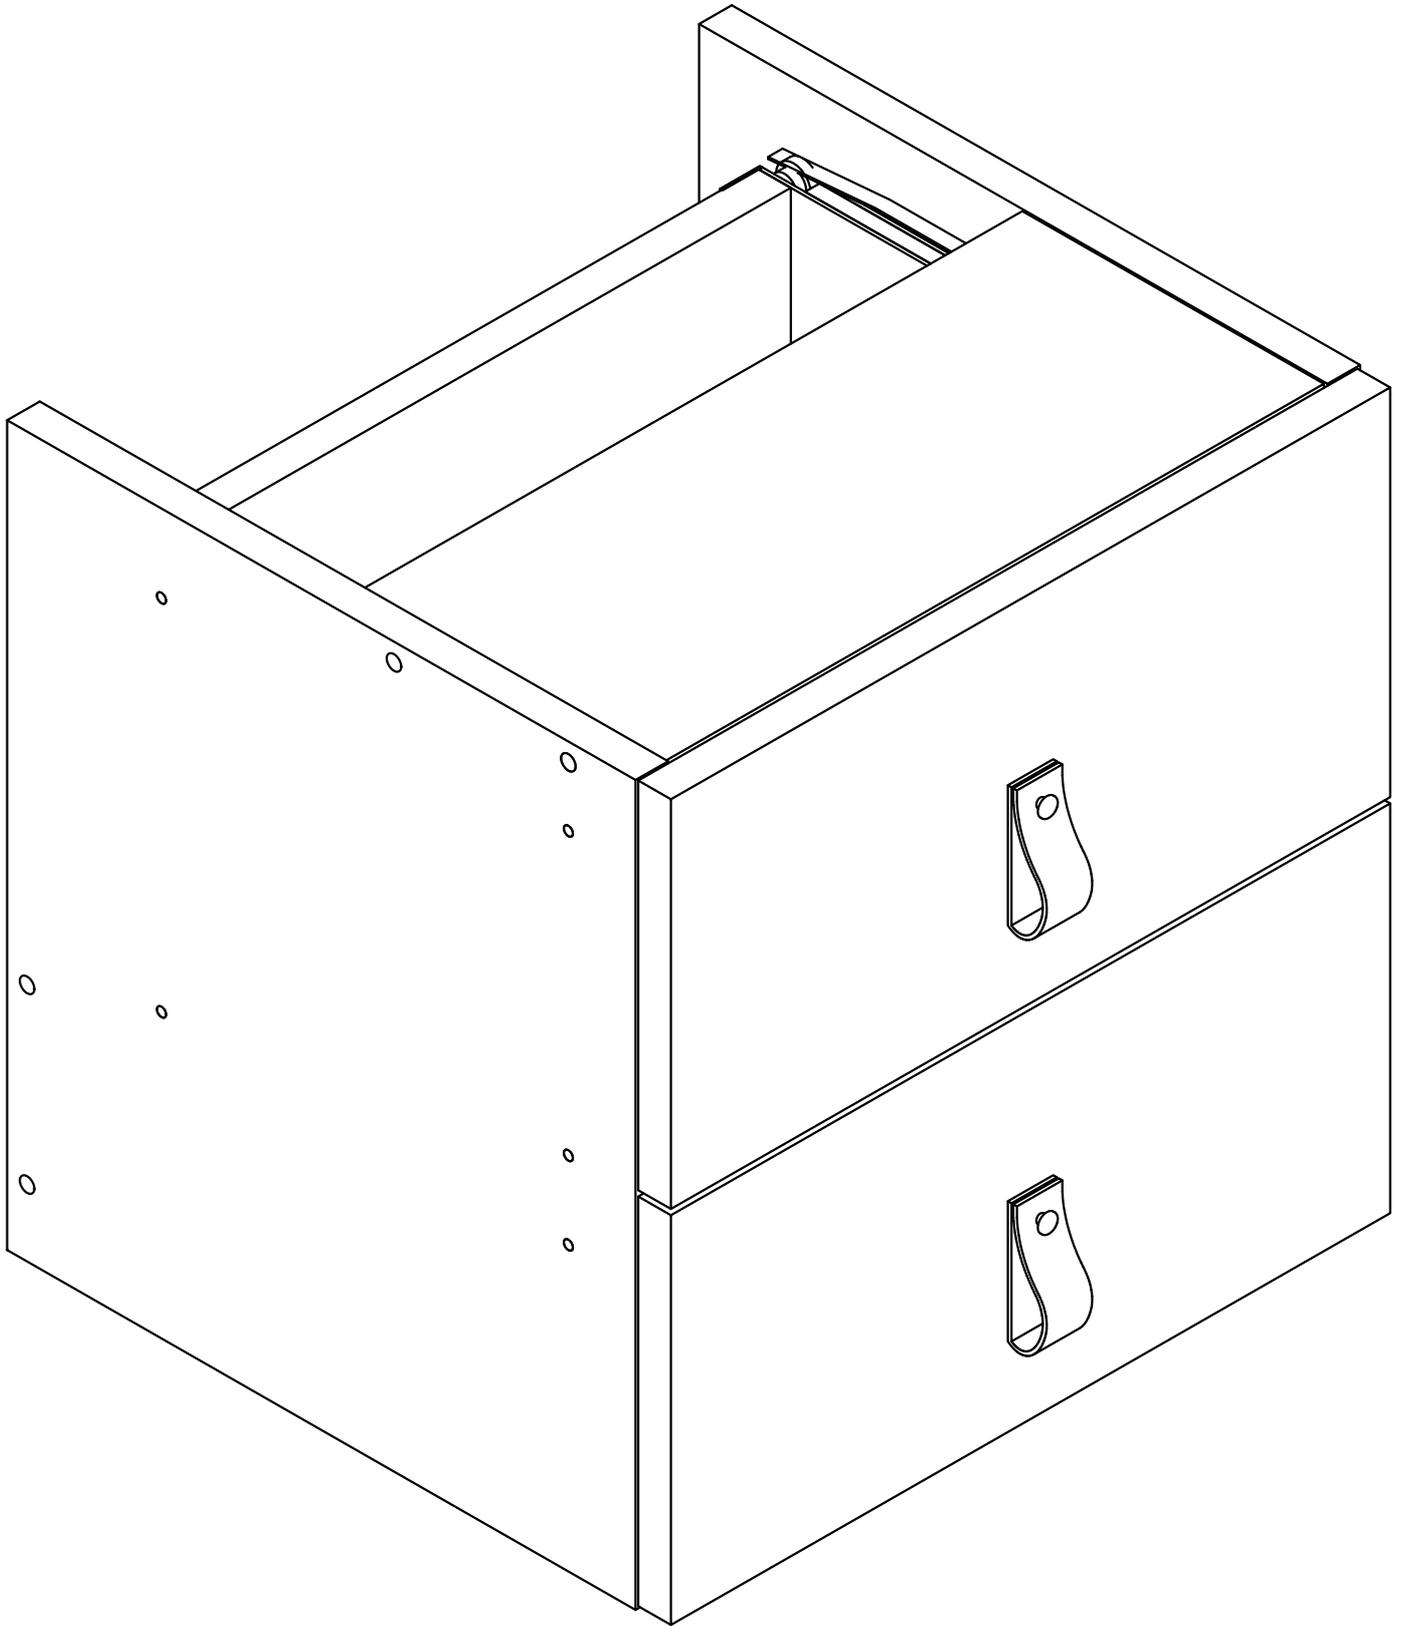




# Please check that you have all the components

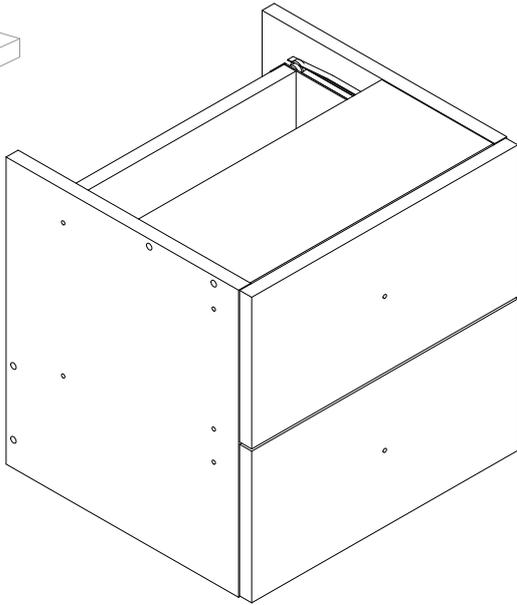


QUANTITY - 2




8 x 1 1/4 WOOD SCREW  
RM-SCR12

QUANTITY - 2

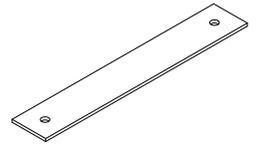

LEATHER STRAP HANDLE  
RM-HDL18

QUANTITY - 2

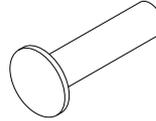

M4 x 20mm BOOK SCREW  
RM-SCR28


QUANTITY - 2



M4 x 6mm SLOTTED SCREW  
RM-SCR27


1

**Step 1**  
Remove the drawers from unit.

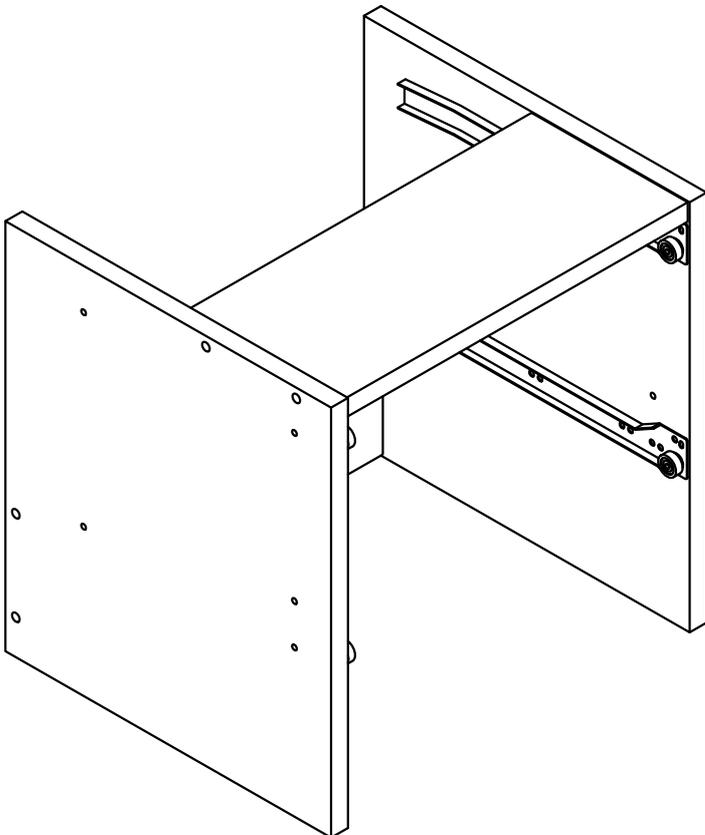

2

**Step 2**  
Insert cartridge into desired location and fix in place using wood screw into pre drilled holes both sides.

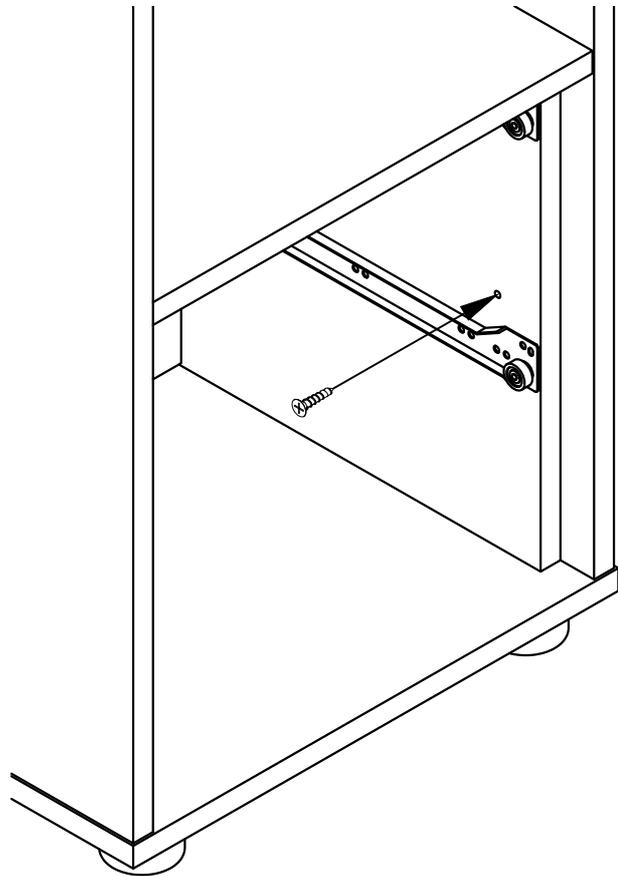

SCR12




Qty 2

3


**Step 3**  
Attach leather handle to drawers using binding screws provided.

Slotted part of screw to the inside of drawer.

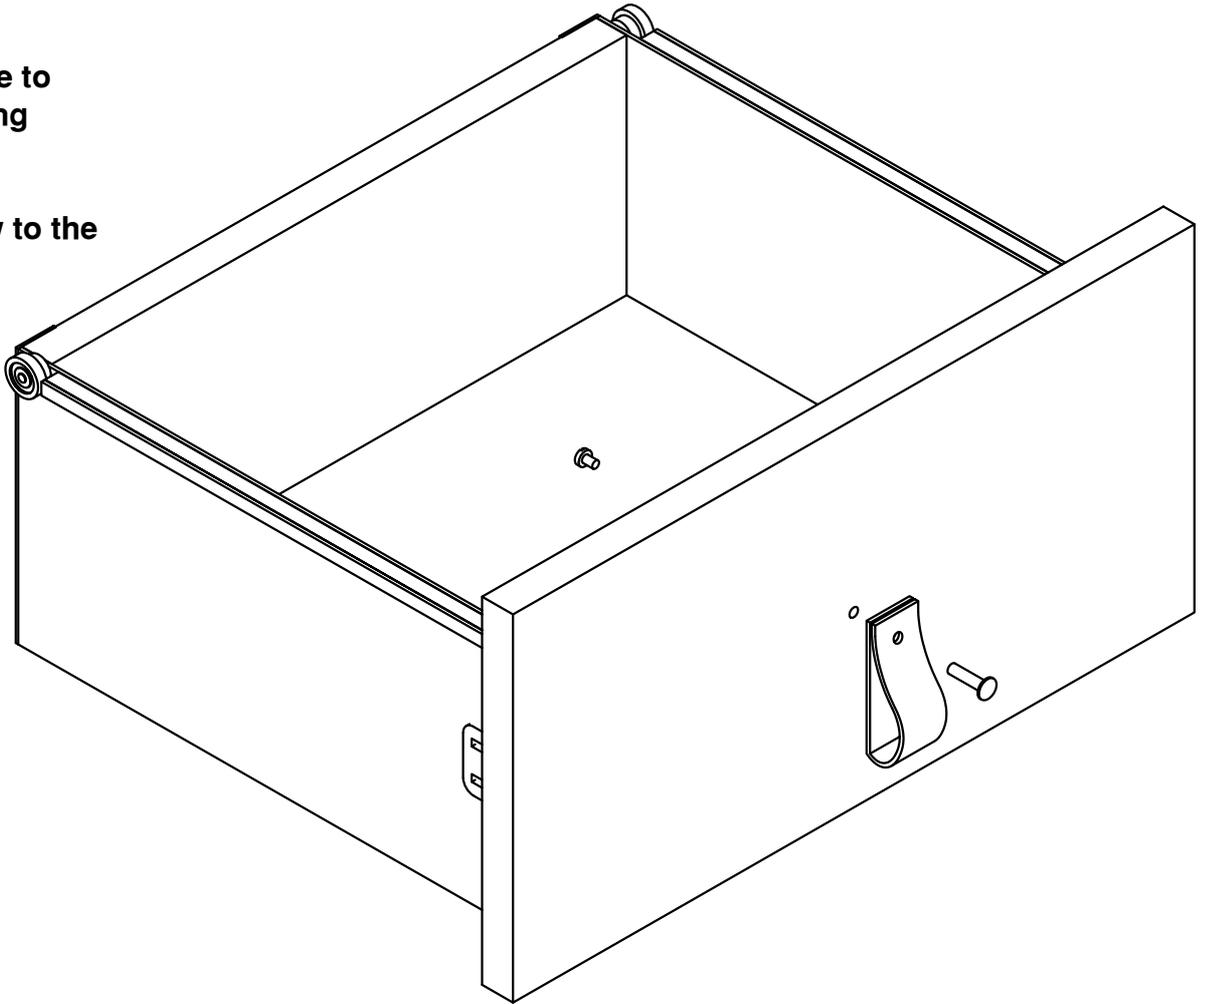


4

**Step 4**  
Insert both drawer boxes back into the cartridge unit.

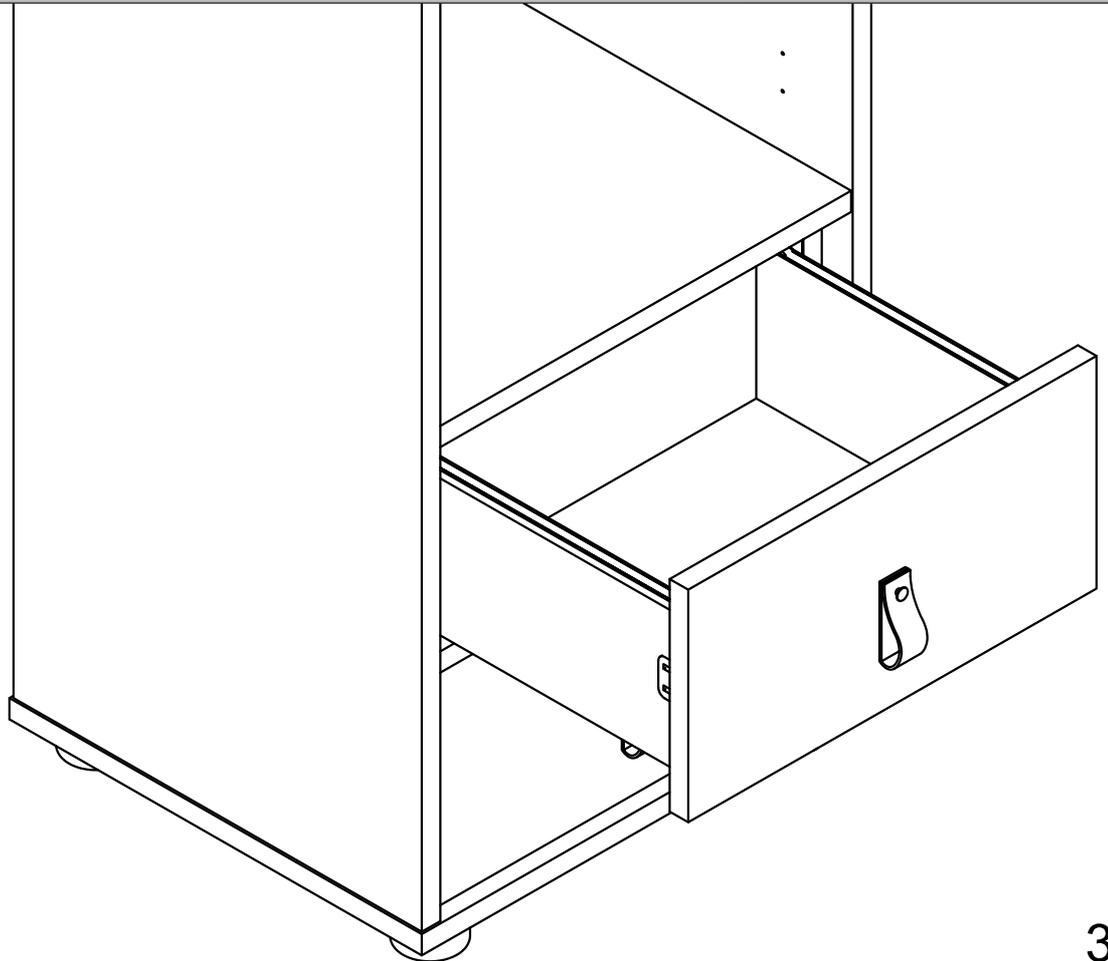

5

**Step 5**  
**Cartridge in position.**

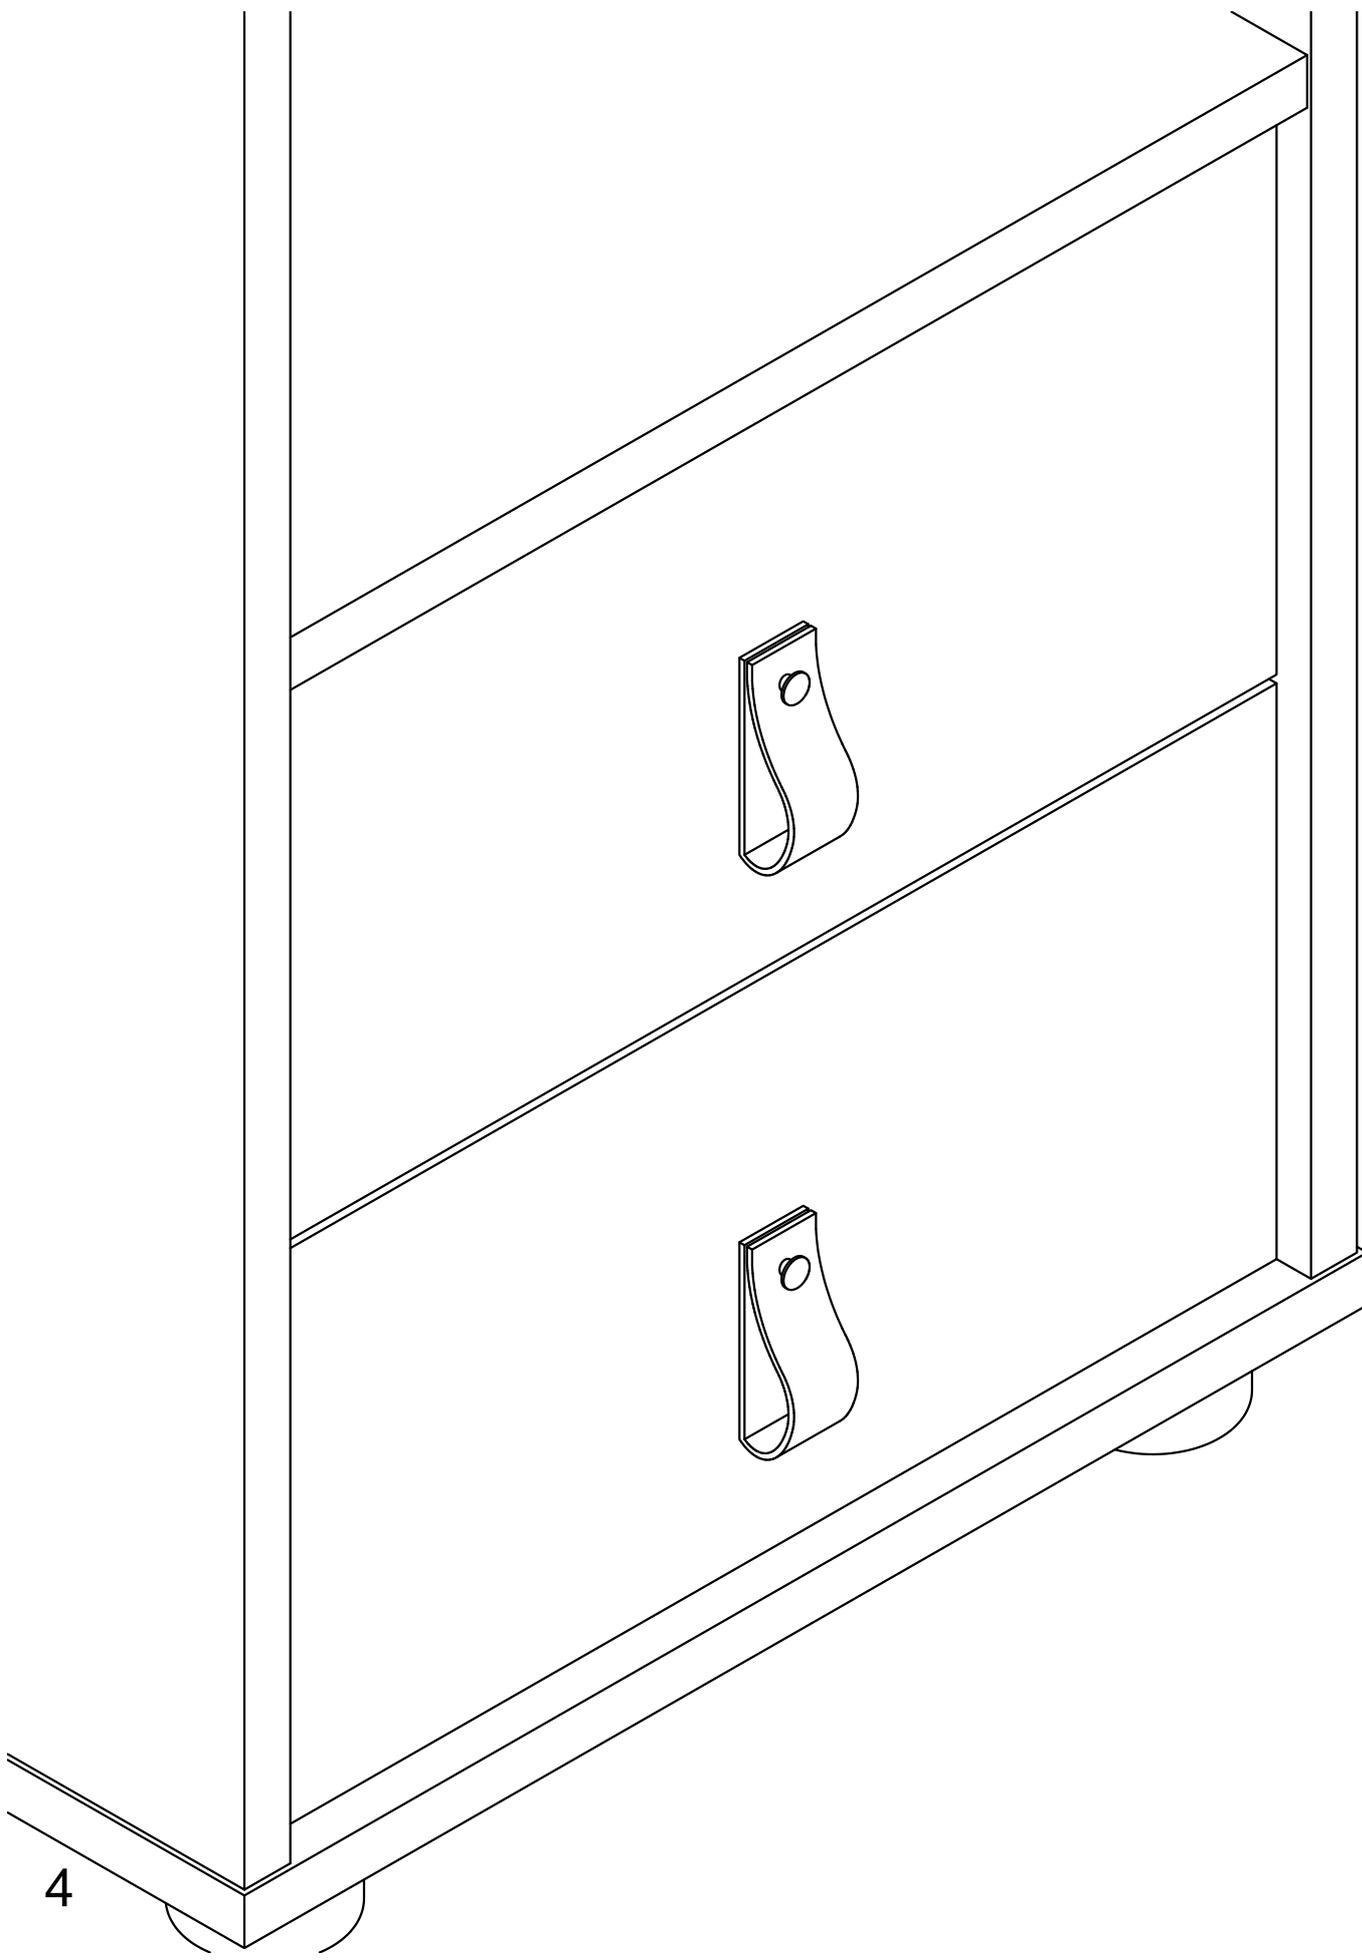

4