













# Madrid Without Arm ASSEMBLY INSTRUCTION

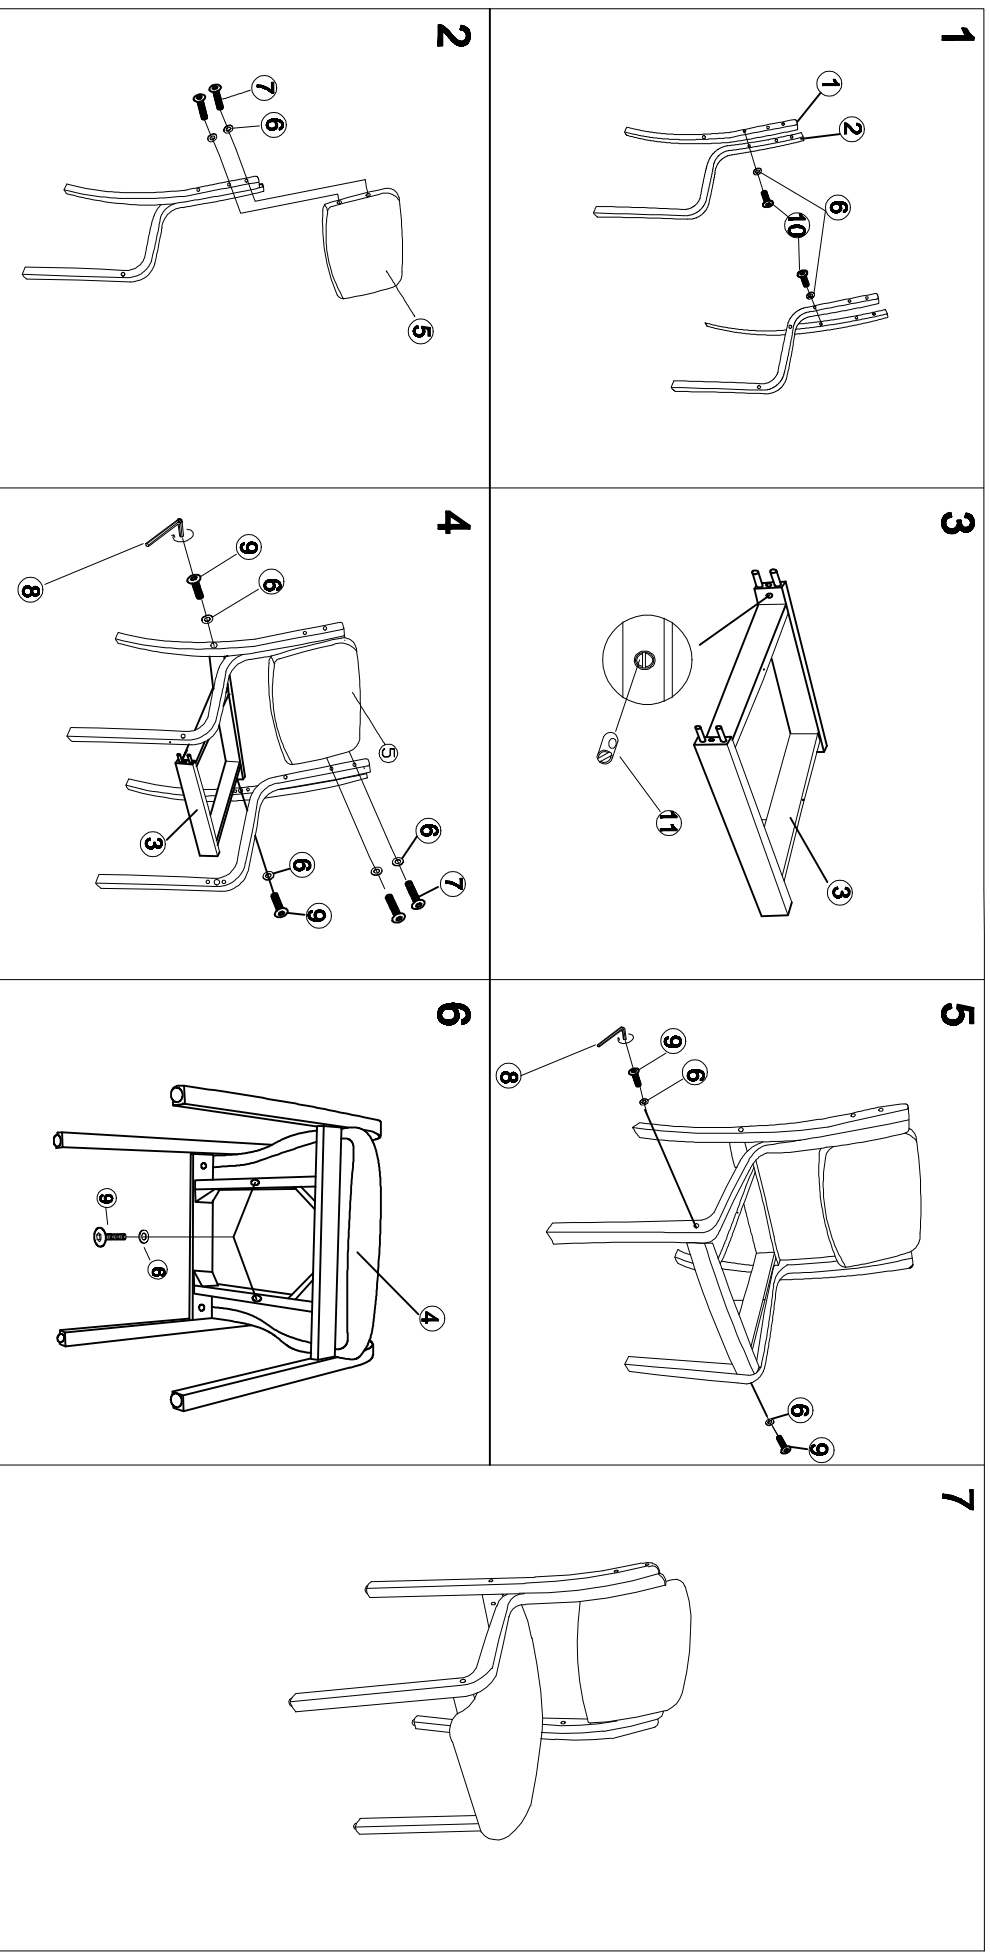

<p><b>1</b> BACK HOSE</p> 	<p><b>2</b> FRONT HOSE</p> 	<p><b>3</b> SEAT RIB</p> 	<p><b>4</b> BACK CUSHION</p> 	<p><b>5</b> SEAT CUSHION</p> 	<p><b>6</b> WASHER  <math>\phi 13 \times \phi 6.5 \times 1 \text{mm}</math></p> 	<p><b>7</b> SCREW  <b>M6-75</b></p> 	<p><b>8</b> ALLEN KEY  <b>M4</b></p> 	<p><b>9</b> SCREW  <b>M6-65</b></p> 	<p><b>10</b> SCREW  <b>M6-45</b></p> 	<p><b>11</b> NUT</p> 
<p><b>1</b> PAIR</p>	<p><b>1</b> PAIR</p>	<p><b>1</b> PC</p>	<p><b>1</b> PC</p>	<p><b>1</b> PC</p>	<p><b>1</b>PC</p>	<p><b>4</b>PCS</p>	<p><b>1</b> PC</p>	<p><b>6</b>PCS</p>	<p><b>2</b>PCS</p>	<p><b>4</b>PCS</p>

IMPORTANT NOTE - PLEASE ASSES ALL COMPONENTS PRIOR TO DISPOSAL OF PACKAGING AND ASSEMBLY OF CHAIR